

JLR-21/31

GPS COMPASS

**INSTRUCTION
MANUAL**



Japan Radio Co., Ltd.

Foreword

Thank you for purchasing the JRC GPS Compass JLR-21/31.
This unit uses signals from GPS satellites to determine the ship's heading.

- Thoroughly read this instruction manual before operating the equipment.
- Keep this manual nearby the equipment to allow ready access to it if necessary. It may provide valuable information on how to deal with a given situation that may arise during the operation.

Before Commencing the Operation

Symbols

Several symbols are used in this manual to ensure safety and proper operation of the equipment and to avoid possible human injury or property damage. These symbols and their meanings are shown below. Please read and understand these symbols before proceeding to read this manual.



WARNING

Instructions shown with this symbol represent what can cause death or serious injury if not observed.



CAUTION

Instructions shown with this symbol represent what may cause injury or property damage if not observed.

Examples of the Symbols



The symbols shown in the Δ mark represent those that require attention (including potential dangers and warnings).

A depiction of the type of caution is shown inside the symbol (the left symbol indicates a general caution).



The symbols shown in the \ominus mark represent actions which are prohibited. A depiction of the type of prohibited action is shown inside the symbol (the left symbol indicates that disassembly is prohibited).



The \bullet symbol indicates required actions. A depiction of the type of required action is shown inside the symbol (the left symbol indicates that the power plug must be disconnected from the outlet).

Precautions Upon the Operation



WARNING



Do not disassemble or modify the equipment. Doing so may result in fire, electric shock, or equipment failure.



Do not allow the display to become wet. Doing so may result in fire, electric shock, or equipment failure.



Operate the equipment only at the indicated voltage. Failure to do so may result in fire, electric shock, or equipment failure.



Install this unit at least 1 m away from any magnetic compasses. Installation near a magnetic compass may result in interference with the magnetic compass, and may result in an accident.



Do not perform internal inspections or modifications of the equipment. Inspection or modification by unauthorized personnel may result in fire, electric shock, or equipment failure. Please consult with JRC or an affiliate to perform internal inspections or repair.



When disposing of the used lithium battery, place insulating tape over the battery terminals, or otherwise insulate the battery. Failure to do so may result in heating, explosion, or fire due to a shorted battery.

Precautions Upon the Operation

CAUTION

-  Do not use the equipment in environments other than those provided in the specifications. Doing so may result in equipment failure, malfunction, or injury.
-  The dip switches on the unit are all set at the factory, and must not be changed. Doing so may result in equipment failure, malfunction, or injury.
-  Do not install the display unit in locations where it may come in contact with water, oil, or chemicals. Doing so may result in equipment failure, malfunction, or injury.
-  Do not install the equipment in places subject to vibration or shock. Doing so may result in the equipment falling or collapsing, resulting in equipment failure or injury.
-  Do not place items on top of the equipment. Doing so may result in equipment failure, malfunction, or injury.
-  Please consult with JRC or an affiliate to perform installation. Installation by unauthorized personnel may result in malfunction.
-  Only use the specified batteries. Failure to do so may result in battery leakage or rupture, resulting in fire, injury, or equipment failure.
-  Use the indicated screws when installing the display unit to a stable wooden surface. Failure to do so may result in the display unit falling over, causing injury or property damage.
-  Use only the specified fuse. Failure to do so may result in fire or equipment failure.
-  Use only the specified batteries. Failure to do so may result in equipment failure or malfunction.
-  When suspected of an antenna failure, check the satellite information display for reception from a satellite and exchange the antenna if necessary.



CAUTION



When used in other than ships, it may not satisfy the desired performance and functionality. Because this product is designed to be installed for the ship.



Heaving function of this product is intended to measure swinging in the vertical direction of the ship.

So, it is not possible to measure something (wave height etc.) other than swinging in the vertical direction of the ship.

It is not possible to measure also the tsunami.



When you install JLR-21/31 in retractable mast, please observe the following strictly.

- ① An unusual vibration or an unusual shock should not occur.
- ② When the mast has retracted, please stop use. Because normal operation cannot be performed.
- ③ A difference should not occur in the position by retracting.



Install the sensor where there are no obstacles, in order to ensure that GPS signals can be directly received from satellites without interference or reflection of signals from surrounding objects.

Whenever possible, select a place with the following characteristics.

- 1. An open space, which allows uniform reception of satellite signals.**
- 2. Far away from any high power transmission antennas.**
- 3. Outside radar beams.**
- 4. Away from the INMARSAT antenna by at least 5 meters and outside the INMARSAT beam.**
- 5. Away from the antenna of a VHF transmitter and a direction finder by at least 3 meters.**
- 6. Away from a Magnetic Compass by at least 1 meter.**
- 7. 3 meters or more away from amateur radio antennas.**

If it is difficult to find an ideal site, select a place temporarily and install the equipment. Conduct a test to make sure that the proper performance can be obtained and then fix the equipment in position. If it is installed at an improper place, reception accuracy may be impaired.

CAUTION




Do not bend the cables included with this equipment excessively, or twist them or subject them to other strong forces. Doing so may result in damage to the interior or exterior of the cables, and may result in fire or electrocution.



Do not install the equipment in places subject to vibration or shock. Doing so may result in the equipment failure due to reception problems.



This equipment uses GPS satellite signals to determine the bearing of the ship. Install the sensor where there are no impediments to electrical signal reception, and no signal reflection. If the sensor installation location environment is unsatisfactory, ship bearing calculations is repeatedly interrupted. If selection of the optimal installation location is difficult, and some concessions must be made, place the sensor in the desired installation location and test the acceptability of the sensor results before permanently installing the sensor. Installing the sensor in an inappropriate location may result in decreased accuracy and equipment failure. Poor visibility and the high occurrence of reflected waves may result in a decrease in bearing accuracy or the interruption of bearing measurement. Whenever possible, select a place having the following characteristics.

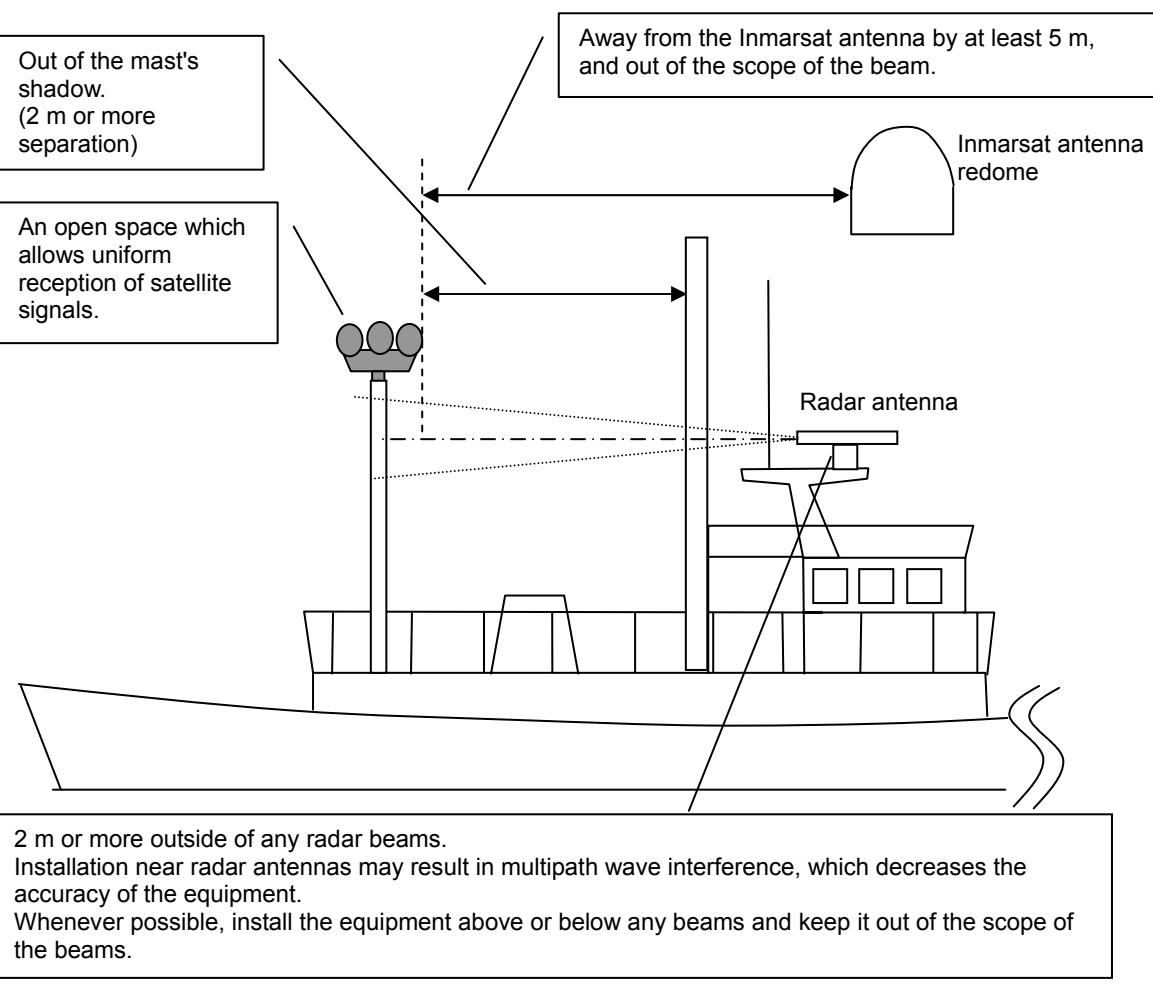

Appearance of the Equipment

● Standard Equipment

NWZ-4701 Display Unit



NNN-21 Sensor Unit



NNN-31 Sensor Unit



Contents

| | |
|--|------|
| Foreword | i |
| Before Commencing the Operation..... | ii |
| Precautions Upon the Operation..... | iii |
| Appearance of the Equipment..... | vii |
| | |
| Section 1 EQUIPMENT OVERVIEW | 1-1 |
| 1.1 Functions | 1-1 |
| 1.2 Features | 1-1 |
| 1.3 Configuration | 1-2 |
| 1.4 Construction | 1-4 |
| 1.5 System Diagram | 1-6 |
| | |
| Section 2 Installation | 2-1 |
| 2.1 Sensor Installation | 2-2 |
| 2.2 Didplay Unit Installation | 2-15 |
| 2.3 Cable Connection | 2-18 |
| | |
| Section 3 Names and Functions of EACH UNIT | 3-1 |
| 3.1 NWZ-4701 Display Unit | 3-1 |
| 3.2 NNN-21/31 Sensor Unit | 3-3 |
| | |
| Section 4 Display | 4-1 |
| 4.1 Display Screen | 4-1 |
| 4.1.1 Compass Screen | 4-2 |
| 4.1.2 Bow Heading Screen | 4-3 |
| 4.1.3 Navigation Screen..... | 4-4 |
| 4.1.4 Turn Rate Screen..... | 4-5 |
| 4.1.5 Water Speed / Ground Speed Screen..... | 4-6 |
| 4.1.6 Trend Graph Screen | 4-6 |
| 4.1.7 Calculate Distance Screen..... | 4-7 |
| 4.1.8 Configuration Screen | 4-7 |
| | |
| Section 5 Operation | 5-1 |
| 5.1 MENU LIST | 5-1 |
| 5.1.1 Menu List | 5-1 |
| 5.2 BASIC OPERATION..... | 5-4 |
| 5.2.1 Turning the Unit On..... | 5-4 |
| 5.2.1.1 Startup (Standard)..... | 5-4 |
| 5.2.1.2 Startup (Error-1) | 5-5 |
| 5.2.1.3 Startup (Error-2) | 5-5 |
| 5.2.1.4 Startup (Error-3) | 5-6 |
| 5.2.2 Turning the Unit Off..... | 5-6 |
| 5.2.3 Adjusting the Backlight..... | 5-7 |
| 5.2.4 Adjusting the Contrast..... | 5-7 |
| 5.2.5 Stopping the Alarm Buzzer..... | 5-8 |

| | | |
|------------------|--|------------|
| 5.2.6 | Changing the Display | 5-8 |
| 5.2.7 | Displaying Satellite Information | 5-9 |
| 5.2.8 | Alarm History Display | 5-10 |
| 5.2.9 | Anchor Watch Settings | 5-11 |
| 5.3 | Main Menu | 5-13 |
| 5.3.1 | Display Settings..... | 5-14 |
| 5.3.1.1 | Adjusting the Contrast | 5-15 |
| 5.3.1.2 | Brightness Settings (DIMMER)..... | 5-15 |
| 5.3.1.3 | Click Sound Settings (CLICK SOUND)..... | 5-15 |
| 5.3.1.4 | Display Reversing Setting (REVERSING MODE)..... | 5-16 |
| 5.3.1.5 | First Screen Setting (START SCREEN)..... | 5-16 |
| 5.3.1.6 | Decimal Display Size Setting (DECIMAL DISP SIZE)..... | 5-17 |
| 5.3.1.7 | Current Position Display Digit Setting on Compass Screens C/D (COMP-C/D POSITION DIGIT) | 5-17 |
| 5.3.2 | Setting the Heading (HEADING) | 5-18 |
| 5.3.3 | GPS Configuration (GPS)..... | 5-20 |
| 5.3.3.1 | Initial Settings (INITIALIZATION)..... | 5-21 |
| 5.3.4 | SBAS Settings (SBAS)..... | 5-22 |
| 5.3.5 | Beacon Settings (BEACON)..... | 5-23 |
| 5.3.6 | System Settings | 5-24 |
| 5.3.7 | Data I/O Settings (DATA I/O) | 5-28 |
| 5.3.8 | Checking the Version..... | 5-32 |
| 5.3.9 | Others Settings..... | 5-33 |
| 5.3.10 | Language Settings (LANGUAGE) | 5-34 |
| 5.4 | Maintenance Menu | 5-35 |
| 5.4.1 | Antenna Check | 5-36 |
| 5.4.2 | Input Check | 5-37 |
| 5.4.3 | Self-Diagnosis (DIAGNOSIS) | 5-38 |
| 5.4.4 | Demo..... | 5-41 |
| 5.4.5 | Product Type Settings | 5-42 |
| 5.4.6 | Master Reset (RESET)..... | 5-43 |
| 5.4.7 | Software Update (SOFT UPDATE)..... | 5-44 |
| 5.4.8 | CCRP Settings | 5-45 |
| Section 6 | Maintenance And Inspection | 6-1 |
| 6.1 | General Maintenance And Inspection | 6-1 |
| 6.2 | Alarms..... | 6-2 |
| 6.3 | Troubleshooting | 6-3 |
| 6.3.1 | Troubleshooting | 6-3 |
| 6.3.2 | Repair Unit | 6-4 |
| 6.3.3 | Regular Replacement Parts | 6-4 |
| Section 7 | After-Sales Service..... | 7-1 |
| 7.1 | Warranty | 7-1 |
| 7.2 | Repair Parts Stocking Period | 7-1 |
| 7.3 | When Requesting Service..... | 7-1 |
| 7.4 | Recommended Checks and Inspections..... | 7-1 |
| Section 8 | Disposal | 8-1 |
| 8.1 | Disposal of the Equipment | 8-1 |

| | |
|---|---------------------|
| 8.2 Disposal of Used Batteries | 8-1 |
| Section 9 Specifications..... | 9-1 |
| 9.1 Display Unit (NWZ-4701)..... | 9-1 |
| 9.1.1 Panel..... | 9-1 |
| 9.1.2 Power Supply..... | 9-1 |
| 9.1.3 Environment..... | 9-1 |
| 9.1.4 Dimensions and Mass..... | 9-1 |
| 9.1.5 External Interfaces | 9-2 |
| 9.2 Sensor Unit (NNN-21/31) | 9-3 |
| 9.2.1 Electrical Specifications | 9-3 |
| 9.2.2 Environment..... | 9-3 |
| 9.2.3 Dimensions and Mass..... | 9-3 |
| Appendix | Appendix 1-1 |
| Appendix 1 List of Geodetic Systems | Appendix 1-1 |
| Appendix 2 Data Formats | Appendix 2-1 |
| Appendix 3 Terminology..... | Appendix 3-1 |
| Appendix 4 Memo | Appendix 4-1 |
| Appendix 5 Main Screen List | Appendix 5-1 |

Section 1 Equipment Overview

1.1 Functions

This equipment determines the heading of a ship by measuring the orientation between two antennas using the signal from GPS satellites.

The equipment not only determines the heading with high accuracy anywhere in the world and in all weather conditions using the GPS satellites, but determines the position, course, and speed of the ship. When the DGPS beacon receiver is connected, the accuracy of position fixing can be enhanced by receiving correction data from the DGPS beacon station.

Since this equipment outputs the bearing information at high speed, if the unit is interfaced to a JRC radar unit, it is possible to fully draw the capabilities of the radar and ARPA.

1.2 Features

- High accuracy and high stability (JLR-21:0.5 degree rms , JLR-31:0.25 degree rms)
- Short setting time (less than 2 minutes at warm start fix)
- High speed tracking response (Tracking rate of turn is 45 degree/sec)
- High visibility 5.7-inch FSTN LCD
- Many utility display modes (Compass rose graphics, ROT, NAV, GPS status, etc.)
- Easy installation
- Direct connection to the JRC radars
- SBAS compatible: Differential positioning by receiving correction data from SBAS satellites (MSAS/WAAS/EGNOS)
- Enhanced positioning reliability derived from RAIM function (the sensor itself can judge the positioning accuracy)
- Enhanced attitude measuring functions (rolling, pitching, heaving)

1.3 Configuration

Standard Configuration

JLR-21

| No. | Name | Model/Code | Q'ty | Notes |
|-----|---|---------------|------|---|
| 1 | Display Unit | NWZ-4701 | 1 | |
| 1-1 | Power Cable | CFQ-7257 | 1 | 2m / With fuse holder |
| 1-2 | Fuse | MF60NR 250V 2 | 2 | 2Amps. |
| 1-3 | Clamp Filter | TFC-23-11-14 | 1 | 5MBAT00002 |
| 1-4 | Model Identification Plate | MPNN47010 | 1 | |
| 1-5 | Model Identification Plate For Panel | MPNN47078 | 1 | |
| 1-6 | Installation Screws | MPTG31659 | 1 | 4 tapping screws |
| 1-7 | Flush Mounting Screw | MPTG31962 | 1 | 4 screws (For mount screw from the back) |
| 2 | Sensor Unit | NNN-21 | 1 | |
| 2-1 | Cable | CFQ-7248 | 1 | 10m / 14 cores |
| 2-2 | Clamp Filter (Small) | E04SR200935A | 2 | |
| 2-3 | Clamp Filter (Large) | E04SR301334 | 1 | |
| 2-4 | Bundling Band (Short) | BRBP07141 | 1 | |
| 2-5 | Bundling Band (Long) | BRBP07142 | 4 | |
| 2-6 | Self-bonding Tape | BRXP05369 | 1 | |
| 3 | Instruction Manual (English) | 7ZPNA4224 | 1 | |

JLR-31

| No. | Name | Model/Code | Q'ty | Notes |
|-----|---|---------------|------|---|
| 1 | Display Unit | NWZ-4701 | 1 | |
| 1-1 | Power Cable | CFQ-7257 | 1 | 2m / With fuse holder |
| 1-2 | Fuse | MF60NR 250V 2 | 2 | 2Amps. |
| 1-3 | Clamp Filter | TFC-23-11-14 | 1 | 5MBAT00002 |
| 1-4 | Model Identification Plate | MPNN47010 | 1 | |
| 1-5 | Model Identification Plate For Panel | MPNN47078 | 1 | |
| 1-6 | Installation Screws | MPTG31659 | 1 | 4 tapping screws |
| 1-7 | Flush Mounting Screw | MPTG31962 | 1 | 4 screws (For mount screw from the back) |
| 2 | Sensor Unit | NNN-31 | 1 | |
| 2-1 | Cable | CFQ-7248 | 1 | 10m / 14 cores |
| 2-2 | Clamp Filter (Small) | E04SR200935A | 2 | |
| 2-3 | Clamp Filter (Large) | E04SR301334 | 1 | |
| 2-4 | Bundling Band (Short) | BRBP07141 | 1 | |
| 2-5 | Bundling Band (Long) | BRBP07142 | 4 | |
| 2-6 | Self-bonding Tape | BRXP05369 | 1 | |
| 3 | Instruction Manual (English) | 7ZPNA4224 | 1 | |

Option


| No. | Name | Model/Code | Q'ty | Notes |
|-----|---|-------------|------|---|
| 1 | Data Cable | CFQ-5374 | 1 | 3m / 12 cores / Serial data transmission |
| 2 | Data Cable | CFQ-5404 | 1 | 3m / 14 cores / Dry contact signal |
| 3 | Data Extension Cable | CFQ-7249 | 1 | 20m / 14 cores / For sensor extension |
| 4 | Beacon Connecting Cable | CFQ-7250 | 1 | For beacon receiver connection |
| 5 | Junction Box | NQE-7720 | 1 | 14 connector / for sensor extension |
| 6 | GPS Repecon | NQA-4115T | 1 | Digital/Synchronous Converter |
| 7 | DGPS Receiver | JLR-4341 | 1 | Used as a beacon receiver (DGPS position fixing available using the compass) |
| 8 | Installation Trestle | MPBX44117 | 1 | For NNN-21 |
| 9 | Data Extension Cable | CFQ7249-10 | 1 | 10m Version of CFQ-7249(20m) |
| 10 | Bird Repellent Rod | MPXP34012A | 1 | For NNN-21/31 |
| 11 | Y Cable For Sub Display | CFQ-7251 | 1 | NWZ-4701 for Sub Display |
| 12 | Data Cable | CFQ-5469 | 1 | For RADAR JMA-5100/5200/5300 Connectors on both sides of the cable(10m) |
| 13 | Flush Mount Kit | MPBC43664 | 1 | Panel for Flash Mount |
| 14 | Buzzer | CGC-300B | 1 | Misappropriation for Navtex |
| 15 | Data Cable | CFQ5404-15 | 1 | 15m Version of CFQ-5404(3m) |
| 16 | Data Cable | CFQ5374-15 | 1 | 15m Version of CFQ-5374(3m) |
| 17 | Installation Metal Fittings Of Junction Box | MPBP31612 | 1 | For Paul installation |
| 18 | Data Extension Cable(Exterior Cable) | TTYCYS-7 | — | Code : 2165411109 |
| 19 | AC Power Rectifier | NBD-577C | 1 | AC100 / 220V Misappropriation for AIS |
| 20 | AC Power Rectifier | NBG-320 | 1 | [Recommendation] AC100 / 220V Misappropriation for Navtex |
| 21 | Power Cable | CFQ-7257-10 | 1 | 10m / With fuse holder |
| 22 | Power Cable | CFQ-7257-15 | 1 | 15m / With fuse holder |
| 23 | Cable | CFQ7248-30 | 1 | 30m / 14 cores / 30m Version of CFQ-7248(10m) |

Attention

When using Power Rectifier (NBG-320), the voltage drops due to cable length, please do not use Power Cable (CFQ-7257-15). By the way, Power Cable (CFQ-7257-15) is available.

1.4 Construction


• NWZ-4701 Display Unit

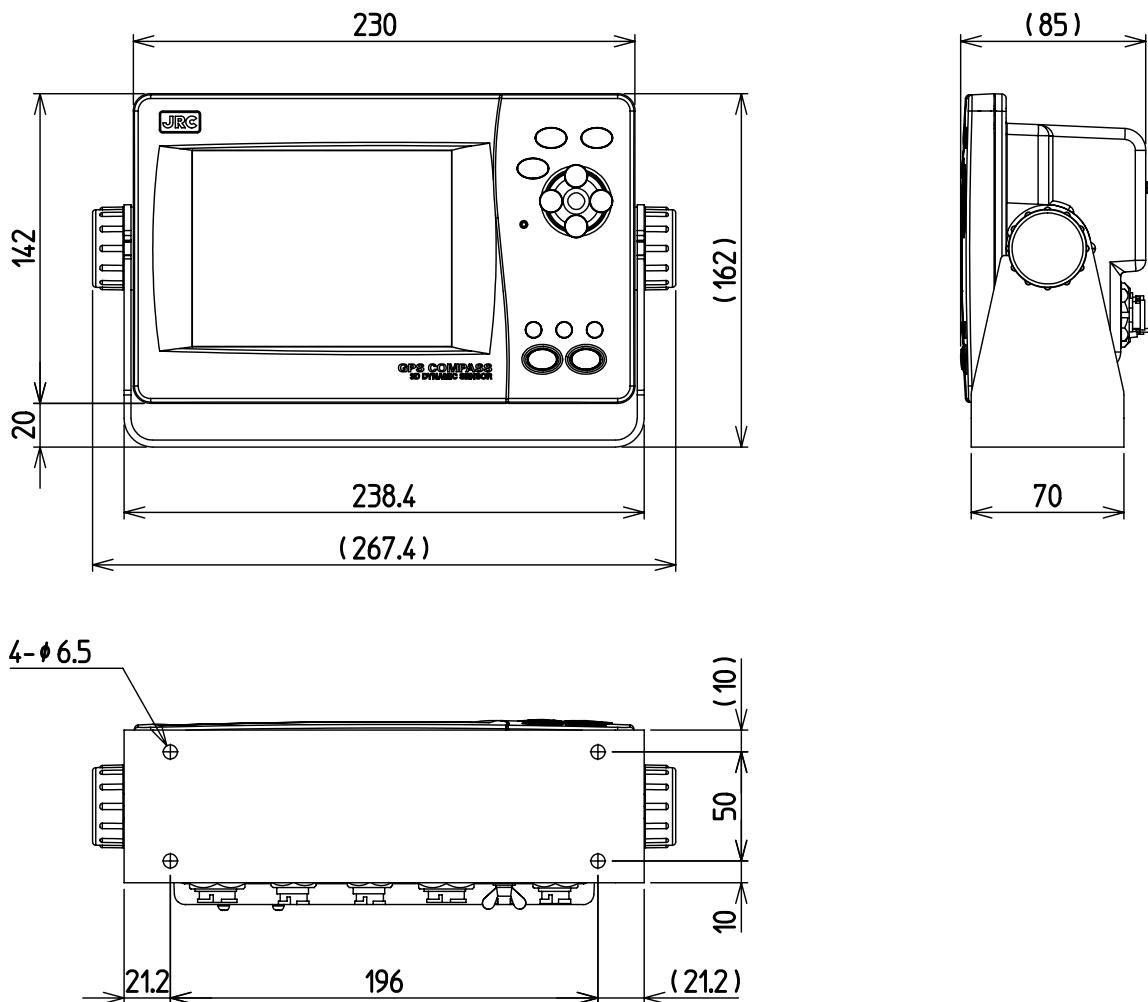

Dimensions: 267.4 x 162 x 85 mm
Mass: Approximately 2.3 kg


NNN-21/31 Sensor Unit

NNN-21

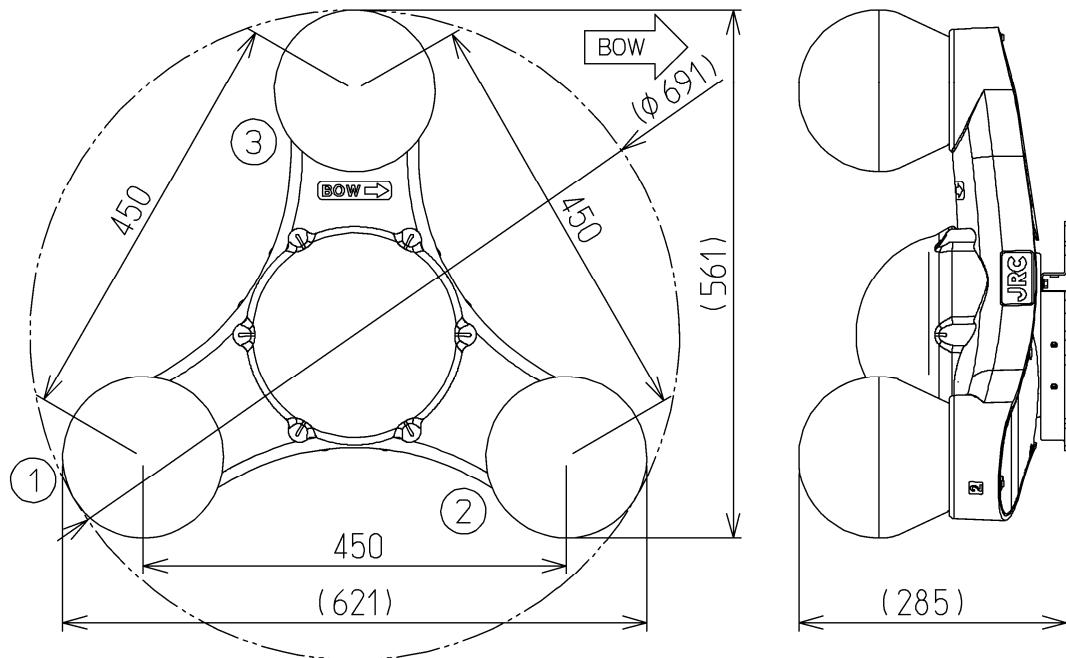


Dimensions: $\phi 691 \times 285\text{mm}$
Mass: Approximately 5.9 kg

NNN-31

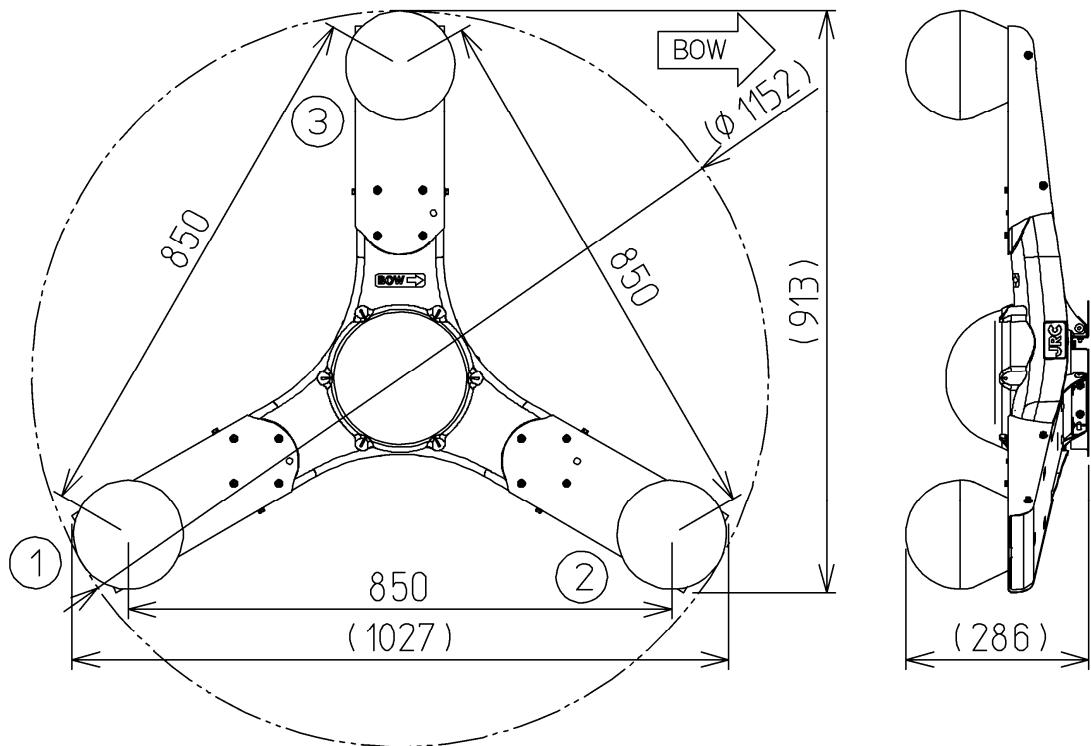

Dimensions: $\phi 1152 \times 286\text{ mm}$
Mass: Approximately 10 kg

1.5 System Diagram

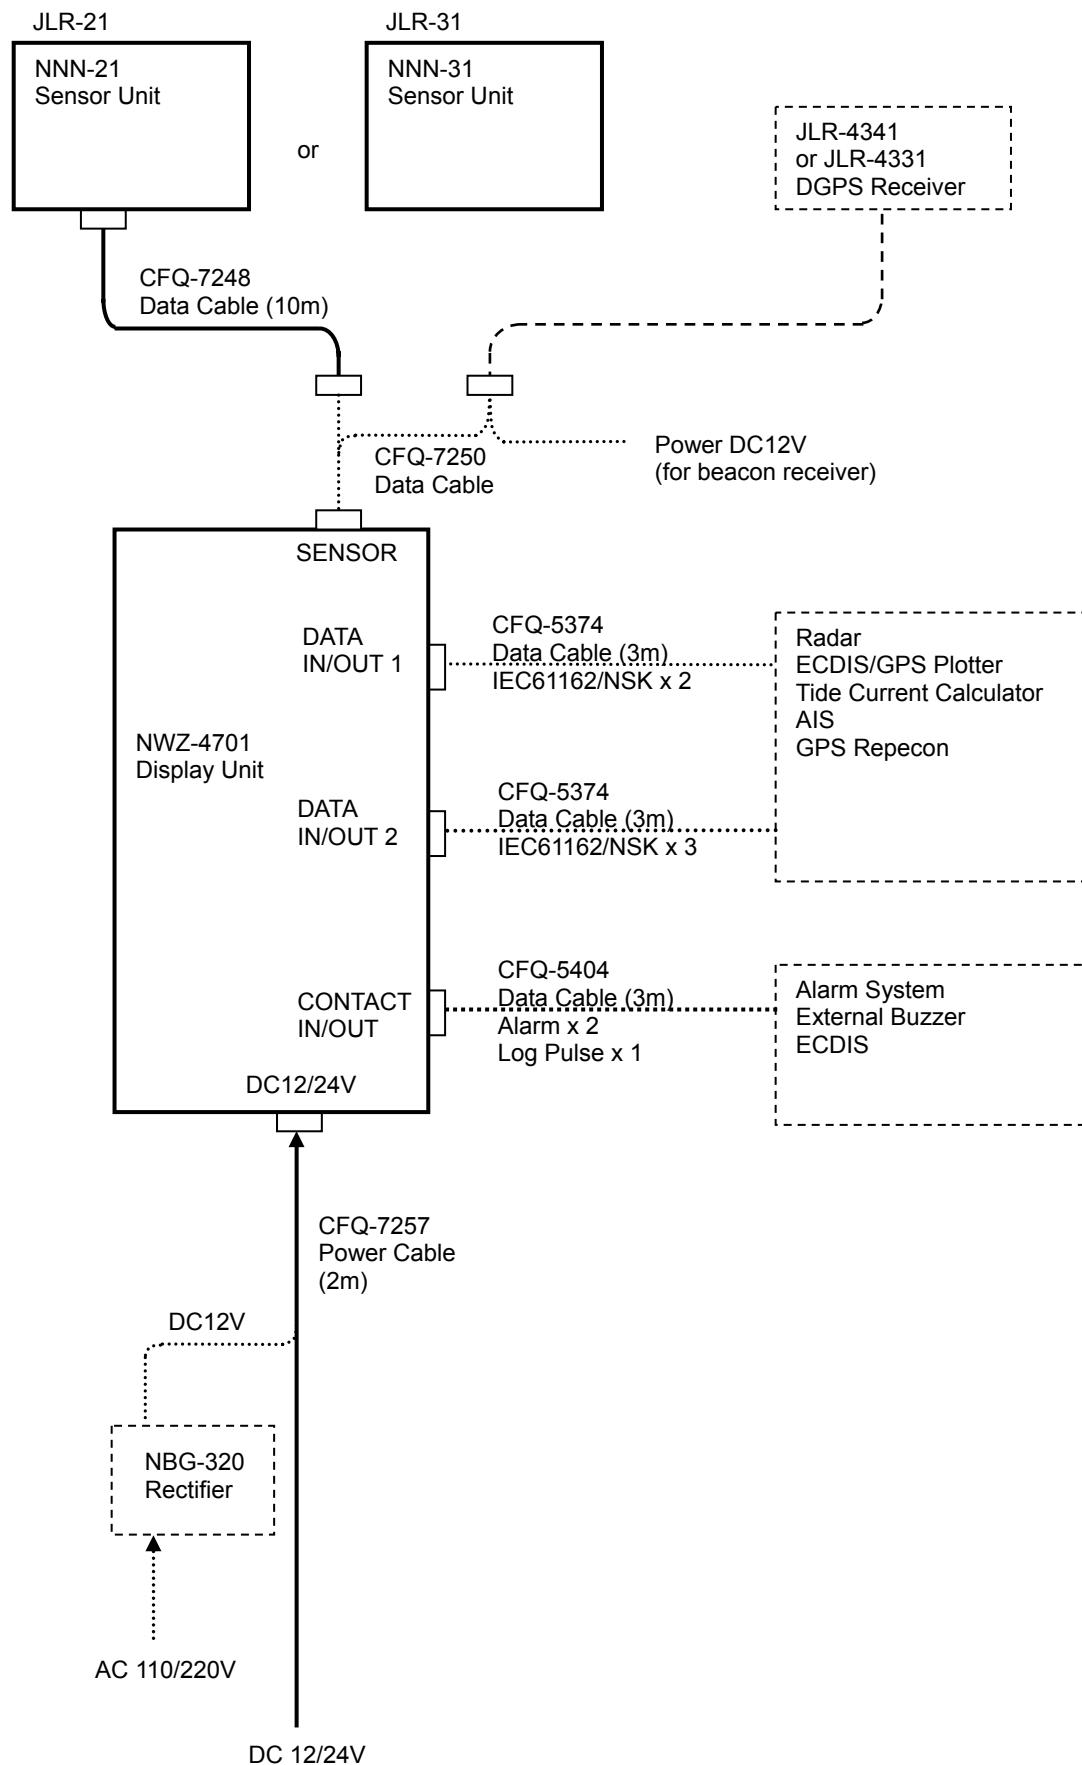

Section 2 Installation



CAUTION



Please consult with JRC or an affiliate to perform installation. Installation by unauthorized personnel may result in malfunction.

2.1 Sensor Installation

! CAUTION



Do not bend the cables included with this equipment excessively, or twist them or subject them to other strong forces. Doing so may result in damage to the interior or exterior of the cables, and may result in fire or electrocution.




Do not install the equipment in places subject to vibration or shock. Doing so may result in the equipment failure due to reception problems.



This equipment uses GPS satellite signals to determine the bearing of the ship. Install the sensor where there are no impediments to electrical signal reception, and no signal reflection. If the sensor installation location environment is unsatisfactory, ship bearing calculations are repeatedly interrupted. If selection of the optimal installation location is difficult, and some concessions must be made, place the sensor in the desired installation location and test the acceptability of the sensor results before permanently installing the sensor. Installing the sensor in an inappropriate location may result in decreased accuracy and equipment failure.

Poor visibility and the high occurrence of reflected waves may result in a decrease in bearing accuracy or the interruption of bearing measurement.

Whenever possible, select a place having the following characteristics.

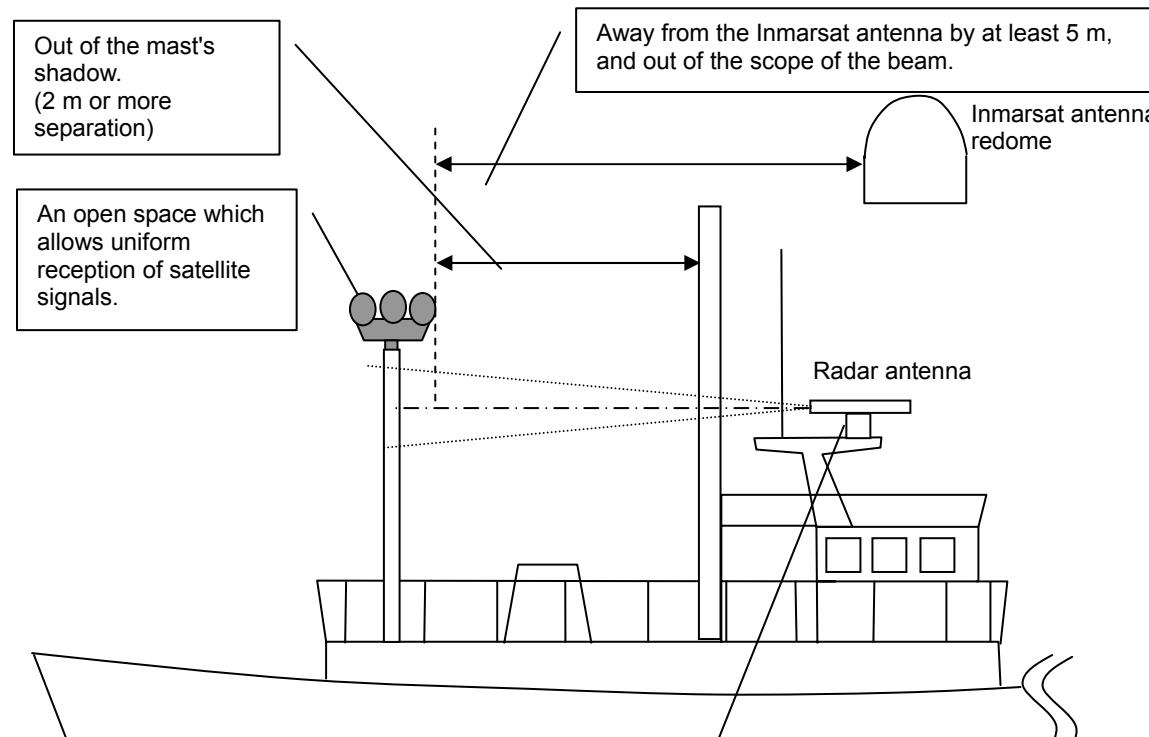

2 m or more outside of any radar beams.

Installation near radar antennas may result in multipath wave interference, which decreases the accuracy of the equipment.

Whenever possible, install the equipment above or below any beams and keep it out of the scope of the beams.



CAUTION



When you install JLR-21/31 in retractable mast, please observe the following strictly.

- ① An unusual vibration or an unusual shock should not occur.
- ② When the mast has retracted, please stop use. Because normal operation cannot be performed.
- ③ A difference should not occur in the position by retracting.



Install the sensor where there are no obstacles, in order to ensure that GPS signals can be directly received from satellites without interference or reflection of signals from surrounding objects.

Whenever possible, select a place with the following characteristics.

- 1. An open space, which allows uniform reception of satellite signals.**
- 2. Far away from any high power transmission antennas.**
- 3. Outside radar beams.**
- 4. Away from the INMARSAT antenna by at least 5 meters and outside the INMARSAT beam.**
- 5. Away from the antenna of a VHF transmitter and a direction finder by at least 3 meters.**
- 6. Away from a Magnetic Compass by at least 1 meter.**
- 7. 3 meters or more away from amateur radio antennas.**

If it is difficult to find an ideal site, select a place temporarily and install the equipment. Conduct a test to make sure that the proper performance can be obtained and then fix the equipment in position. If it is installed at an improper place, reception accuracy may be impaired.

Attention


- Be careful not to damage the equipment during loading or installation.
 - Do not lift the sensor by the equipment cabling.
1. It is recommended that the sensor be installed midway on a strong pole or mast. In order to minimize vibration and improve maintainability, the sensor should not be mounted at an excessive height.
 2. Use a sufficiently thick metal base for the sensor mount, and any necessary additional reinforcing materials, to reduce vibration and shock as much as possible. Use stays or wires on the pole or mast on which the mount is connected in order to further reduce vibration or shock to the sensor.
(Refer to the terms "Installation Procedure" described below)
Ensure that the mounting surface is as flat as possible. Do not use rubber, resin, or other flexible materials in order to flatten the mounting surface, as this may result in reduced resonance frequency and increased vibration. It may also cause mounting bolt loosening of the material when degraded.
 3. Use appropriate bolts for the sensor, and tighten all bolts equally. The length of the mounting bolts varies based on the thickness of the mount, but select bolts of such length that the amount extending past the nut is twice the thickness of the nut.
Some initial loosening may occur after tightening. Perform a second bolt tightening some time after the initial tightening.
After installation, check the tightness of the installation bolts periodically. It is especially important to check the bolt tightness after traveling in inclement weather, regardless of how much time has passed since the last check. Continued use of the same bolts may result in decreased strength, bolt degradation, or bolt breakage. If this occurs, replace both the bolt and the nut with a new bolt and nut. If bolt loosening occurs frequently, please consult with a JRC technician.
 4. Install the sensor as horizontally to the ship as possible. If it is tilted largely, direction accuracy may be degraded.

● Cable Connection Procedure

The unit shown in the figure is the NNN-21, which is almost identical to the NNN-31.

Installing the clamp filter or connecting the extension cable requires a self-bonding tape and vinyl tape. Apply RTV rubber or silicone rubber to waterproof the sensor unit.

1. Install clamp filters (one large and one small) to the antenna side of the included cable. Roll the cable once around the large clamp filter. Also install a clamp filter (small) to the display side. (Refer to the following figures.)

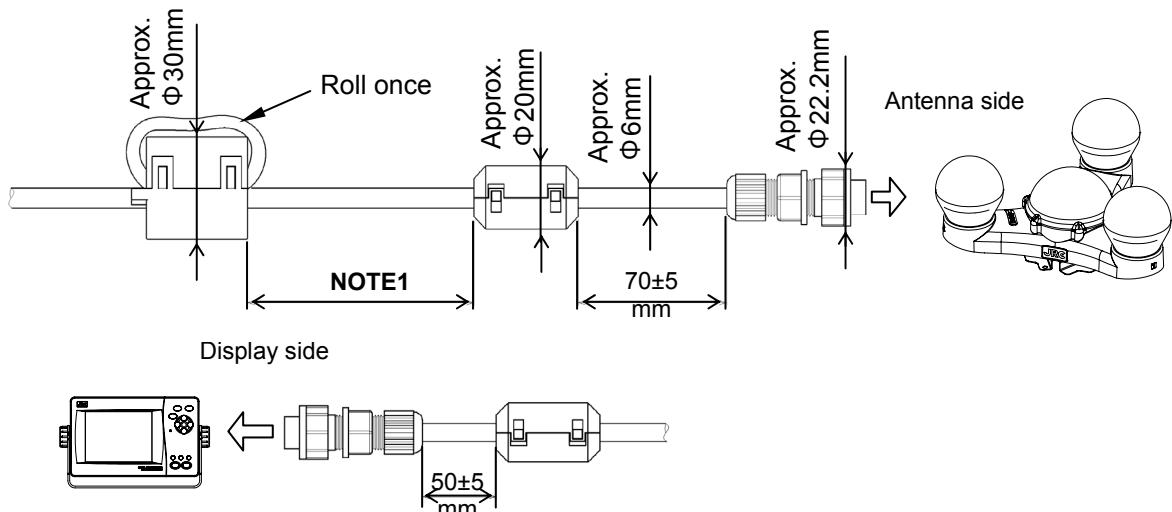


NOTE1: Determine the installation position of the clamp filter (large) by considering the installation condition of the sensor. (Refer to the installation figure on page 2-7.)

2. Processing Clamp Filter


- 2.1 Roll up a self bonding tape around the clamp filters in the antenna side. (No need to roll up the one in the display side.)
Roll up the tape by pulling so that the tape will be lengthened by two times. Also, roll up the tape so that the half of it is overlapped. Repeat three times to make it three-layered. After rolling up, press the tape with the fingers for secure attachment.

2.2 Wrap by a vinyl tape for protection.


Do not put tensile force to the vinyl tape as much as possible. Roll up the vinyl tape so that the half of it is overlapped. Repeat three times to make it three-layered. Crimp the end of the rolled tape without tension. Press the whole tape with the fingers for secure attachment

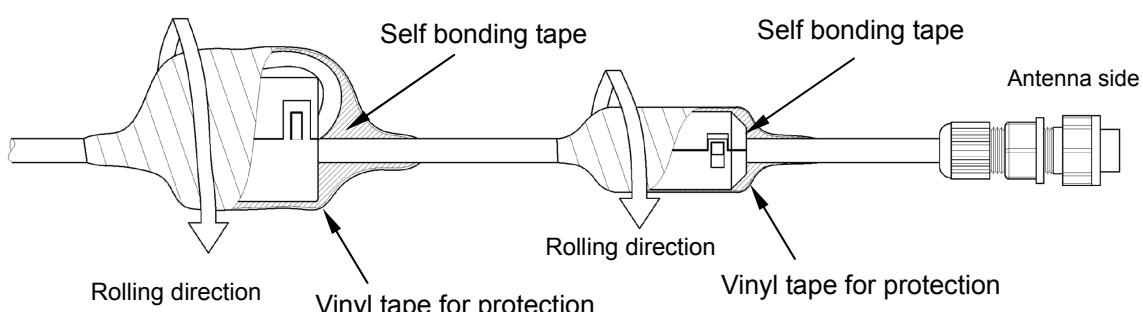

3. Connect the included cable to the sensor unit. Tighten the nut firmly in order to waterproof the connector (a click sounds when plugged in firmly). After connecting, apply RTV (Room Temperature Vulcanizing) rubber on the connector for additional waterproofing.

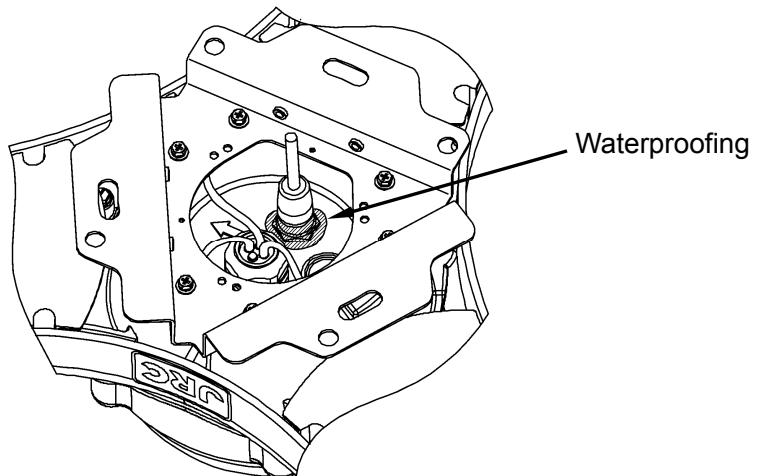

3. With using the included bundling band (short), clamp the cable as shown below. Position should be between GPS1 and GPS2.

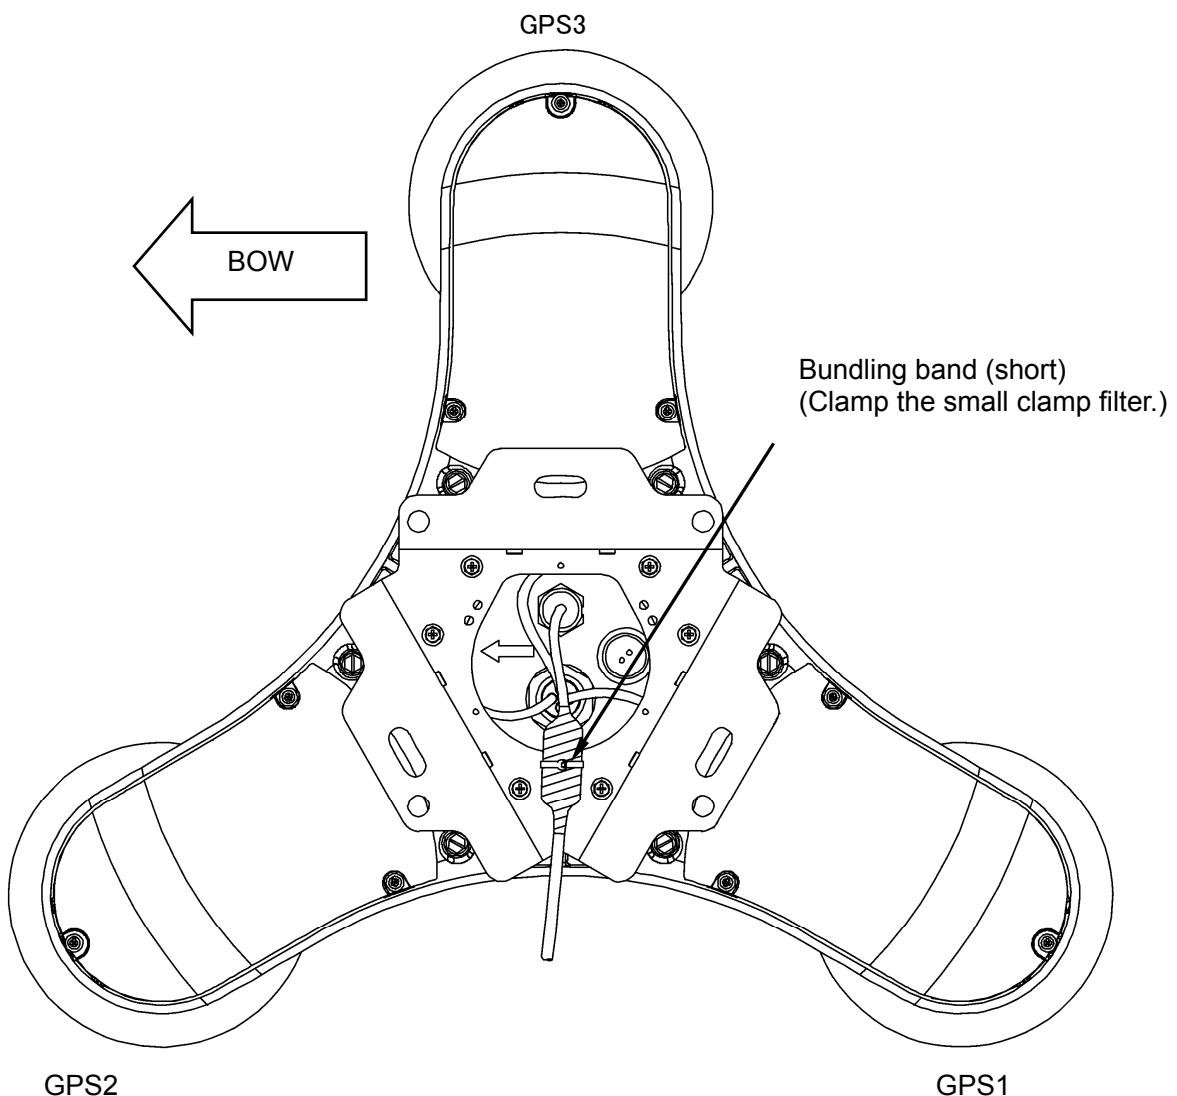


● Installation Procedure


The unit shown in the figure is the NNN-21, which is almost identical to the NNN-31.

- Provide a mounting plate as shown below, and secure the sensor unit. Use M10 hex bolts, washers, spring washers, and nuts to secure it. Tighten the bolt by 3430 N-cm of torque (350 kg-cm).

When making holes in the mounting plate, beware of bow direction. Excessively long bolts may reach the sensor unit. For 5 mm (1/5 inch) mounting plate, M10 x 30 mm bolts are just fit. Using double nuts is also effective to fix plate permanently.

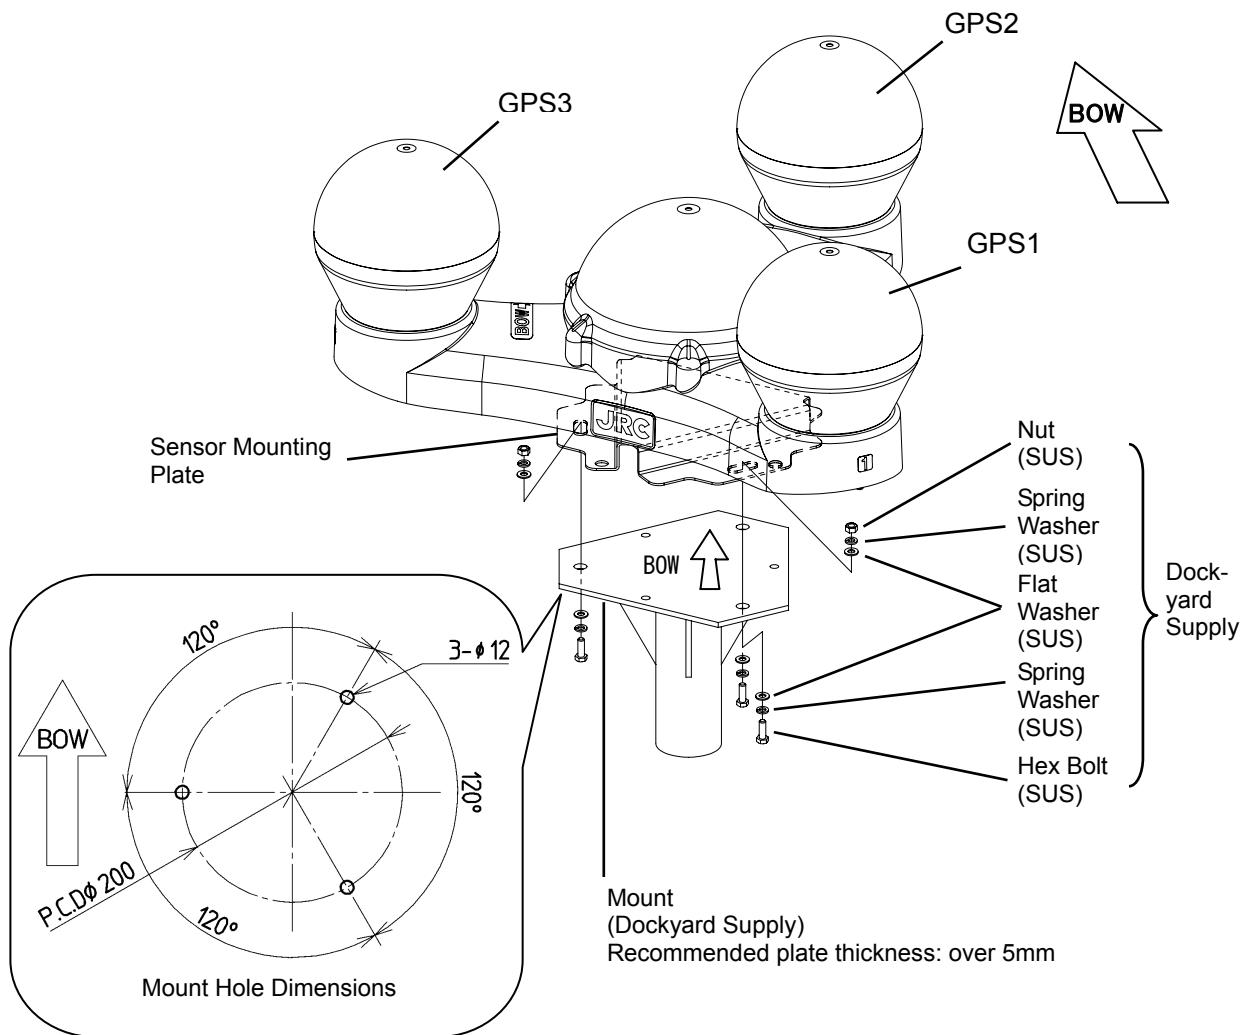


- Use RTV (Room Temperature Vulcanizing) rubber to cover the hex bolts and nuts.

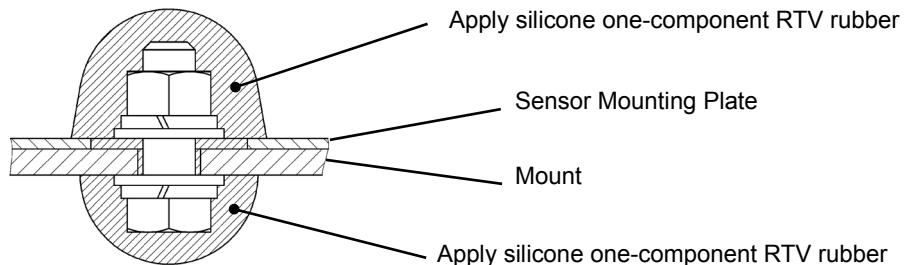

RTV : Room Temperature Vulcanizing

- Fix the clamp filter (large) to the installation pole by using a bundling band (long). Fasten both ends of the large clamp filter. Fix it as closer to the antenna as possible. If it is impossible to fix to the pole, make holes in the mounting plate for bundling bands to go through, and fix the clamp filter to the mounting plate.

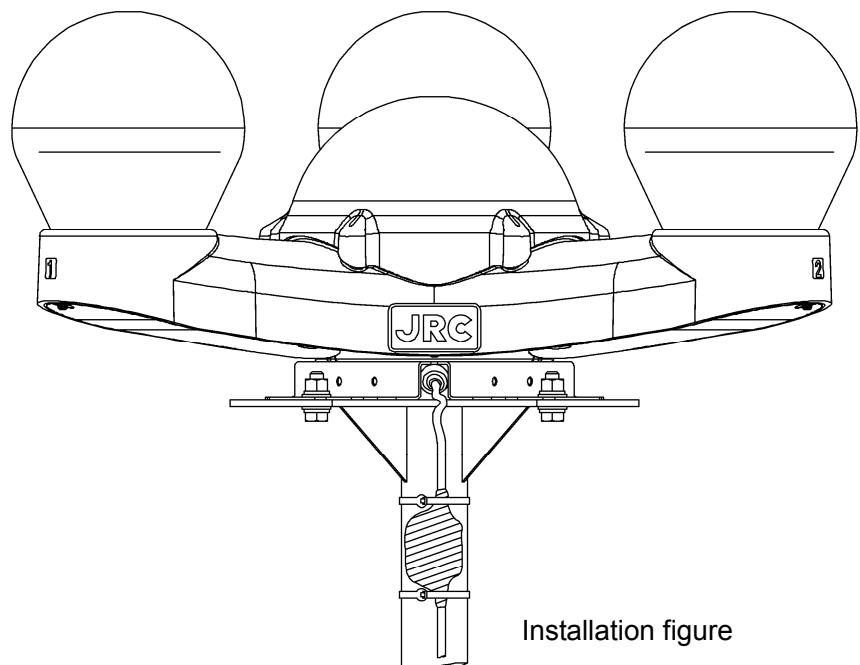


Installation figure


- Cramp at the preferable position so that the cable weight itself will not be applied to the connector. If some slack is provided for the cable, beware of the influence from wind or sea wave. Arrange the cable so that it will not be hooked by a crane or fishing equipment.

● Installation Procedure for Optional Mount Base for NNN-21

1. Install the mounting base to the pole by using fixing brackets, M8 bolts, flat washers, spring washers, and nuts. Then, secure the sensor to the mounting base. Beware of the bow direction.



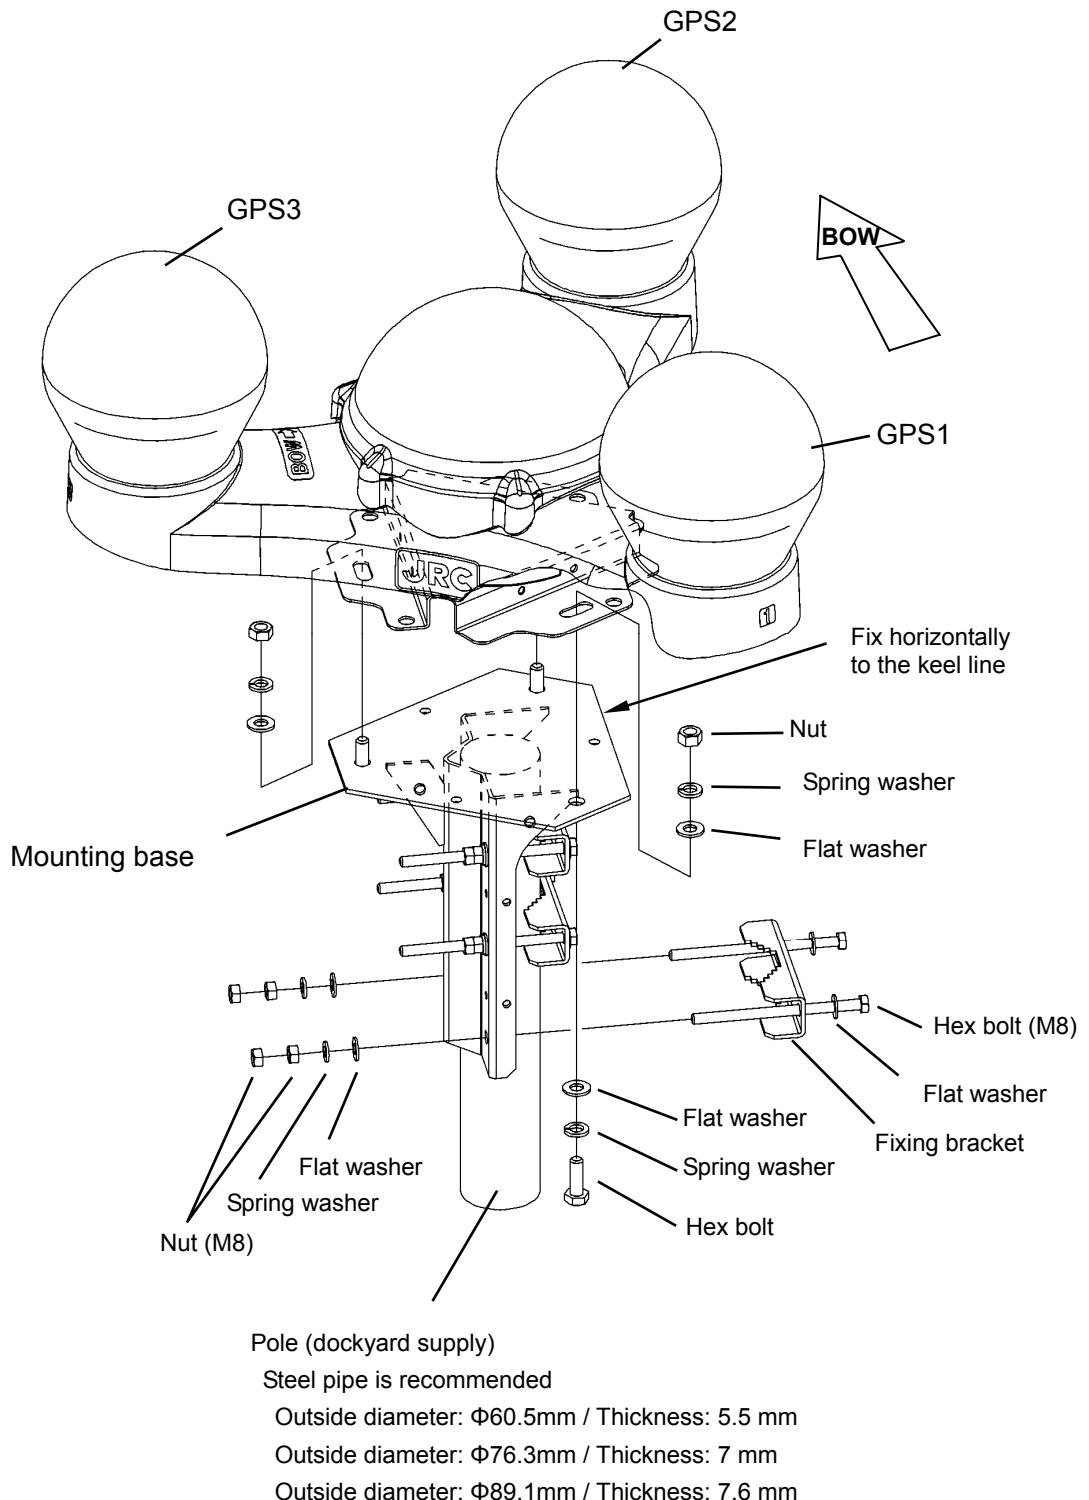



- Fix both ends of the clamp filter (large) by using bundling bands (long) to secure the cable. Let the bands go through the holes of the mounting base.

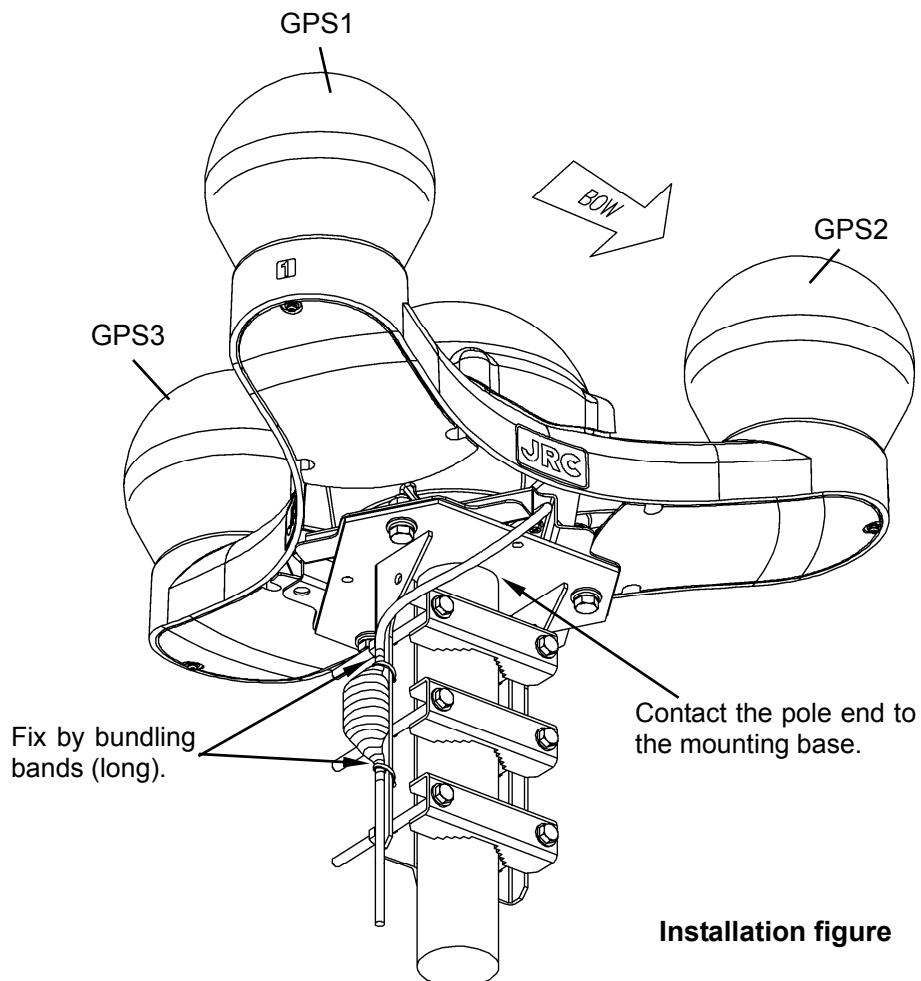



- Connect the display unit and check the installation condition. Check the bow direction on the screen of the display unit. If direction error is found (more than around 5 degrees), adjust the position of the sensor (the sensor mounting plate has slotted holes). Also, for reinforcement, weld the mounting base and the pole as necessary.

Option installation trestle (MPBX44117) bundle list for NNN-21

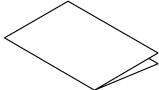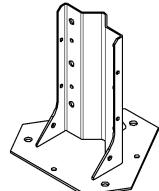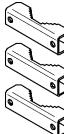
| | | | | |
|---|---|---|---|---|
|  |  |  |  |  |
| Installation manual X 1 | Installation trestle X 1 | Fixed bracket X 3 | M8 Bolts X 6 | M10 Bolts X 3 |

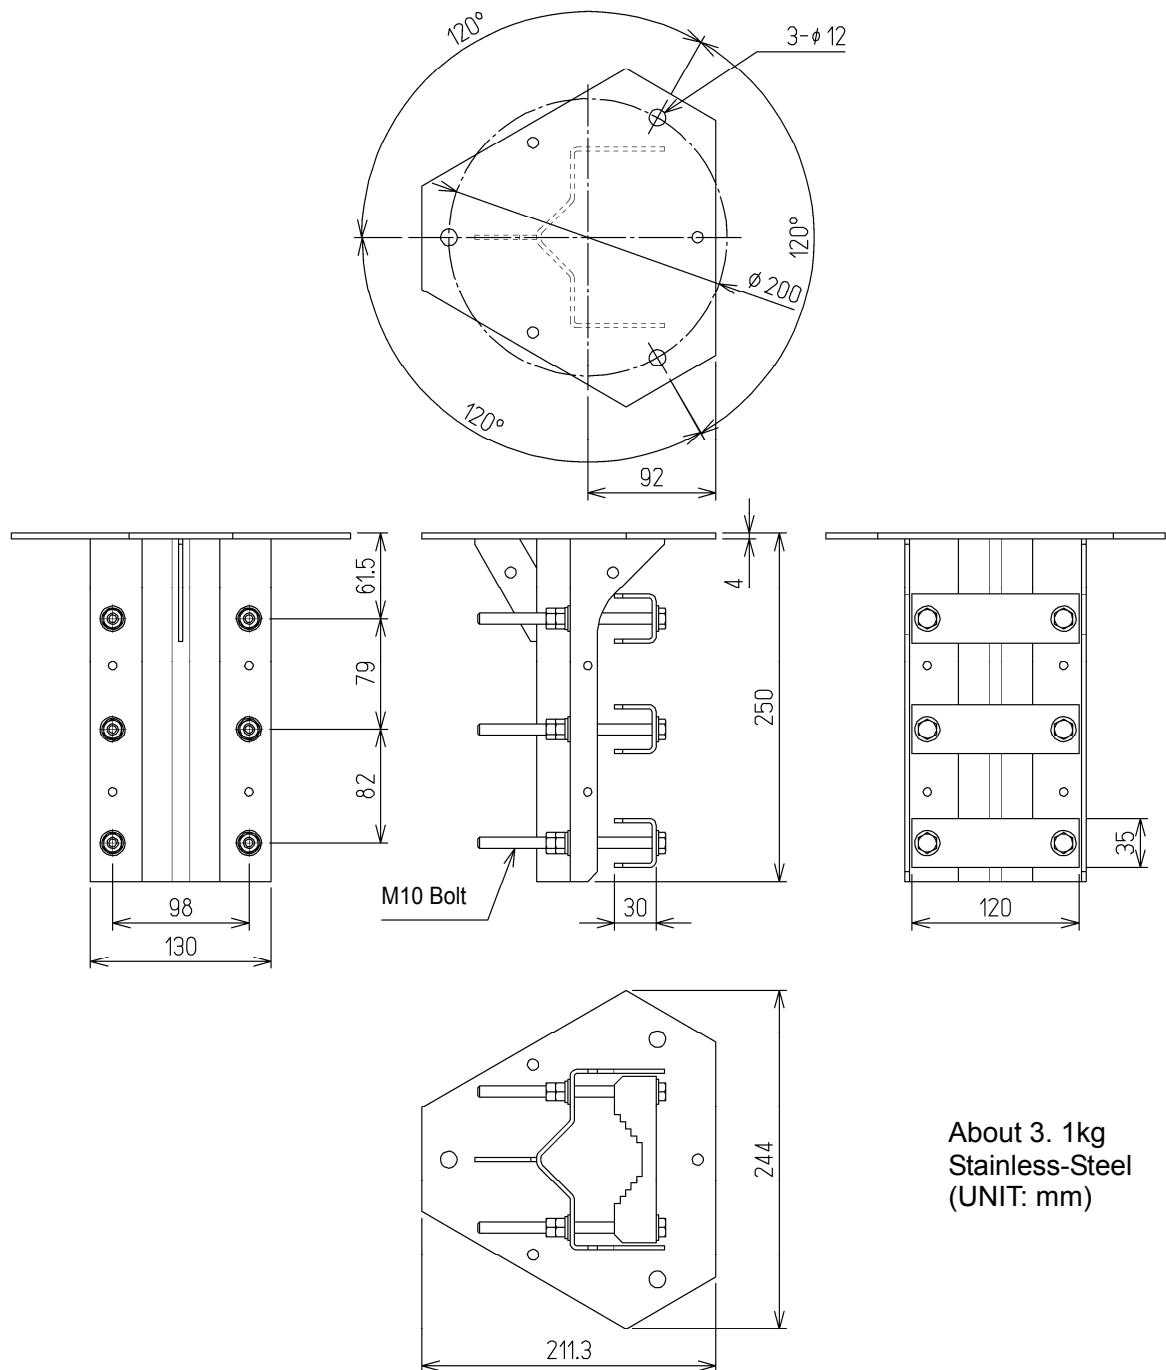

● About NNN-31

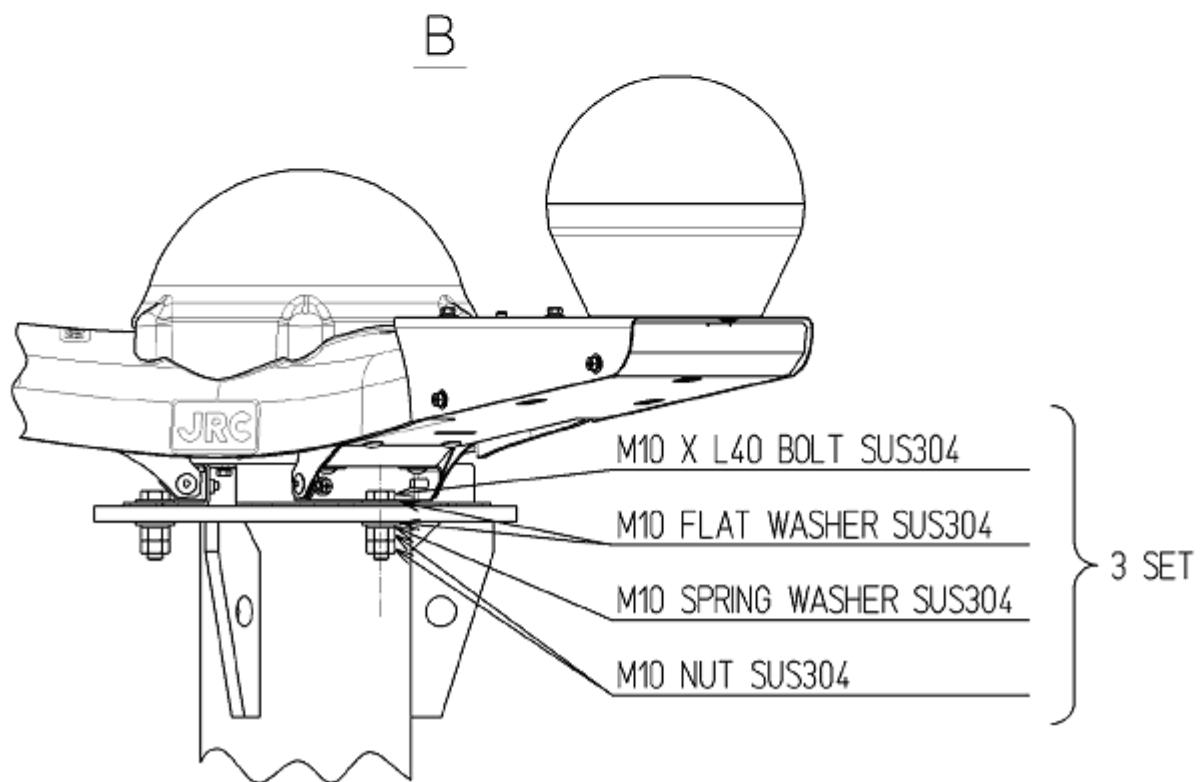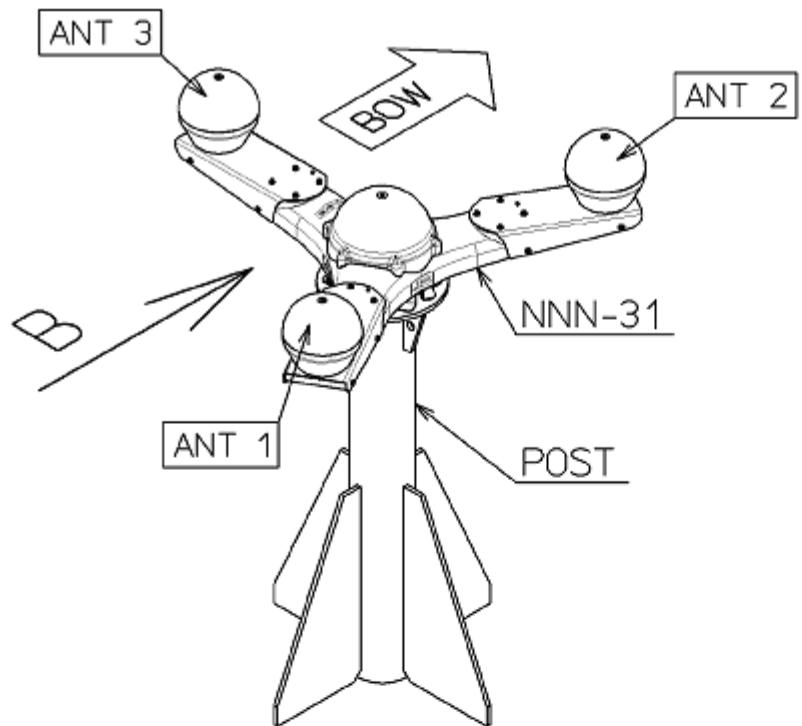

POST Production Example

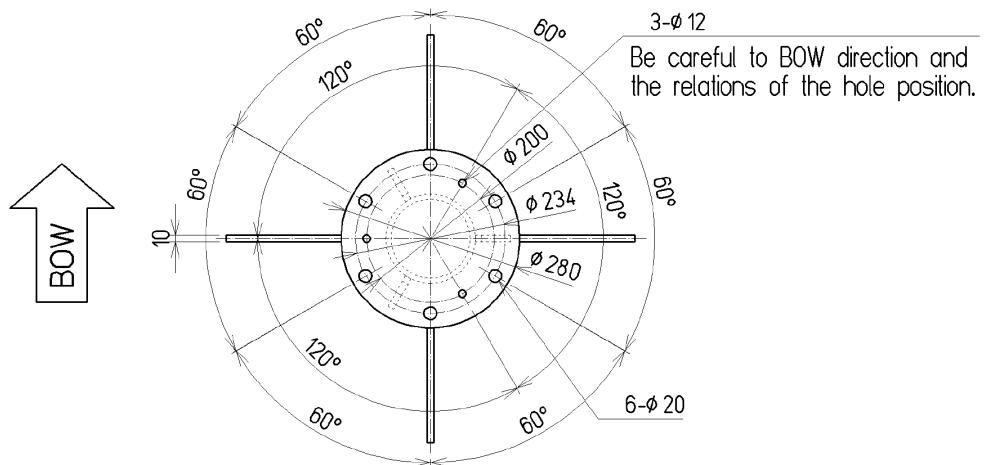


●About Bird Repellent Rod (MPXP34012A)

装備要領 / Installation Procedure


セパレータをはがして下さい。

Peel off the film.

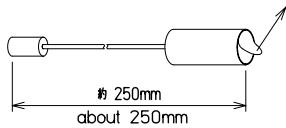


装備参考例 (JLR-20/21)

An Example of Installation on JLR-20/21.

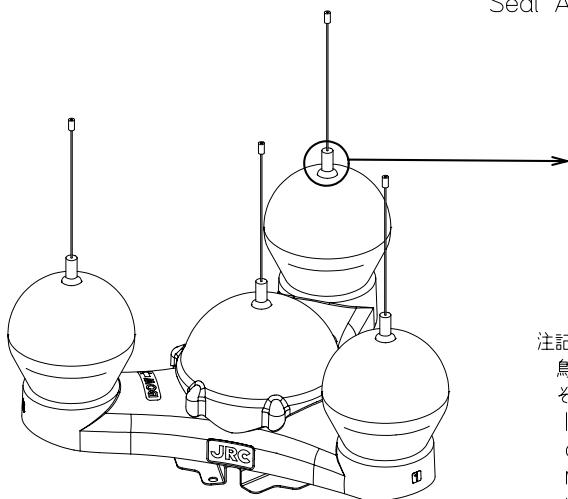

装備参考例 (JLR-30/31)

Examples of Installation on JLR-30/31.

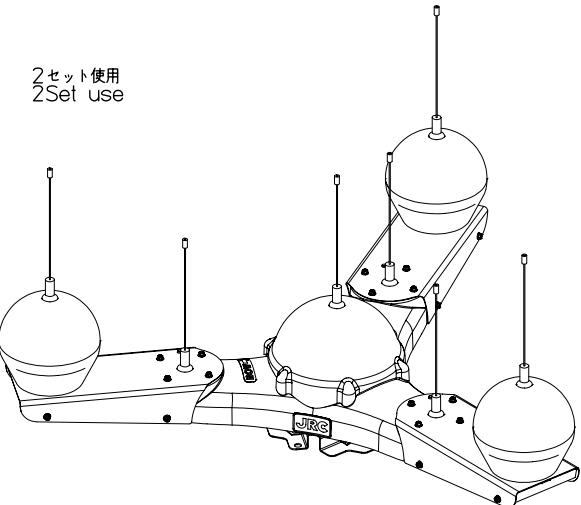


2セット使用
2Set use

パッケージリスト / Packing List

| | | | | | |
|--|----------------------------------|--|--|--|--|
| | シール剤 X 1個 Seal Adhesive X 1pc | | 装備要領書 X 1枚 Installation Procedure X 1pc | | 鳥よけ棒 X 4個 Bird Repellent Rod x 4pcs |
|--|----------------------------------|--|--|--|--|

汚れを拭取り、シール剤で補強する。(硬化時間 : 24時間以上)

Wipe off the dirt. Install the rod with the aid of Seal Adhesive.(Cure time : more than 24hr)

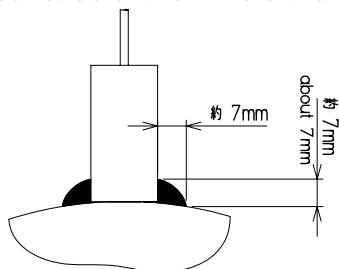


注記 / NOTE

鳥等により力が加わると取れる可能性があります。

その時は新品に交換するか、再度シール剤で補強して下さい。

In case the rod is detached from the antenna by excessive power of blow, replace it by a new one or reinstall it with the aid of seal adhesive.

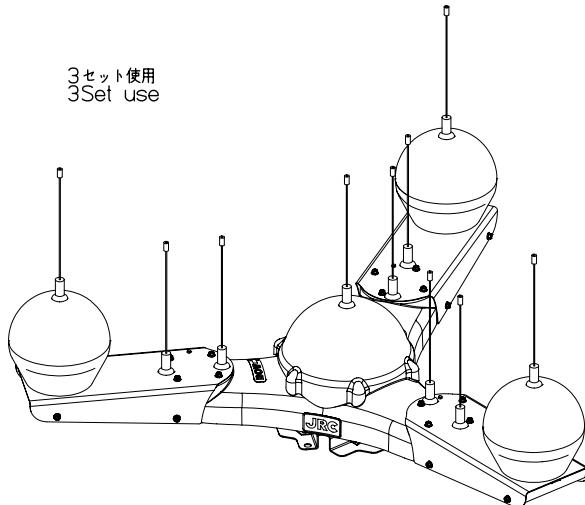

3セット使用
3Set use

MPXP34012A

2.2 Display Unit Installation



WARNING



Install this unit at least 1 m away from any magnetic compasses. Installation near a magnetic compass may result in interference with the magnetic compass, and may result in an accident.



CAUTION




Use the indicated screws when installing the display unit to a stable wooden surface. Failure to do so may result in the display unit falling over, causing injury or property damage.

The installation stand (trestle) is used and this display can be set up in desk-top, the wall, and the ceiling, etc.

Select installation features according to the following standard.


Read the following instructions and mount the unit accordingly.

- (1) Loosen the unit knob, and disconnect the mount from the unit.
- (2) Use the included screws to secure the mount where desired.
- (3) Return the unit to the mount, and tighten it with the knob.

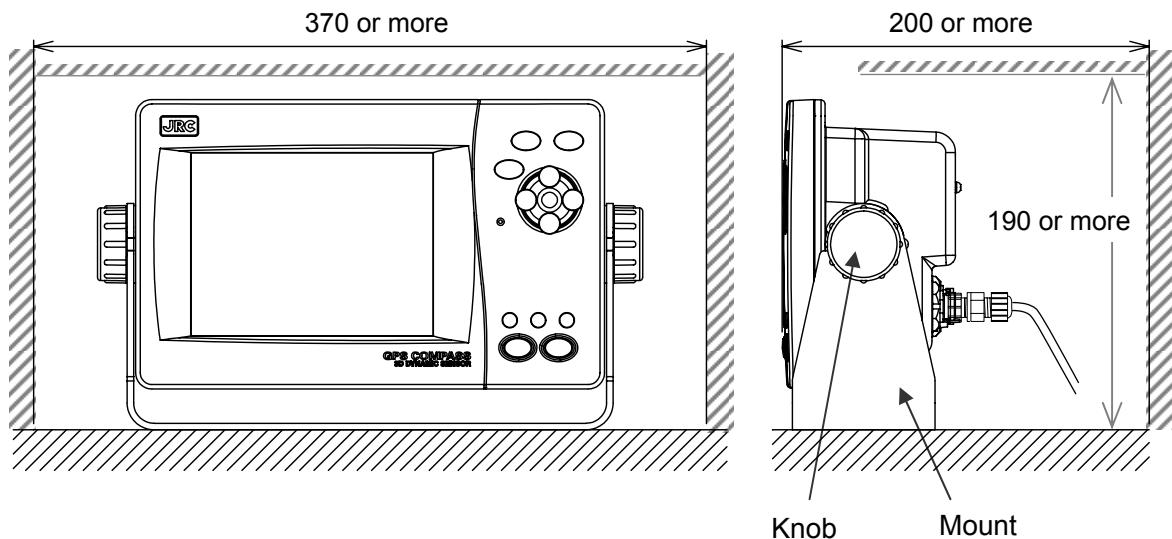

4-#6.5

Mount (bottom)

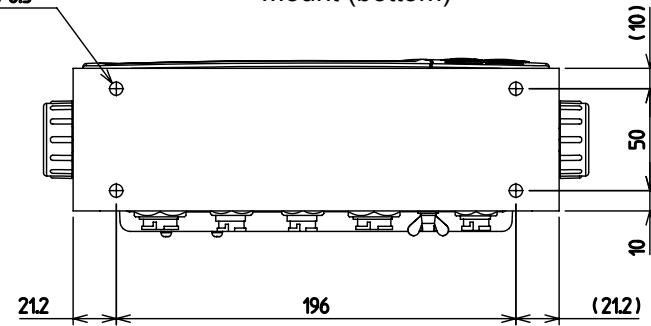


Required Space

(Unit: mm)




● How to Flush Mount the Display

< For fixing the Display from the rear side with four flush mount screws of the option >

Refer to the diagram shown below for the mount hole and space.

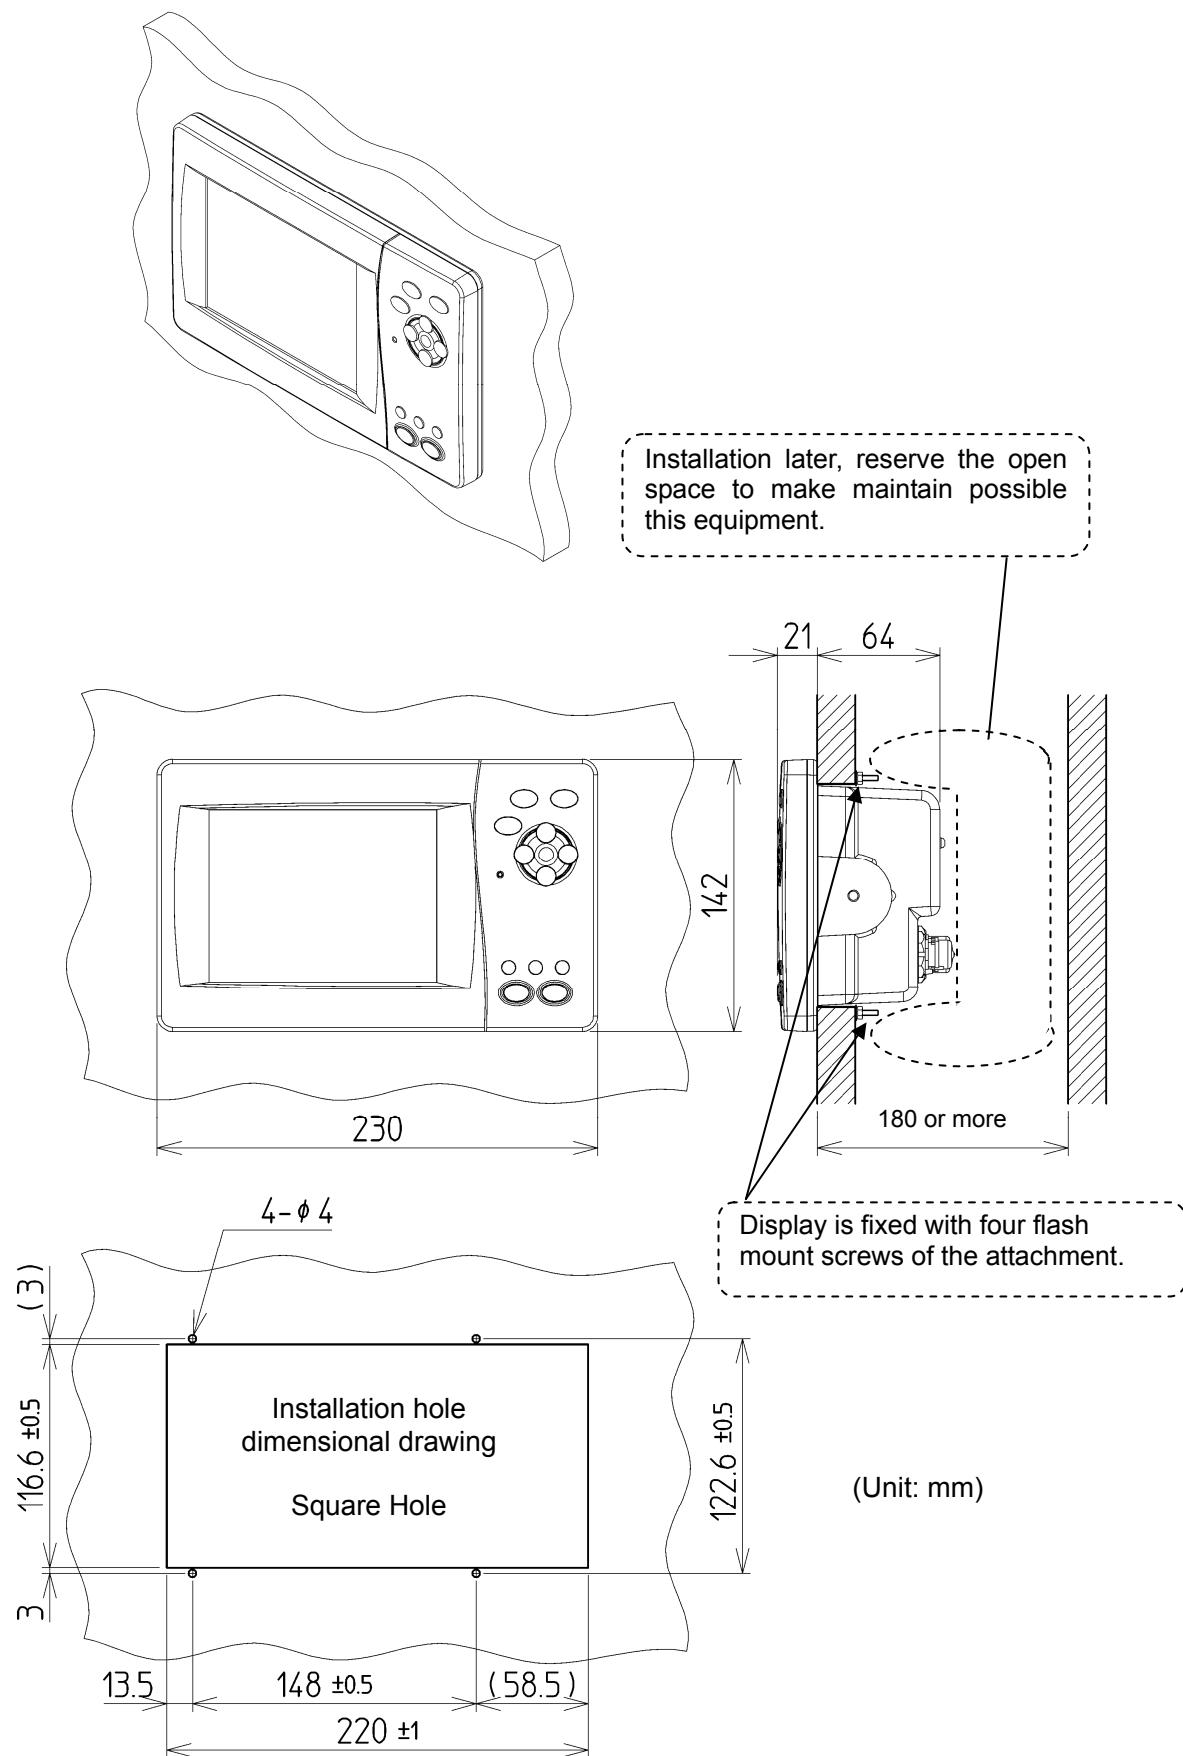

<The Display is fixed from the front side with flash mount kit (MPBC43664) of the option >
 Refer to the diagram shown below for mount hole and space.

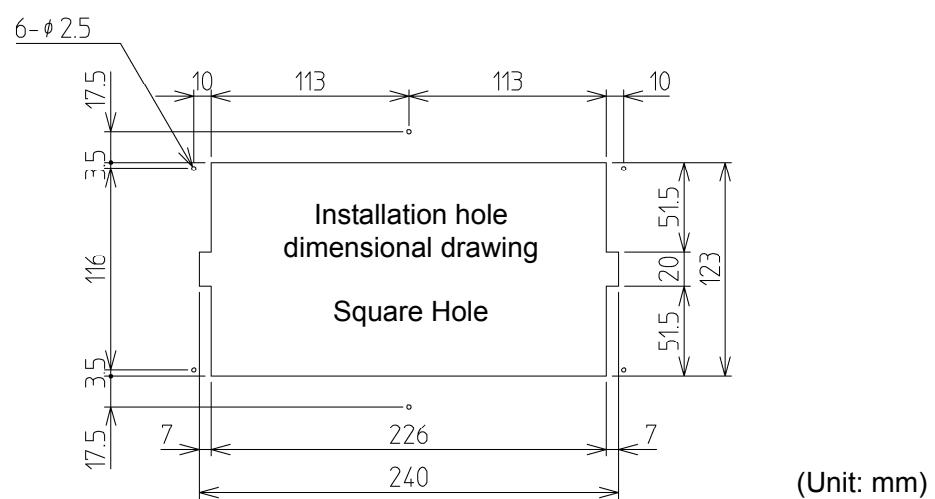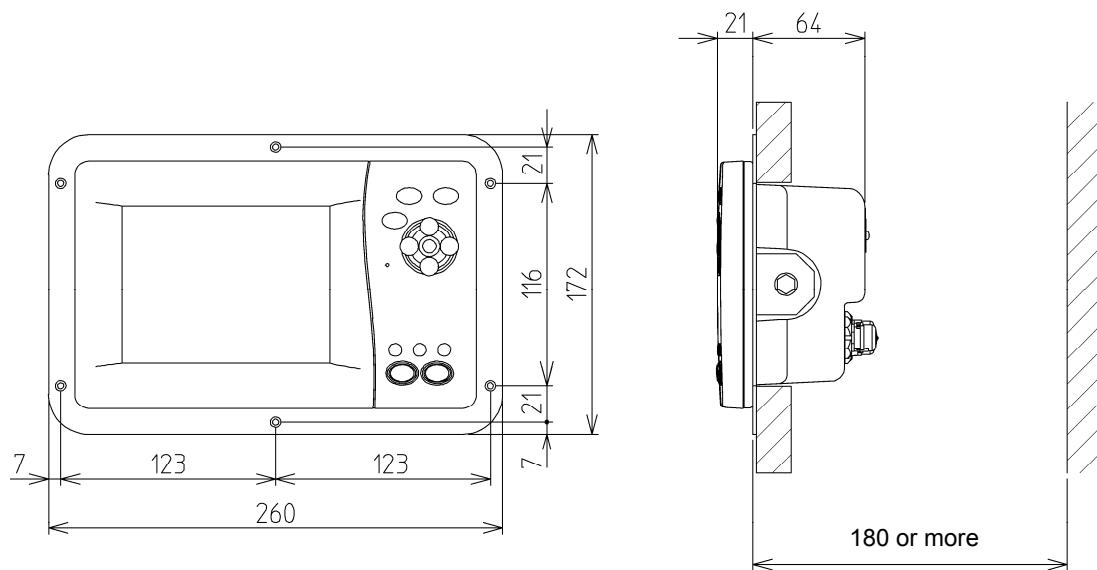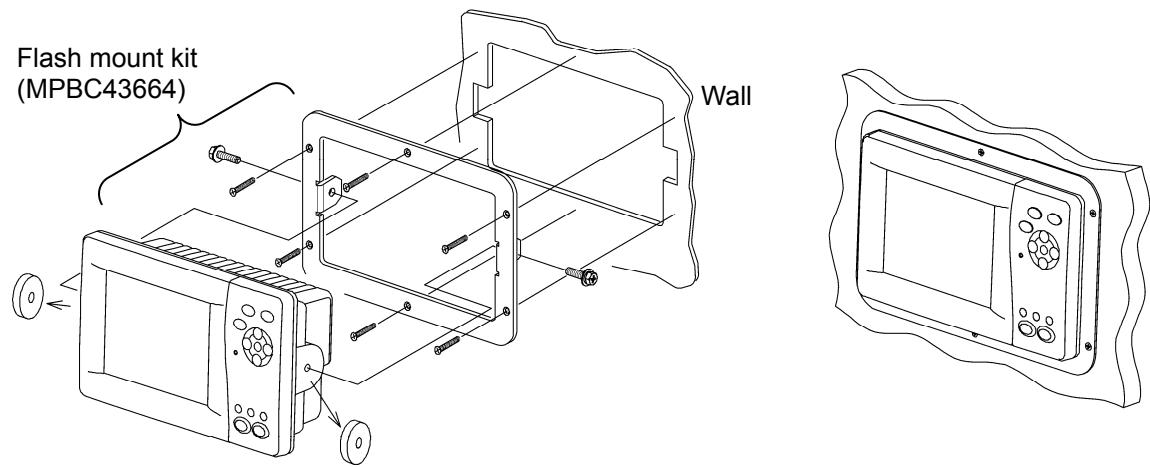


2.3 Cable Connection

● Unit (Rear Connector)


Maintenance Terminal

Used to connect to a computer (RS-232C).
(Shall be used by service engineer only.)

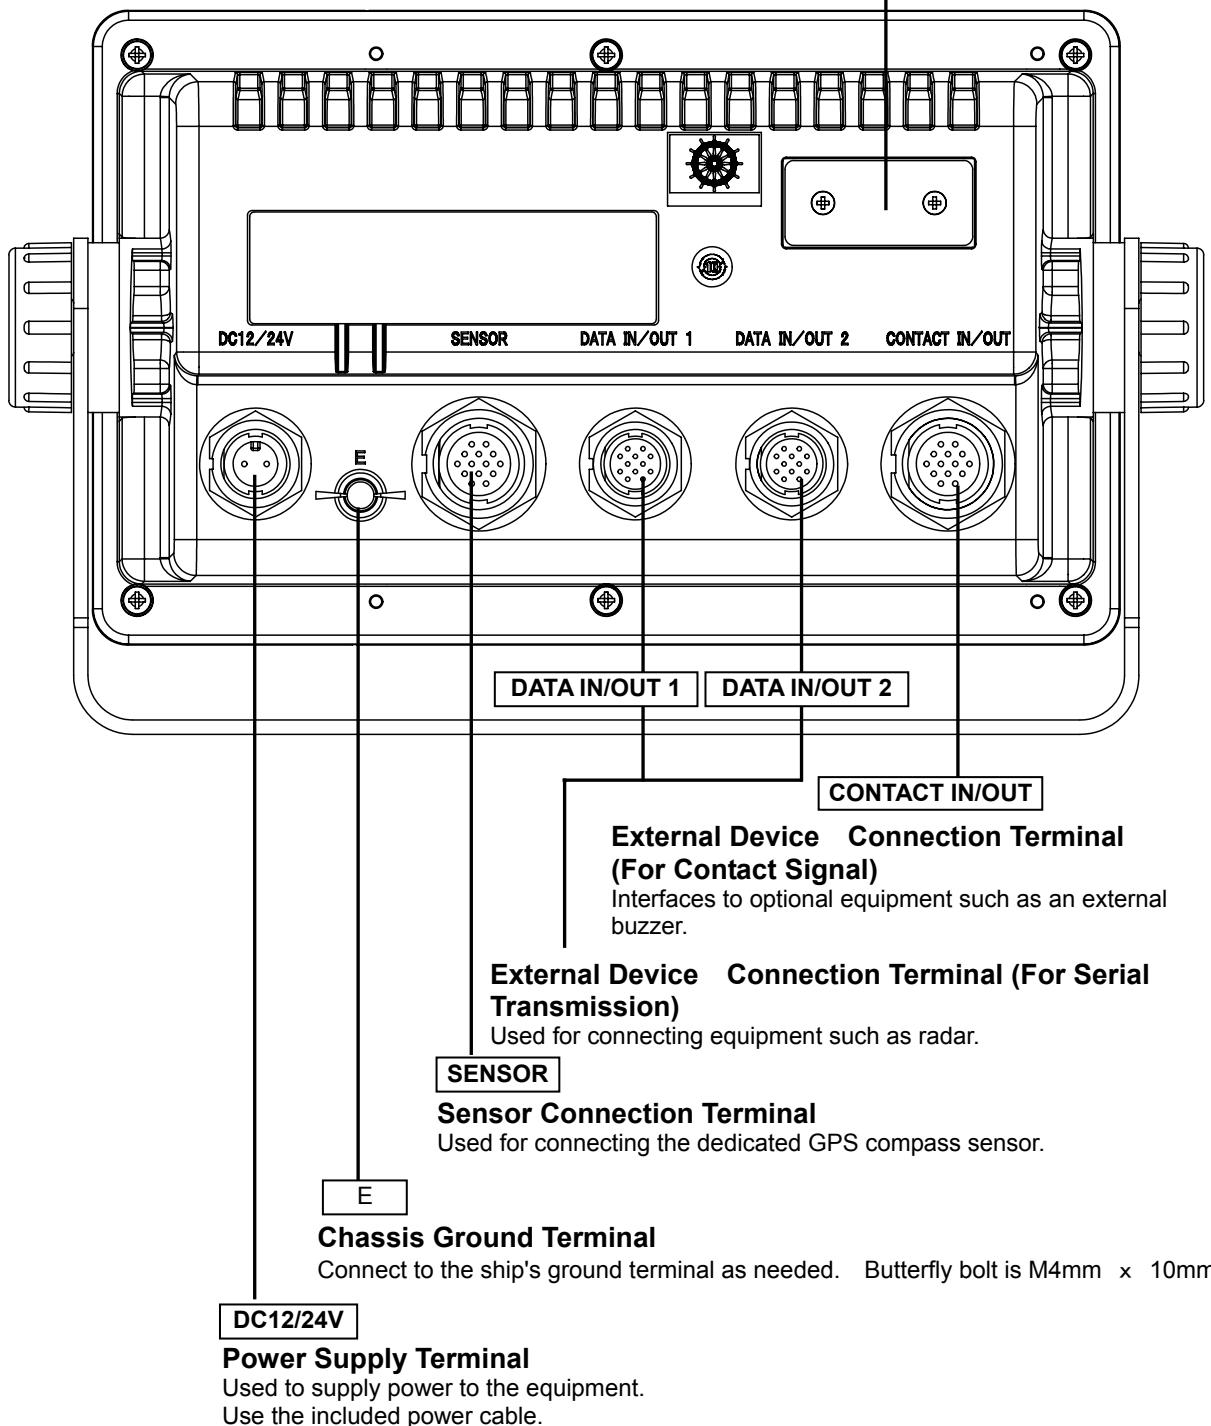

[Power Supply Connector]


DC12/24V (Label name of the back of Display)

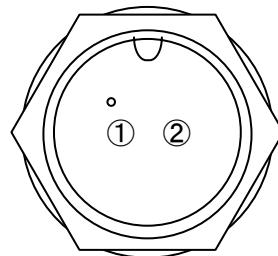

Power Supply Cable: CFQ-7257 (included)


| Terminal Number (CFQ-7252) | Name | | Explanation |
|----------------------------|----------|--------|--|
| 1 (Black) | DC12/24V | DCIN - | Connect the included power supply cable. |
| 2 (Red) | | DCIN + | The voltage shall be 10.8 - 31.2 V DC. |

Connection Cable Appearance

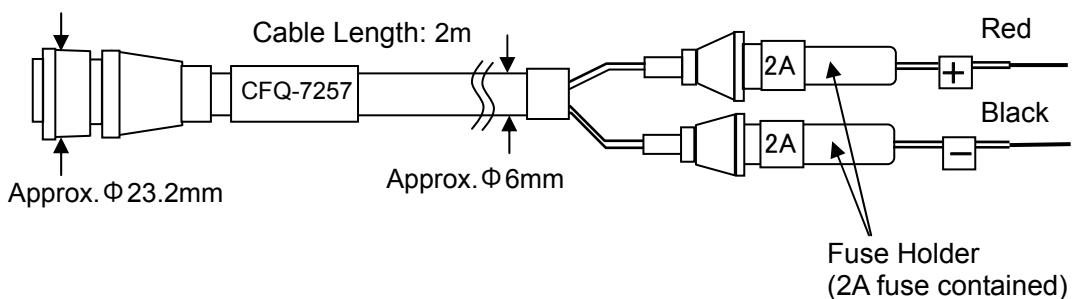


● Noise Filtering

Make a loop with the cable and clamp it with the included Clamp Filter as shown below.

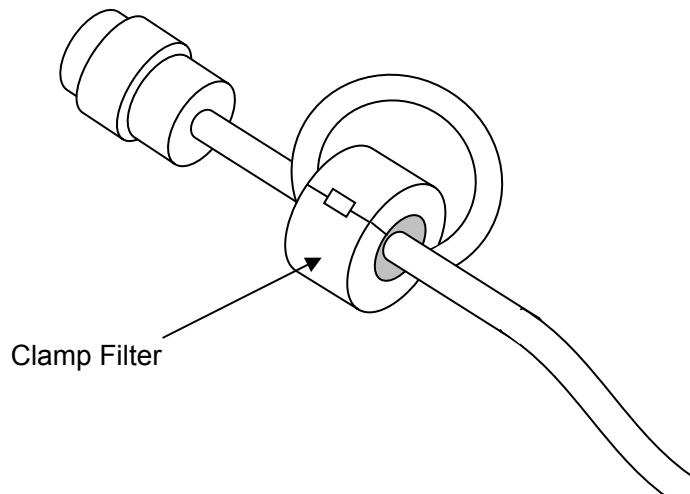


[Sensor Connector]

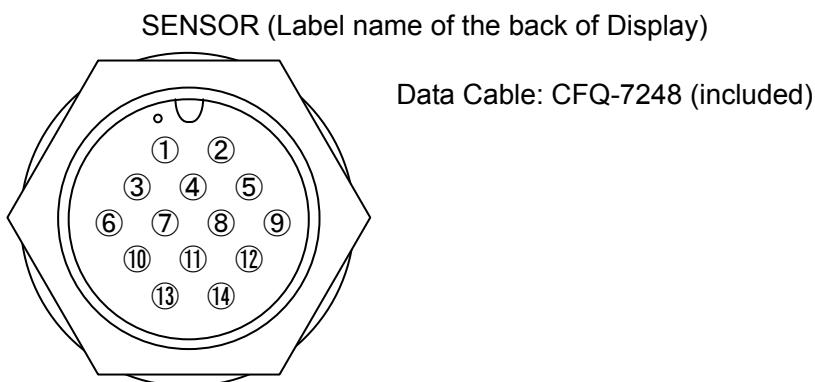


| Terminal Number (CFQ-7248) | Name | | Explanation |
|-------------------------------|---------------------|------|---|
| 1 (Red Thick) | Sensor Power Supply | 13V | Power to the sensor is supplied by the display unit. |
| 2 (Black Thick) | | GND | |
| 3 (Orange) | RXD0 | A | Receives data from the sensor. |
| 4 (Yellow) | | B | |
| 5 (Green) | TXD0 | A | Sends configuration data to the sensor. |
| 6 (Blue) | | B | |
| 7 (Purple) | Sensor Through | SD-A | Outputs data from the sensor through [DATA IN/OUT 1]. |
| 8 (Grey) | | SD-B | |
| 9 (White) | | SC-A | |
| 10 (Black Thin) | | SC-B | |
| 11 (Brown) | TXD4B (*1) | A | Sends configuration data to the beacon receiver. (Option cable required) |
| 12 (Pink) | | B | |
| 13 (Light Blue) | Unused | | |
| 14 (Light Green) | | | |

*1 : Outputs parallel to the DATA IN/OUT 2 connector 9 and 10 pins. (Refer to page 2-27)

Connection Cable Appearance

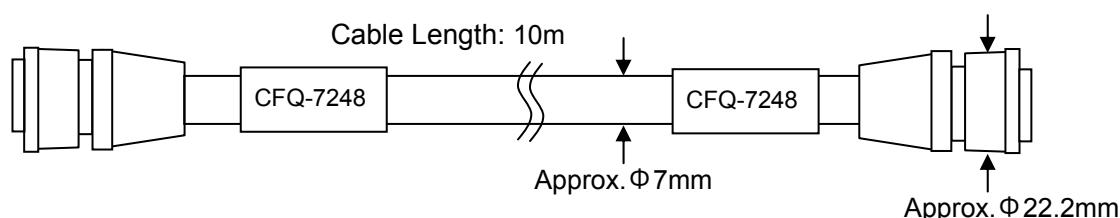


- Sensor Through Terminal: The signal line are routed in the display unit as shown below.

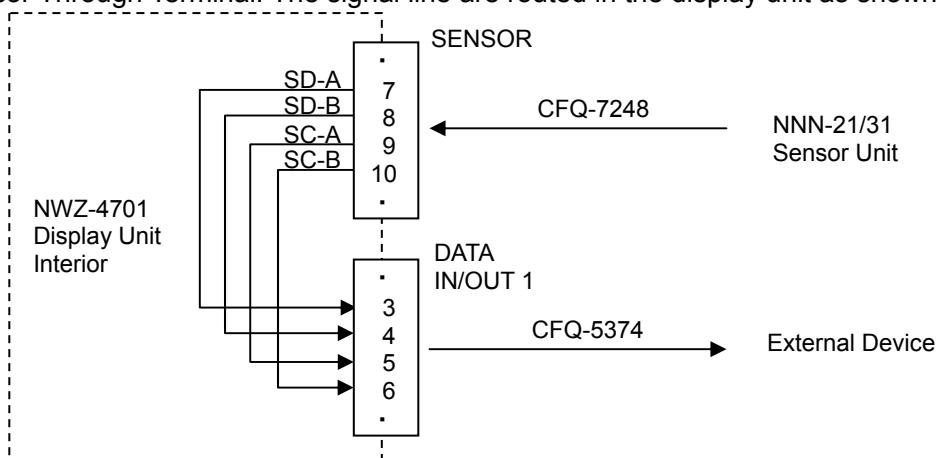


● Beacon Connection

- JLR-4341 or JLR-4331 (DGPS Receiver) Connection
Use the option cable (CFQ-7250).

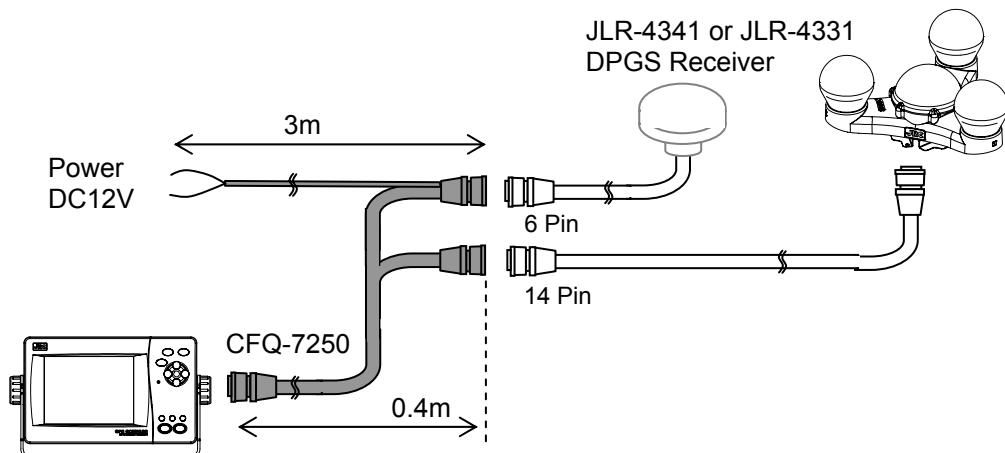

* Connecting JLR-4331 does not allow DGPS,
but allows receiving only meteorological information. (Refer to the following table.)

- Beacon Receiver Connection
Modify the option cable (CFQ-7250).

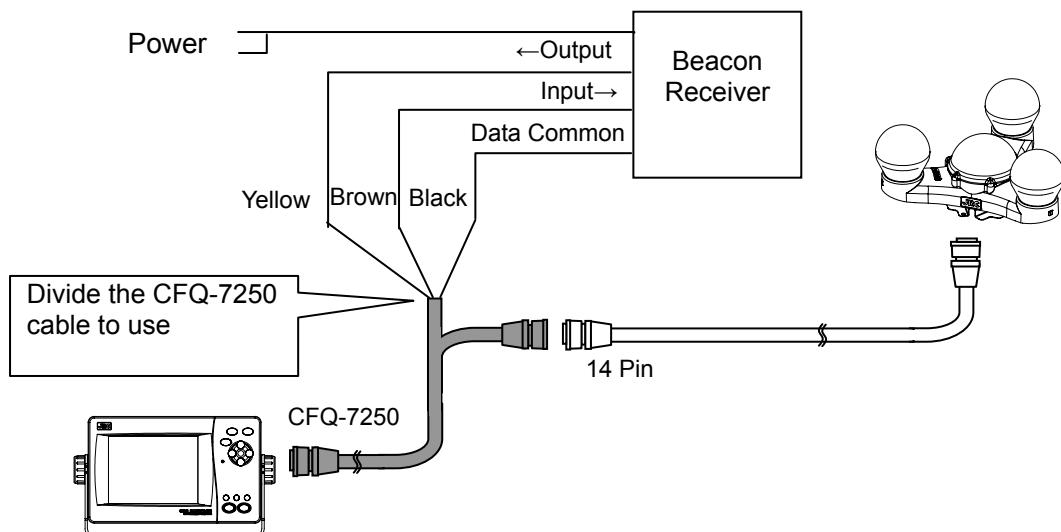


■ Features and installation procedure for beacon receiver

| Types of DGPS receivers | Competitor's Beacon receiver | JLR-4331 receiver | JLR-4341 receiver |
|---|---|---|-------------------|
| Enhanced accuracy of The position measured by GPS compass (DGPS conversion) | ○ | × | ○ |
| Receiving weather information | ○ | ○ | ○ |
| Setting for Data OUT4/IN4 | Selecting beacon/**** allows the DGPS receiver to be used as a beacon receiver. | Selecting 4341/**** allows the DGPS receiver to be used as a beacon receiver. | |

* Refer to "5.3.7. Data I/O Settings (DATA I/O)" for installation.

● Cable Length

- For cable lengths of less than 30 m
Use the option cable (CFQ-7249).

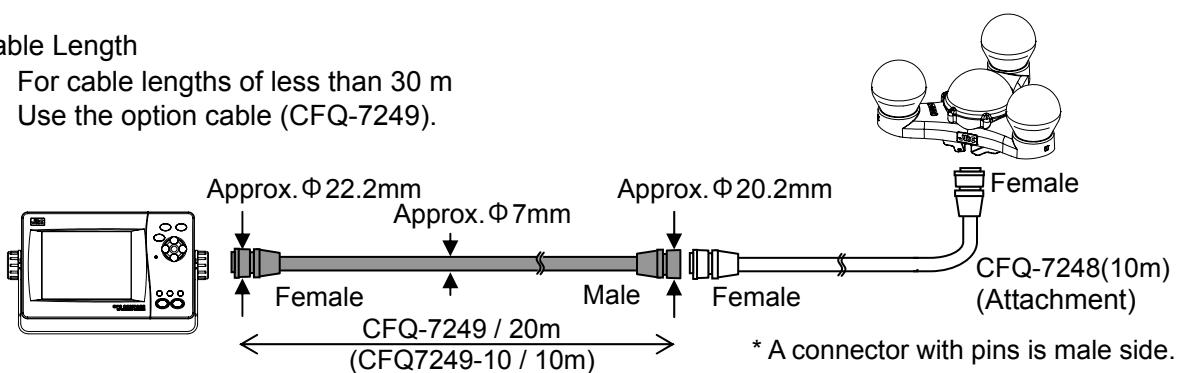


< Waterproofing method for connectors of extended line >

1. Waterproof by a self-bonding tape after confirming the secure connection of the connectors.

Roll up a self-bonding tape with applying the tensile force so that the length of the tape will be twice longer than normal. Overlap half of the tape when rolling. Repeat three times to make it three-layered. Roll from the display side to the sensor side. The diameters of a connector and a cable are different; therefore, roll up those connection sections with extreme care to prevent water intrusion. After completing, press the tape with fingers for secure attachment

2. Wrap with a PVC tape for protection


Over the self-bonding tape, wrap those sections with a PVC tape for protection (do not put tensile force). Overlap half of the PVC tape when rolling. Repeat three times to make it three-layered. Crimp the end of the wrapped tape without tension. Press the PVC tape with fingers for secure attachment.

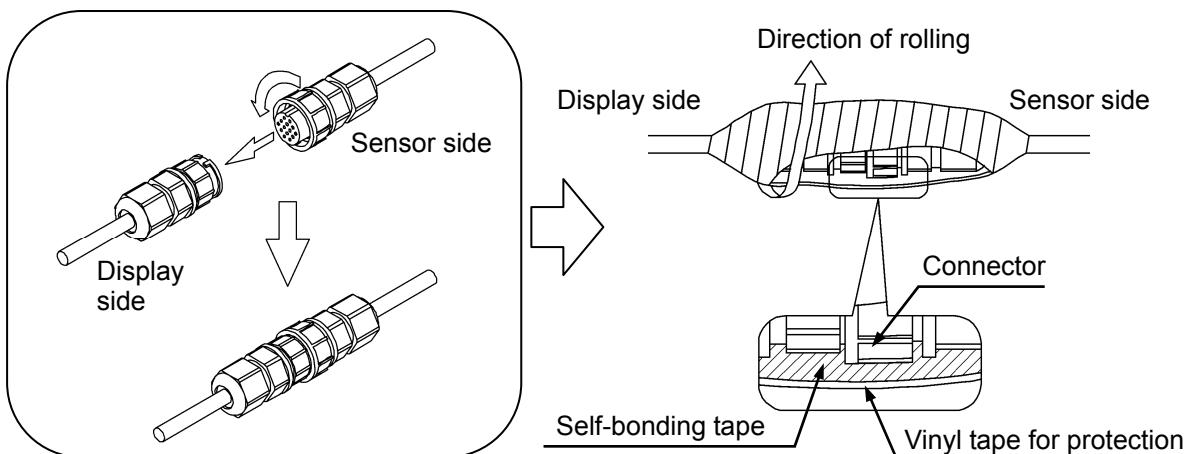


- For cable lengths of 30 m or more

Use the junction box (NQE-7720).


(Maximum of 50 m, composed of included cable (10 m)
plus and extension cable (40 m))

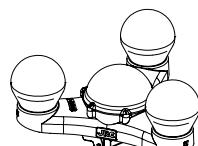


Divide the included CFQ-7248 cable (10 m)

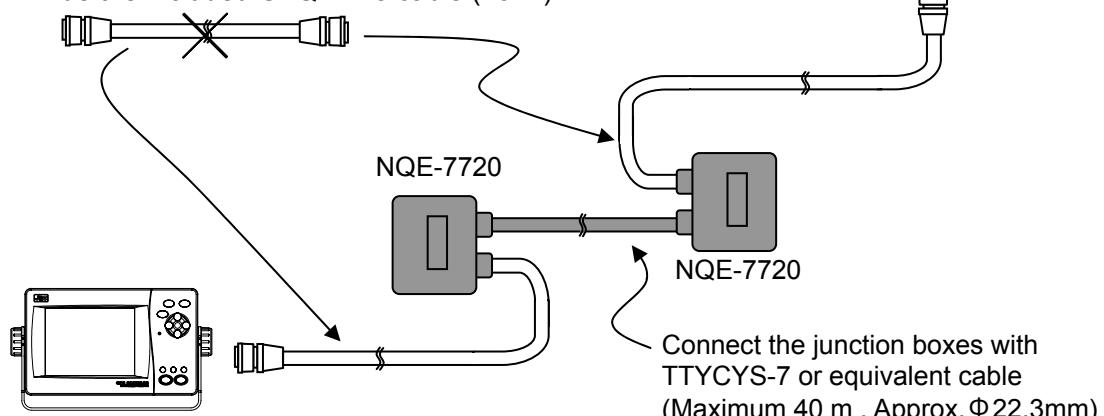



Connect the cut CFQ-7248 cable and junction boxes

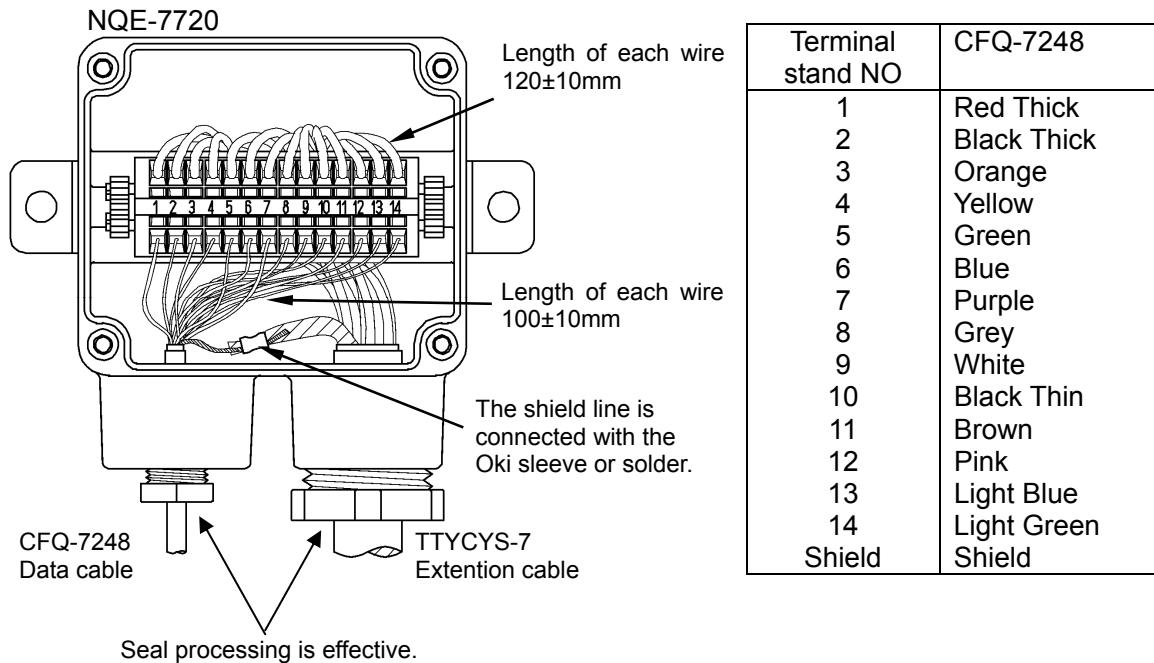


Junction box NQE-7720(Option) Externals chart
(Installation metal fittings MPBP31612 are not included.)

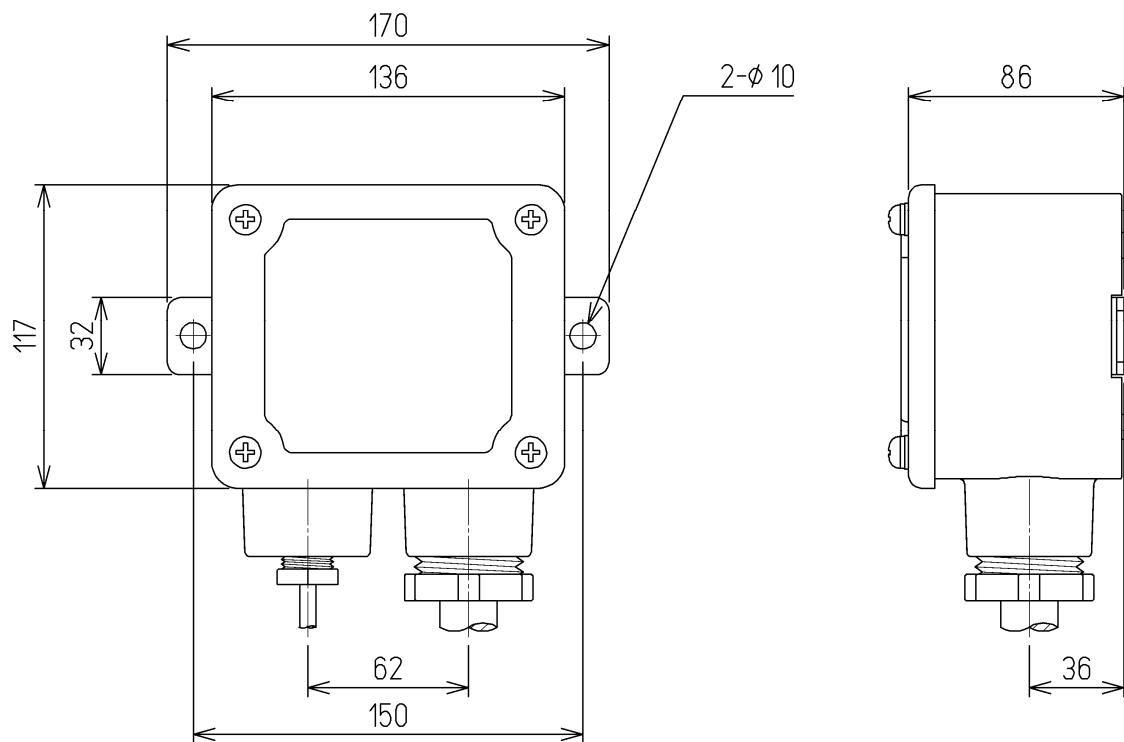

Option metal fittings (Stainless-steel) MPBP31612 Bundled list
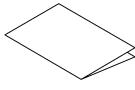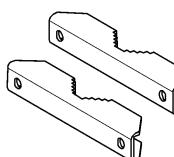
| | | | | | |
|---|---|---|----------------------------|-------------------------------|------------------------|
|  |  |  | 0 0 0 0 Flat washer X 4 | 0 0 Spring lock washer X 2 | 0 0 0 0 Hex nut X 4 |
|---|---|---|----------------------------|-------------------------------|------------------------|


Select one about M8 volt length according to the diameter of the installed prop.

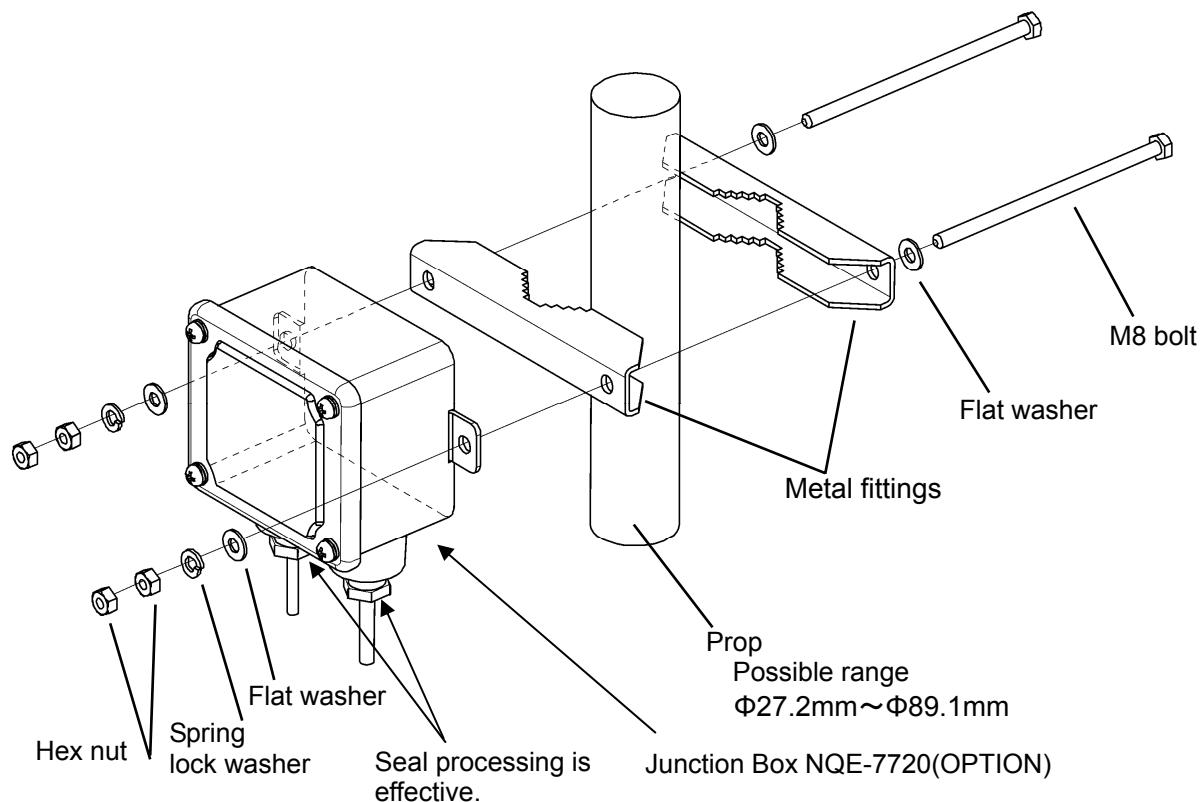

● Connection with Sub Display Unit

Connect by one of the following methods:


1. Connection with using the optional Y cable (CFQ-7251) – recommended method

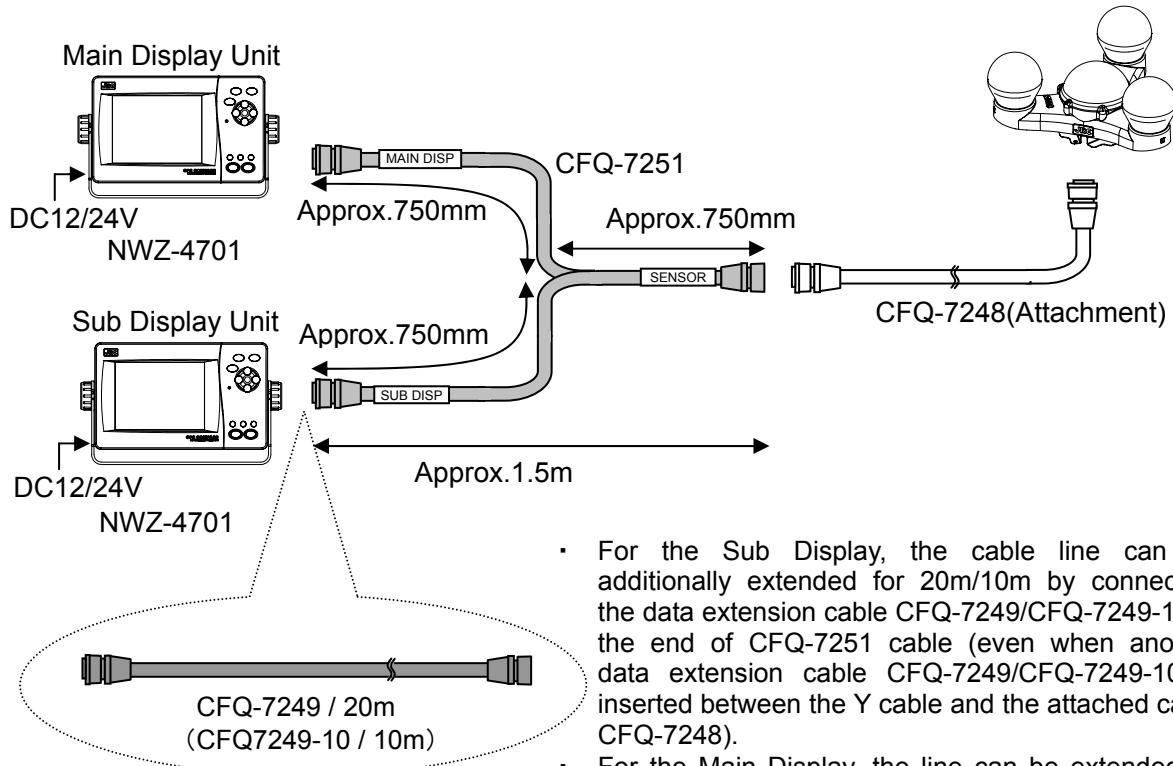

- For the Sub Display, the cable line can be additionally extended for 20m/10m by connecting the data extension cable CFQ-7249/CFQ-7249-10 to the end of CFQ-7251 cable (even when another data extension cable CFQ-7249/CFQ-7249-10 is inserted between the Y cable and the attached cable CFQ-7248).
- For the Main Display, the line can be extended by the same way only when CFQ-7249/CFQ-7249-10 is not inserted between the Y cable and the attached cable CFQ-7248.

To select the Sub Display, set “SUB” for DISPLAY TYPE by referring to “5.4.5 Product Type Configuration.” (Factory setting is “MAIN.”)


2. Connection with using the optional data extension cable CFQ-7249 and attached CFQ-7248
 (Previously mentioned method 1 is recommended.)

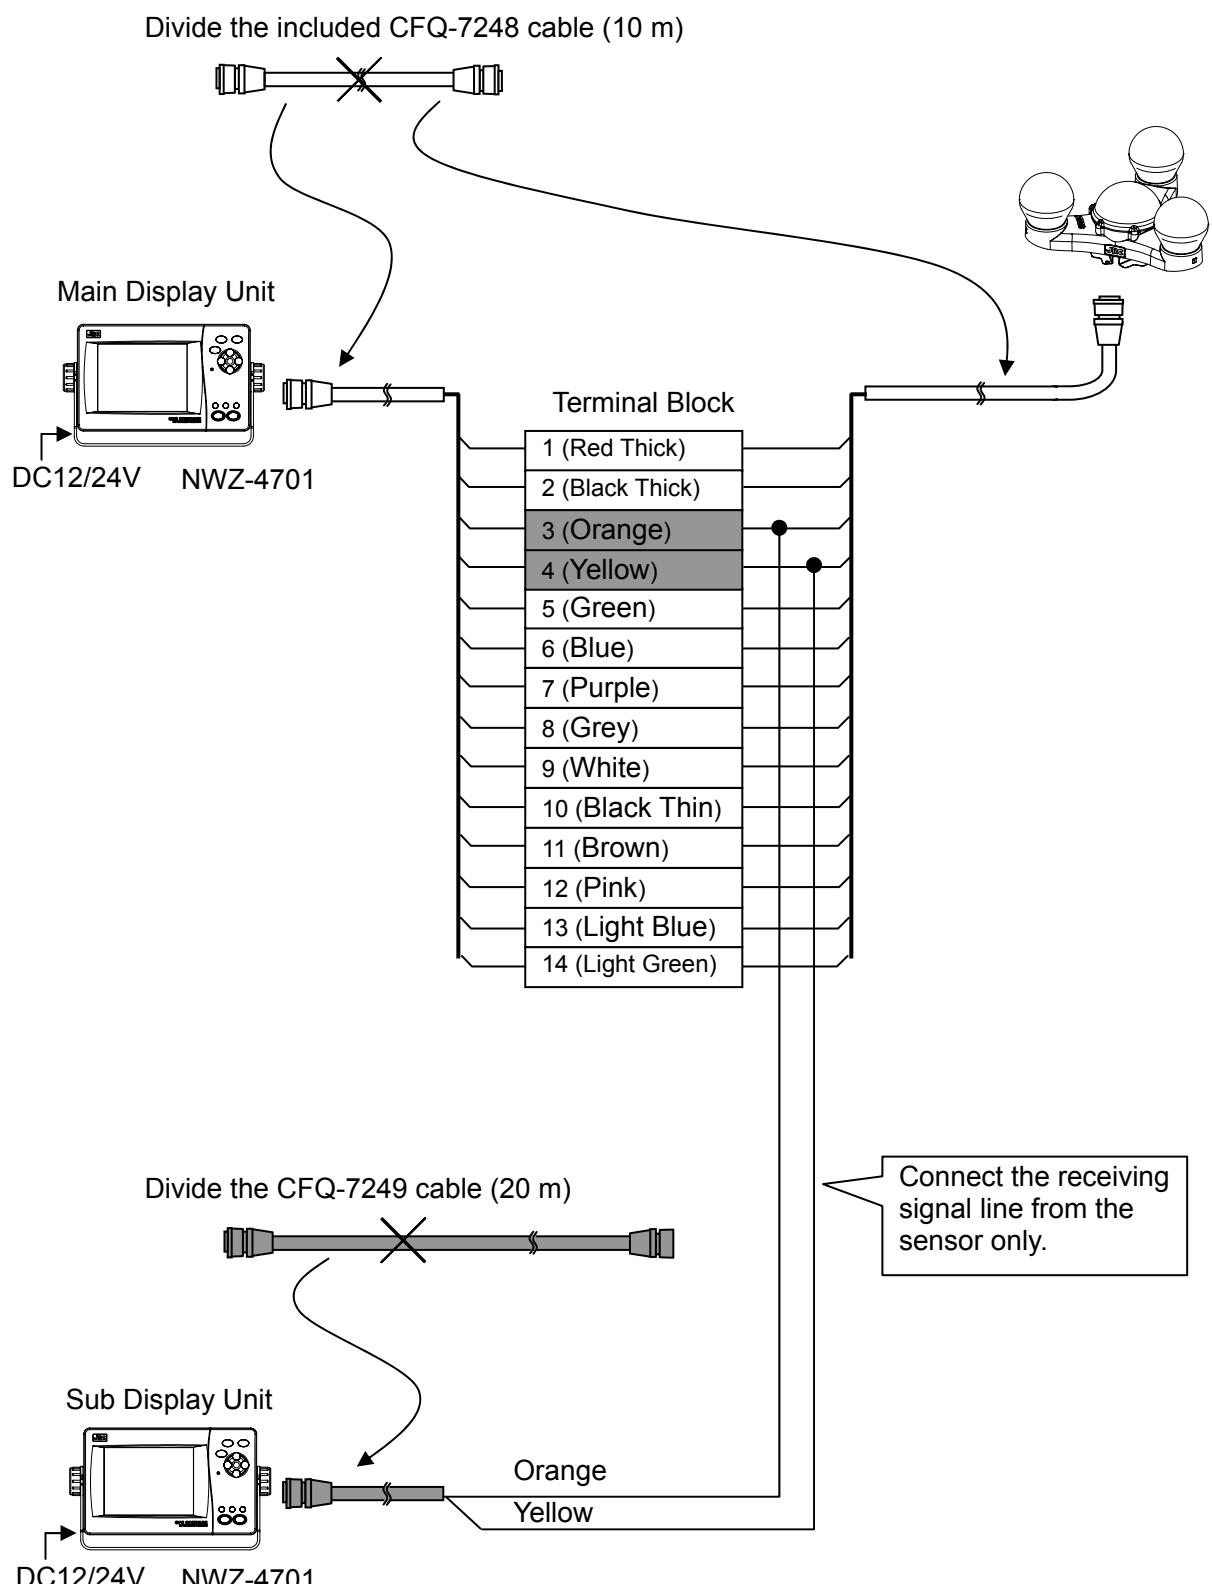

To select the Sub Display, set “SUB” for DISPLAY TYPE by referring to “5.4.5 Product Type Configuration.” (Factory setting is “MAIN.”)

[Data IN/OUT 1 Connector]

DATA IN/OUT 1 (Label name of the back of Display)

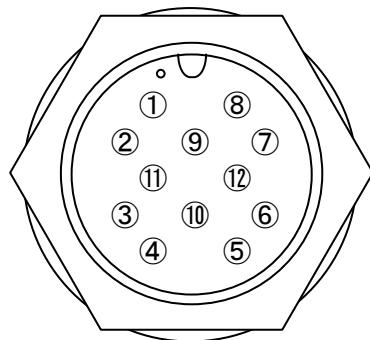


Data Cable: CFQ-5374 (option)

| Terminal Number (CFQ-5374) | Name | | Explanation |
|----------------------------|------------------|---------|--|
| 1 (Brown) | Unused | | |
| 2 (Red) | | | |
| 3 (Orange) | Sensor Through | SD-A | Output signal is sent from this terminal by connecting the sensor. |
| 4 (Yellow) | | SD-B | Outputs as defined by "Sensor Through" configuration. (Refer to "5.3.7 Data I/O Settings (DATA I/O)") |
| 5 (Green) | SC-A | | Outputs clock when AD-10 configuration is performed for "Sensor Through". |
| 6 (Blue) | | SC-B | This port is not used excluding AD-10. (*1) |
| 7 (Purple) | DATA OUT3 (TXD3) | A | Outputs as defined by "Data OUT 3" configuration. (Refer to "5.3.7 Data I/O Settings (DATA I/O)") |
| 8 (Grey) | | B | |
| 9 (White) | Unused | | |
| 10 (Black) | | | |
| 11 (Pink) | | GND ISO | Connects serial transmission cable ground. |
| 12 (Light Blue) | | GND | Chassis ground |

*1: 4 pins are used for AD-10. Refer to "Output of AD-10 Format" in "5.3.7 Data I/O Settings (DATA I/O)" for details.


Appearance of Connection Cable

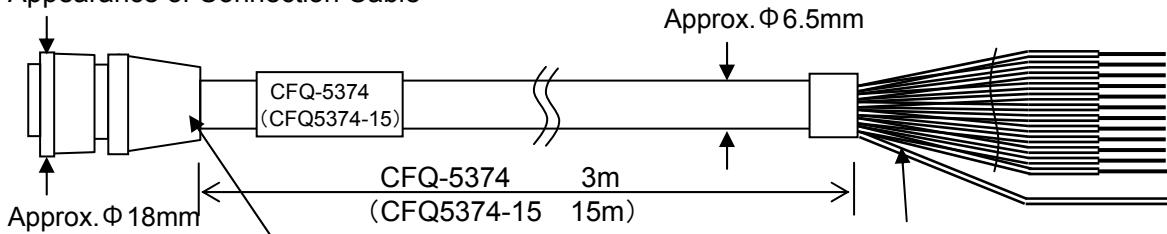

Connector


Product by LTW : LTWCD-12BFFA-L180

External Device

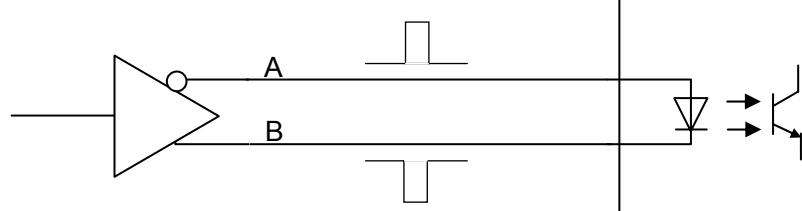

[Data IN/OUT 2 Connector]

DATA IN/OUT 2 (Label name of the back of Display)

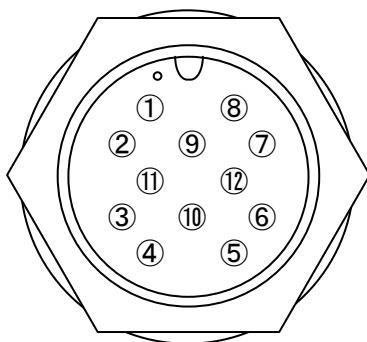


Data Cable: CFQ-5374 (option)

| Terminal Number (CFQ-5374) | Name | | Explanation |
|-------------------------------|---------------------------|---------|--|
| 1 (Brown) | DATA IN4 (RXD4) | A | Receives the tide current data (Data IN4). (Refer to "5.3.7 Data I/O Settings (DATA I/O)") |
| 2 (Red) | | B | |
| 3 (Orange) | DATA OUT1 (TXD1) | A | Outputs as defined by "Data OUT 1" configuration. (Refer to "5.3.7 Data I/O Settings (DATA I/O)") |
| 4 (Yellow) | | B | |
| 5 (Green) | DATA OUT1 (SCK1) | A | Outputs clock when AD-10 configuration is performed for "Data OUT 1". |
| 6 (Blue) | | B | This port is not used excluding AD-10. (*2) |
| 7 (Purple) | DATA OUT5 (TXD5) | A | Outputs as defined by "Data OUT 5" configuration. |
| 8 (Grey) | | B | (Refer to "5.3.7 Data I/O Settings (DATA I/O)") |
| 9 (White) | DATA OUT4 (TXD4B) (*1) | A | Outputs as defined by "Data OUT 4" configuration. |
| 10 (Black) | | B | (Refer to "5.3.7 Data I/O Settings (DATA I/O)") |
| 11 (Pink) | | GND ISO | Connects serial transmission cable ground. |
| 12 (Light Blue) | | GND | Chassis ground |

*1 : Outputs parallel to the SENSOR connector 11 and 12 pins. (Refer to page 2-19)

*2: 4 pins are used for AD-10. Refer to "Output of AD-10 Format" in "5.3.7 Data I/O Settings (DATA I/O)" for details.


Appearance of Connection Cable

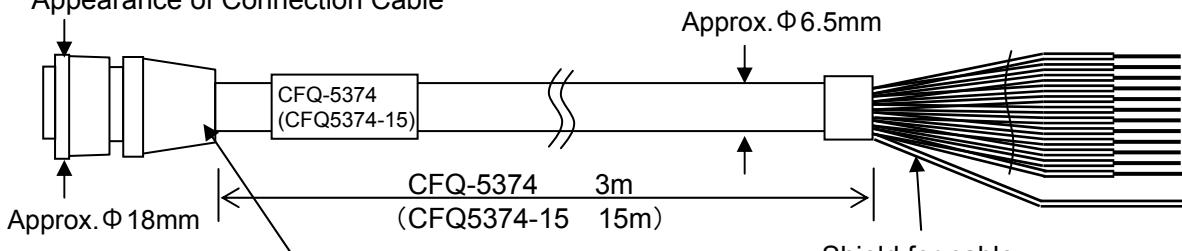


Connector

Product by LTW : LTWCD-12BFFA-L180

External Device

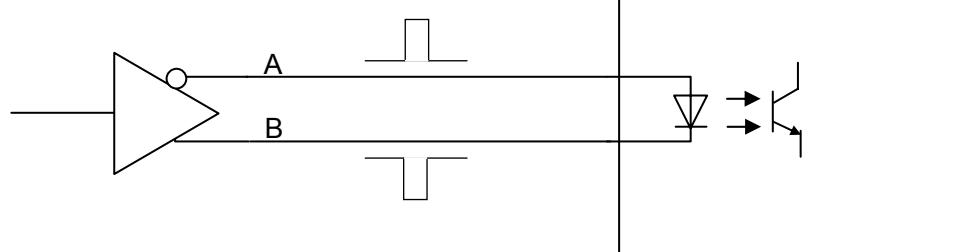

- Output connection of DATA OUT4 (9 and 10 pins of Data IN/OUT2 connector)
DATA OUT4 connects inside the display unit as shown in the following figure.

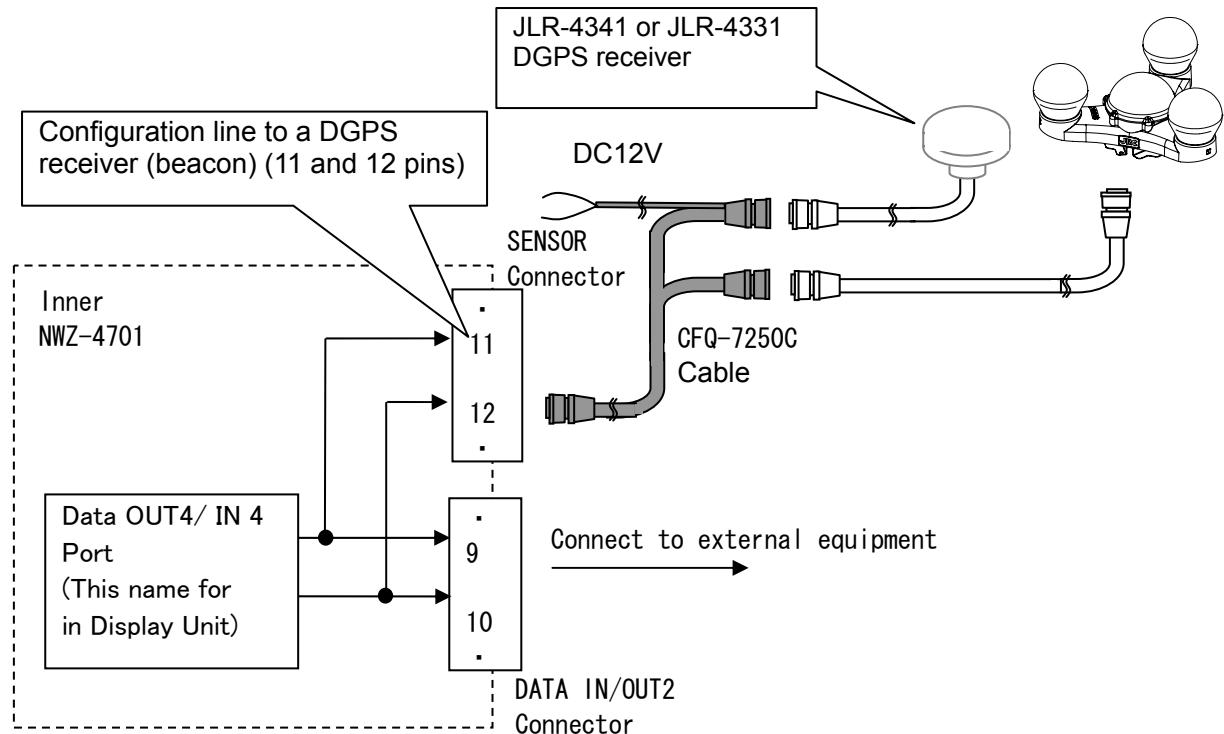


Attention

When connecting a beacon receiver, Data OUT4/IN4 port is set to beacon/**** and configuration data is sent from the 11 and 12 pins of SENSOR connector to the beacon receiver; however, be aware that, at that time, the same data (the configuration data to the beacon receiver) is also led to the 9 and 10 pins of Data IN/OUT2 connector connected inside.
For this reason, do not connect external equipment to the output of the 9 and 10 pins of the Data IN/OUT2 connector when using the beacon receiver.

[Contact Signal IN/OUT Connector]

CONTACT IN/OUT (Label name of the back of Display)

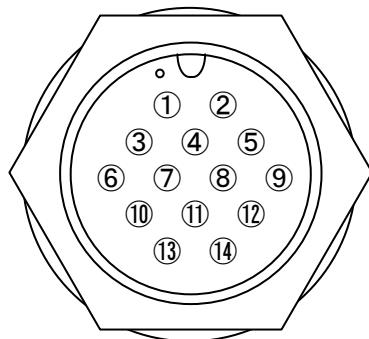


Data Cable: CFQ-5404 (option)

| Terminal Number (CFQ-5404) | Name | | Explanation |
|-------------------------------|------------------|--------|---|
| 1 | Unused | | |
| 2 | | | |
| 3 | | | |
| 4 (Yellow) | Contact Output 0 | COM | Outputs external buzzer 1. (Outputs when alarm is generated) (For special purpose usage) |
| 5 (Green) | | NO | |
| 6 (Blue) | | NC | |
| 7 (Purple) | Contact Output 1 | COM | Outputs contact signal (log pulse). (Refer to "5.3.7 Data I/O Settings (DATA I/O)") |
| 8 (Grey) | | NO | |
| 9 (White) | | NC | |
| 10 (Black) | Contact Output 2 | COM | Outputs external buzzer 2. (Outputs when alarm is generated) (For general use. Here is used usually.) |
| 11 (Pink) | | NO | |
| 12 (Light Blue) | | NC | |
| 13 (Light Green) | Contact Input | ACKIN+ | Clears [Contact Output 2]. |
| 14 (Light Brown) | | ACKIN- | (by short-circuiting both terminals) |

NO: Normally Open NC: Normally Closed


Appearance of Connection Cable

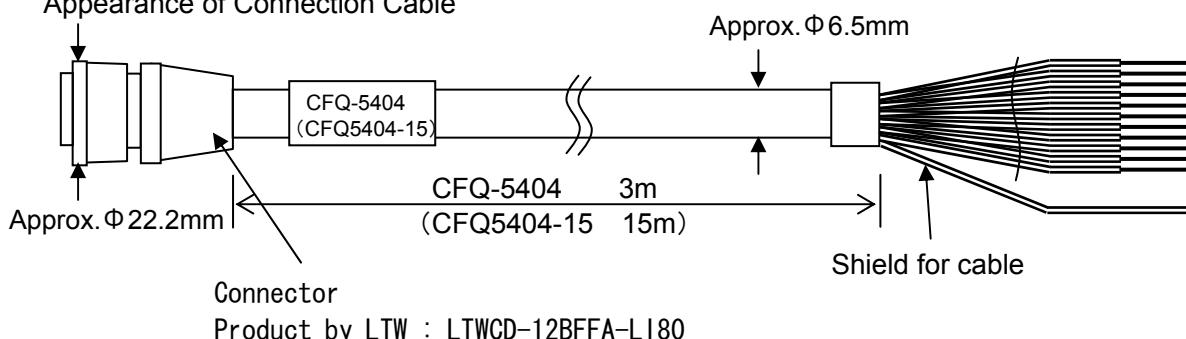

Connector

Product by LTW : LTWCD-12BFFA-L180

Relay

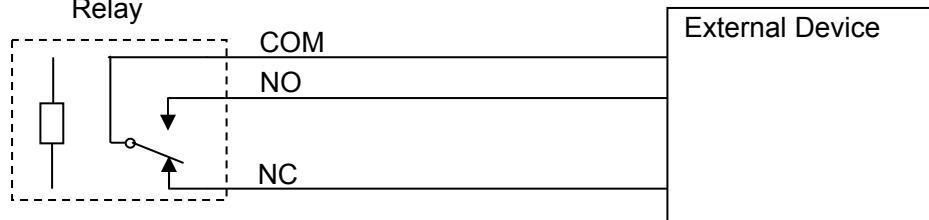


Maximum Contact DC30V / 1.0A

[RS232C Connector]

This port is a dedicated port for updates. (For use by service technicians)


Remove the two screws from the rear, remove the cover, and connect the cable.

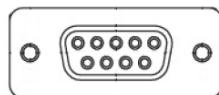


Female (S-type)

| Terminal Number | Name | Explanation |
|-----------------|---------|---|
| 1 | Unused | |
| 2 | TXD | Transmitted data (Being parallel with the Data OUT1 port, outputs the content configured in DATA OUT1.) |
| 3 | RXD | Received data |
| 4 | Unused | |
| 5 | GND ISO | Signal Ground |
| 6 | Unused | |
| 7 | CTS | Transmission possible |
| 8 | RTS | Transmission request |
| 9 | Unused | |

RS232C Cable

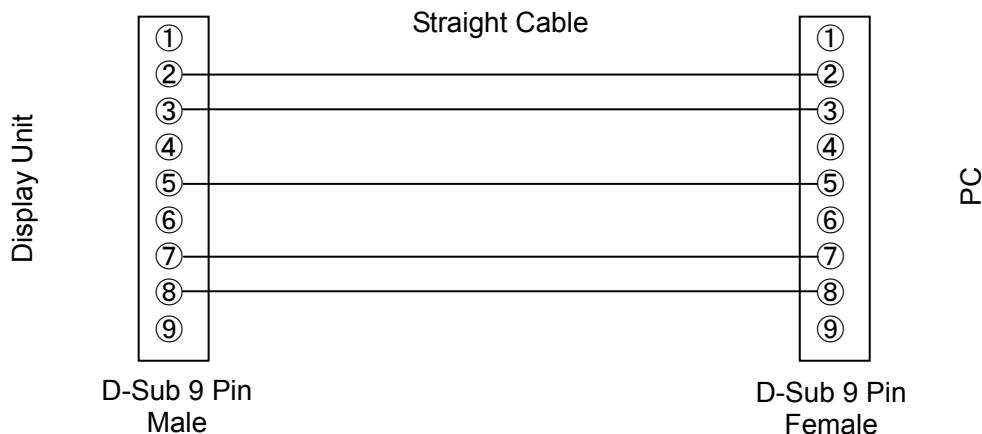


* An all-pin cable can also be used.

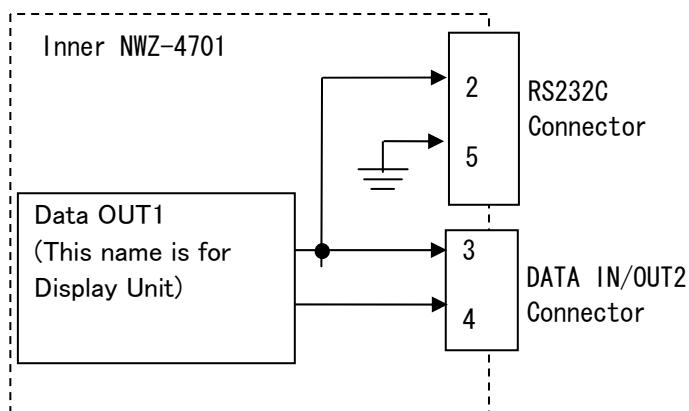

● GPS Repecon Connection


The "NQA-4115T GPS Repecon" option can be connected for repeater (90x) drive.
Use the CFQ-5374 option cable, and connect the DATA IN/OUT 1 or 2 connector to the GPS Repecon.

The data output format is NSK (JRC radar format). (The display unit outputs "NMEA" data as default)
Refer to the "NQA-4115T GPS Repecon" instruction manual for details.

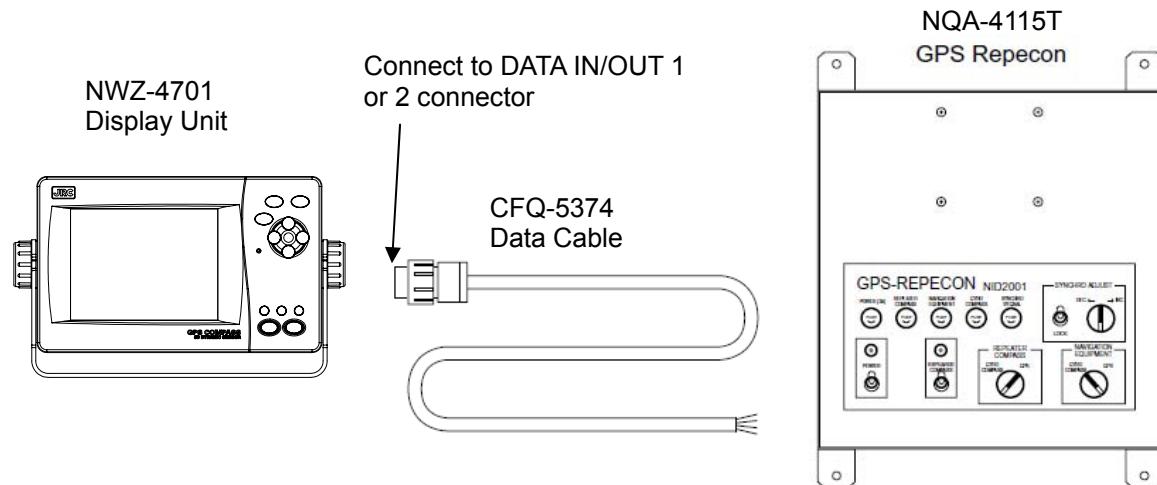

- ① Connect the AC 100 V power supply to the AC 100 V R1, R2 connectors.
- ② Connect the terminal configured for NSK format output to the NSK RX+, RX- terminals.

| Terminal configured for NSK format output | GPS repecon input terminal |
|---|----------------------------|
| TxD*-A | NSK RX- |
| TxD*-B | NSK RX+ |

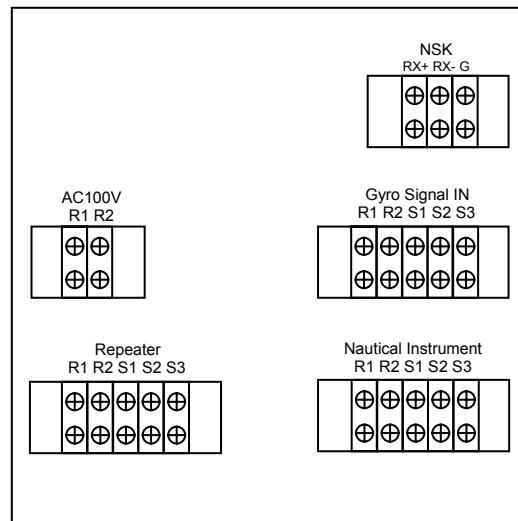


- ③ Connect the synchronization signal from the gyro compass to the synchronization signal IN terminal.
- ④ Supply signals from Repeater and Nautical Instrument terminals to each device.

Section 3 Names and Functions of Each Unit

3.1 NWZ-4701 Display Unit

- Unit (Front)

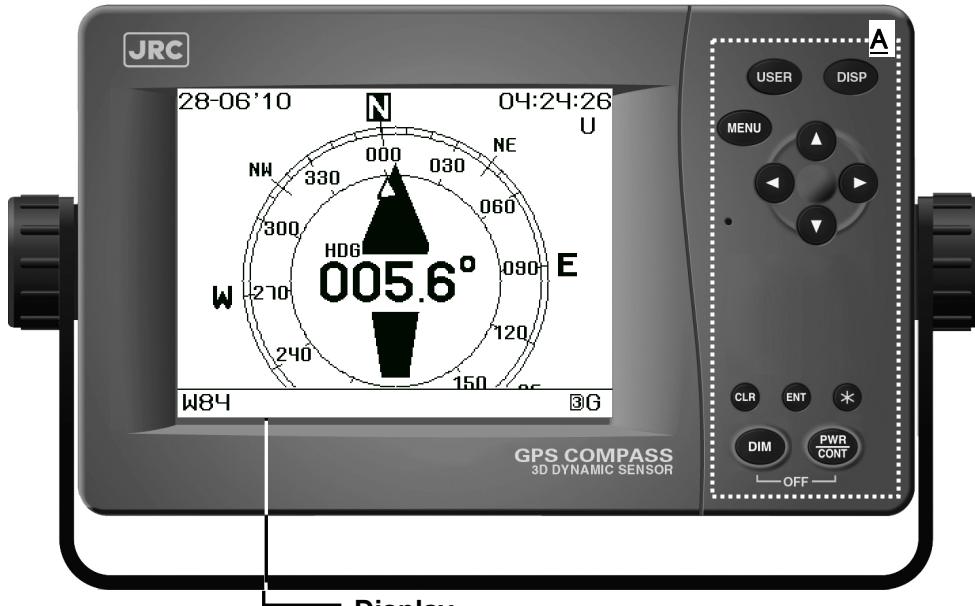

Display
The operator can read the information received from the GPS compass sensor, equipment settings, and soon.
Refer to "● Reading the Display" for details.

A: Control Panel

- User Key** Displays satellite information and the like. Also used for setting and clearing anchor watch. Refer to "5.2.9 Anchor Watch Settings" for anchor watch.
- Menu Key** Used to display the main menu.
- Buzzer** The buzzer sounds here.
- Clear Key** Used to return to the previous screen, and to cancel while making configuration changes. It is also used to silence the buzzer.
- Dimmer Key** Used to change the screen brightness. The brightness level changes each time the button is pressed.
- Turning off the Power** Press the **DIM** and **PWR CONT** key simultaneously to turn off the power.
- Display Key** Changes what is displayed on the screen. Please refer to "Section 4 Display" for details about what is displayed.
- Up, Down, Left, Right Key** Used to select items from the menu, scroll through the screen, and move the cursor.
- Enter Key** Used to set the entries.
- Asterisk Key** Displays alarm information.
- Power / Contrast Key** Used to turn the power on. When the power is on, this key is used to change the screen contrast. The contrast changes each time it is pressed.

- Reading the Display

The symbols and characters that appear in fixed locations on the screen are described below.



Subdisplay Setting

This is displayed when the display unit is configured as a subdisplay. (Refer to "5.4.5 Product Type Configuration")

Time Display

Time is displayed in order of hours: minutes: seconds. (Refer to "5.3.6 System Settings")

In 12 hour display mode, "AM" or "PM" are displayed.

If a time difference is set, "L" is displayed. Otherwise, "U" is displayed.

Date Display

Screen Title

The title of the open screen is displayed.

M Maintenance Mode

In maintenance mode, **M** mark is displayed.

(Refer to "5.4 Maintenance Menu")


Measurement

Status Display

The status of the bearing measurement is shown by 6 levels.

(When measurement is completed, the display disappears)

- Measurement ends soon
- Measurement is half-way completed
- Measuring
- Measurement started
- When power has been turned on, or the unit has been reset

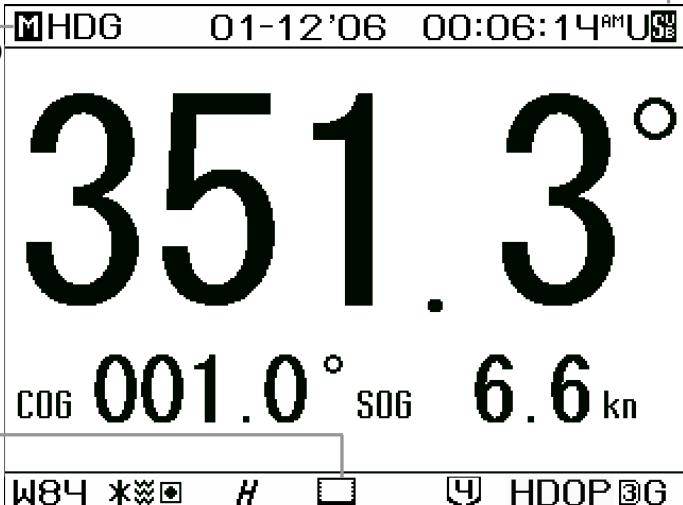

Geodetic System

Alarm Information

This is displayed when alarm information messages have been updated.

Beacon Information

Reception Display

This is displayed when meteorological information has been received from a beacon. A buzzer is generated when this is displayed.

Ancor Watch Display

: Inner setting range / : Outer setting range

Position Correction Configuration

This is displayed when a position correction value has been configured. (Refer to "5.3.2 Setting the Heading (HEADING)")

Number of Satellites

Not Displayed: 5 or more / : 4 or less / DR : Dead Reckoning

HDOP Alarm Display

Displayed when the number exceeds the configured value. (Refer to "5.3.3 GPS Configuration (GPS)")

Measurement Mode Display

: 2 Dimension / : 3 Dimension


Position Correction Mode Display

G : GPS / D : DGPS / Sb : SBAS

3.2 NNN-21/31 Sensor Unit

- Unit

The diagram shows the NNN-21, but applies to the NNN-31 as well.

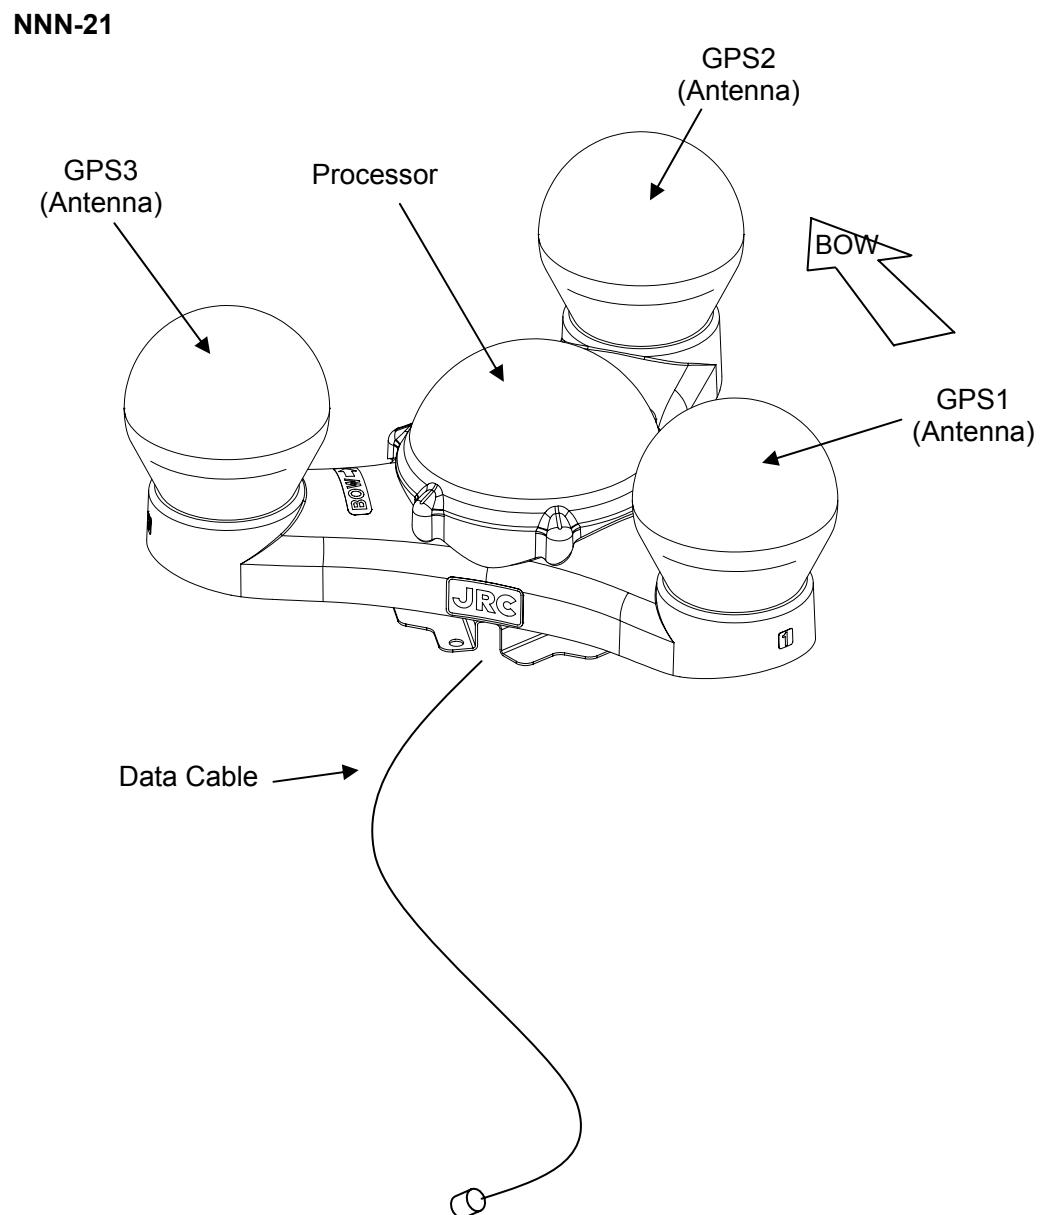


Section 4 Display

Each screen is detailed in this section.

4.1 Display Screen

Pressing the **DISP** key rotates screens. The unit displays the compass screen immediately after turn on.

There are varieties of Compass Screens, Navigation Screens, and Turn Rate screens, Trend Graph Screens, which can be cycled with the aid of **◀** and **▶** keys.

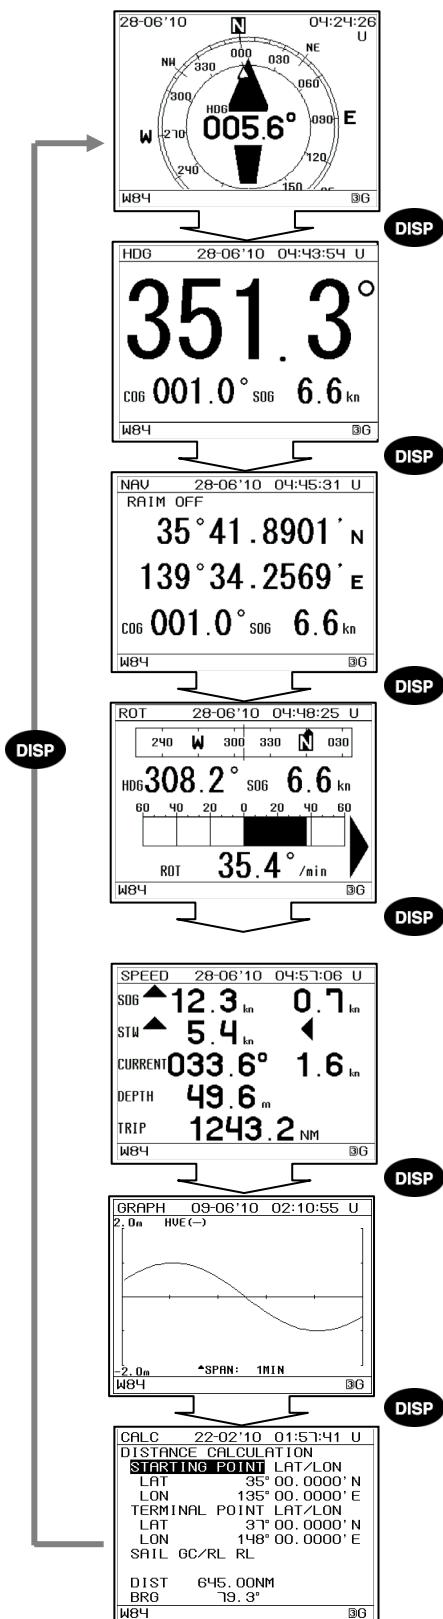

Compass Screen

The heading of the bow of the ship is graphically displayed.

6 types of displays can be cycled using the **◀** and **▶** keys.

Bow Heading Screen

Several varieties of data are displayed in numerical form.

3 types of displays can be cycled using the **◀** and **▶** keys.

Navigation Screen

The latitude and longitude fixed by GPS are displayed

Cycling between 3 and 4 decimal places can be performed using the **◀** and **▶** keys.

Turn Rate Screen

Ship's rate of turn is displayed.

Graphic and numerical display can be cycled between using the **◀** and **▶** keys.

Water Speed / Ground Speed Screen

The bow and stern speeds, port and starboard speeds, and bearing are displayed (STW, CURRENT, and DEPTH are displayed when the tide current calculator is connected)

Trend Graph Screen

A trend graph for roll/pitch (ROL/PIT), heaving (HVE), or SOG (SPD) is displayed.

The type of graph can be cycled using the **◀** and **▶** keys, and the range of time (the display range of the horizontal axis) using the **▲** and **▼** keys.

Calculate Distance Screen


The positions of the starting point and the ending point can be input to calculate the distance between the two points and the bearing of the ending point from the starting point.

The calculation method can be selected in GC/RL.


4.1.1 Compass Screen

The ship's heading is graphically displayed.

4 types of displays (A, B, C, D, E and F) can be cycled between using the and keys.

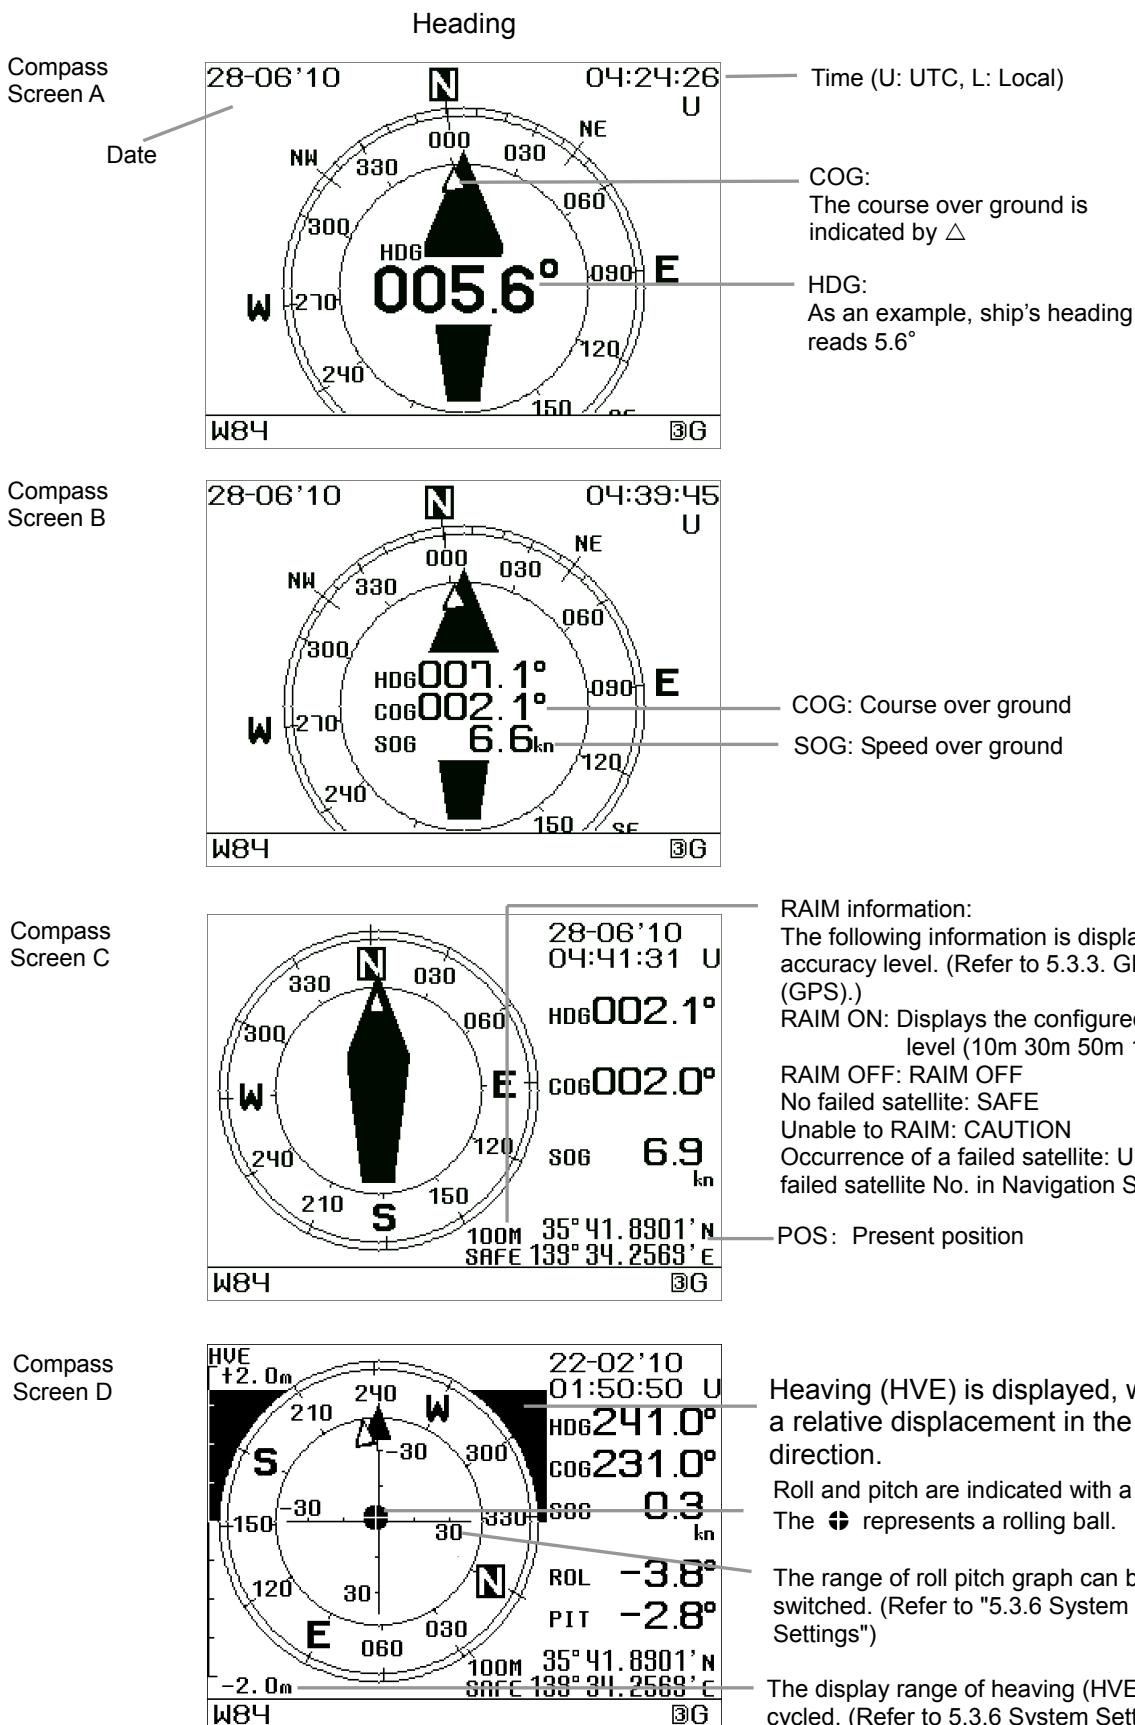

Compass
Screen E

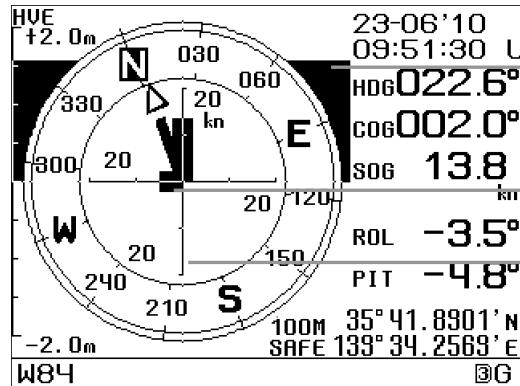


HEAVING(HVE) BAR

The vectors of the velocity in the bow/stern and the port/starboard directions and their resultant vector (diagonal direction) are displayed.

The display range of SOG bar can be switched. (Refer to 5.3.6 System Settings.)

Compass
Screen F

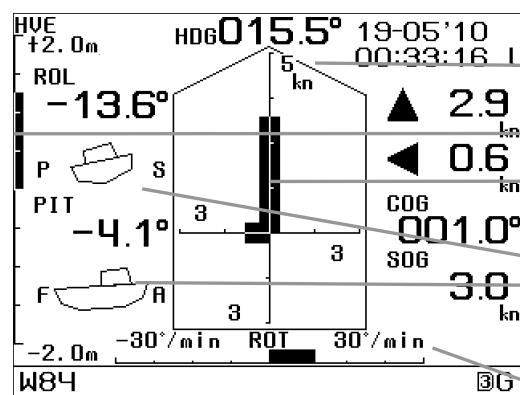

SOG BAR. The display range can be switched. (Refer to 5.3.6 System Settings.)

HEAVING(HVE) BAR

The vectors of the velocity in the bow/stern and the port/starboard directions are displayed.

Roll and pitch are displayed graphically.

P: port S: starboard

F: bow A: stern


ROT graph. The display range can be switched. (Refer to 5.3.6 System Settings.)

4.1.2 Bow Heading Screen

The Bow Heading, SOG and COG are displayed numerically.

Each screen can be cycled using the or the key.


HDG Screen

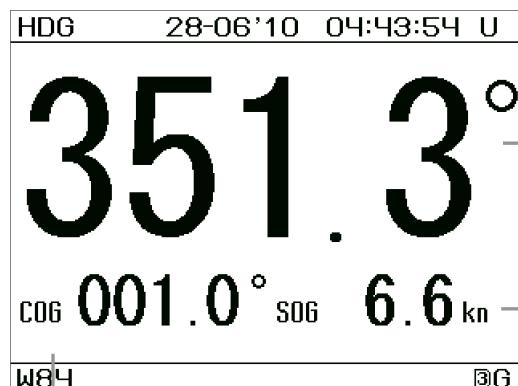

Bow heading (HDG)

SOG: Speed over ground


COG: Course over ground

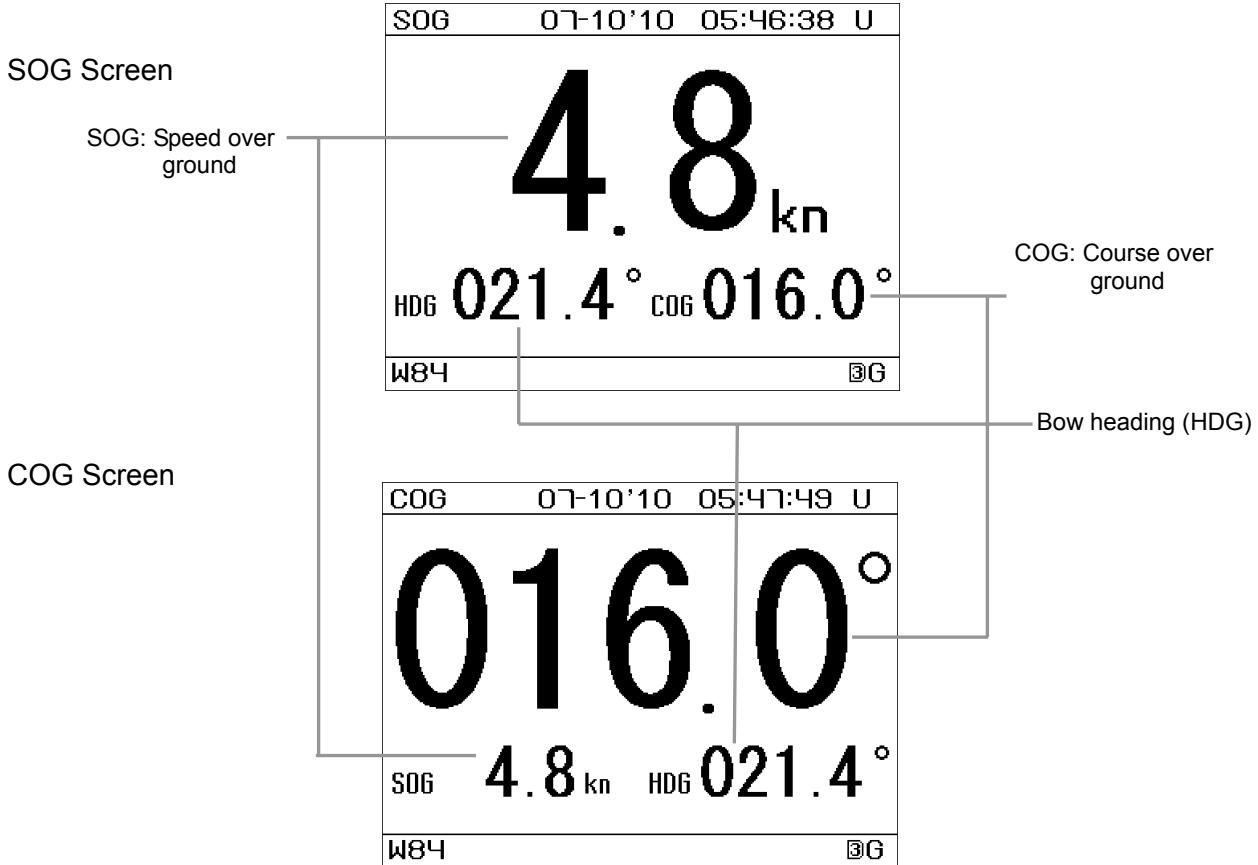

4.1.3 Navigation Screen

The latitude and longitude of the ship's position are displayed.


Latitude and longitude displays (3 decimals or 4 decimals display) can be cycled between using the and keys.

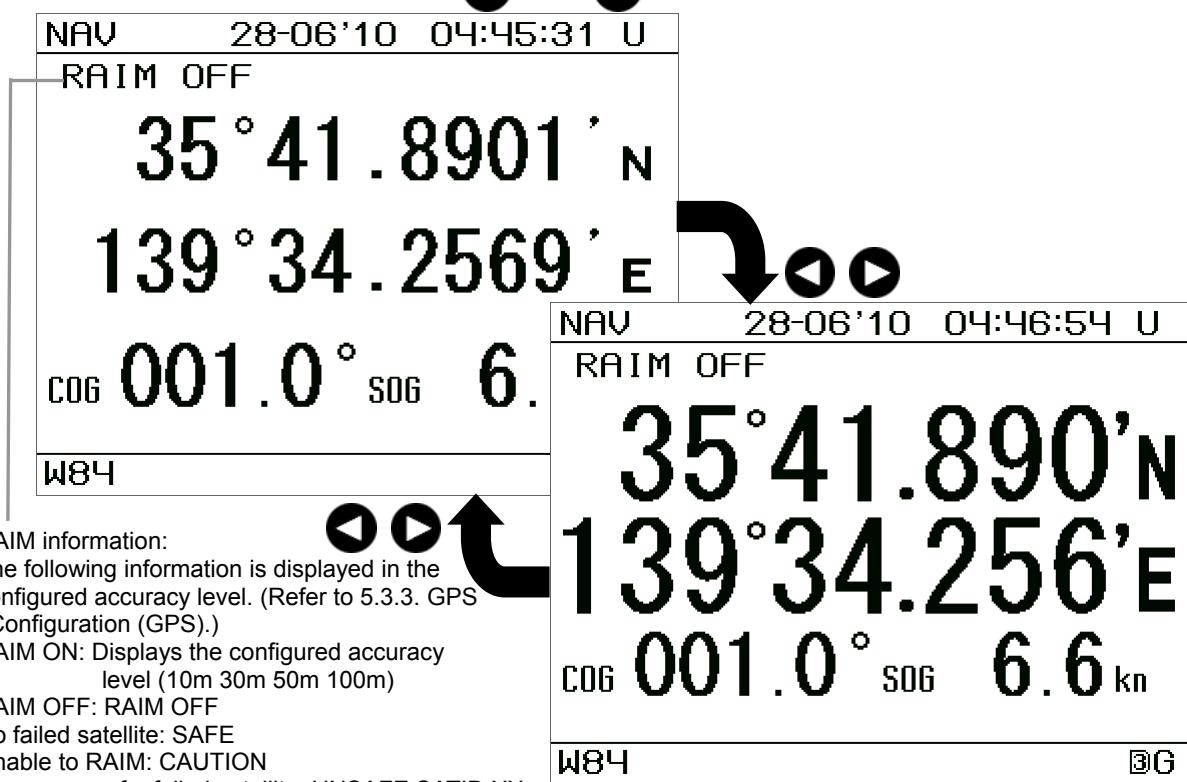


4.1.4 Turn Rate Screen

Ship's rate of turn is displayed.

There are two types of turn rate screens (A and B), and they can be cycled between using with the aid of and keys.

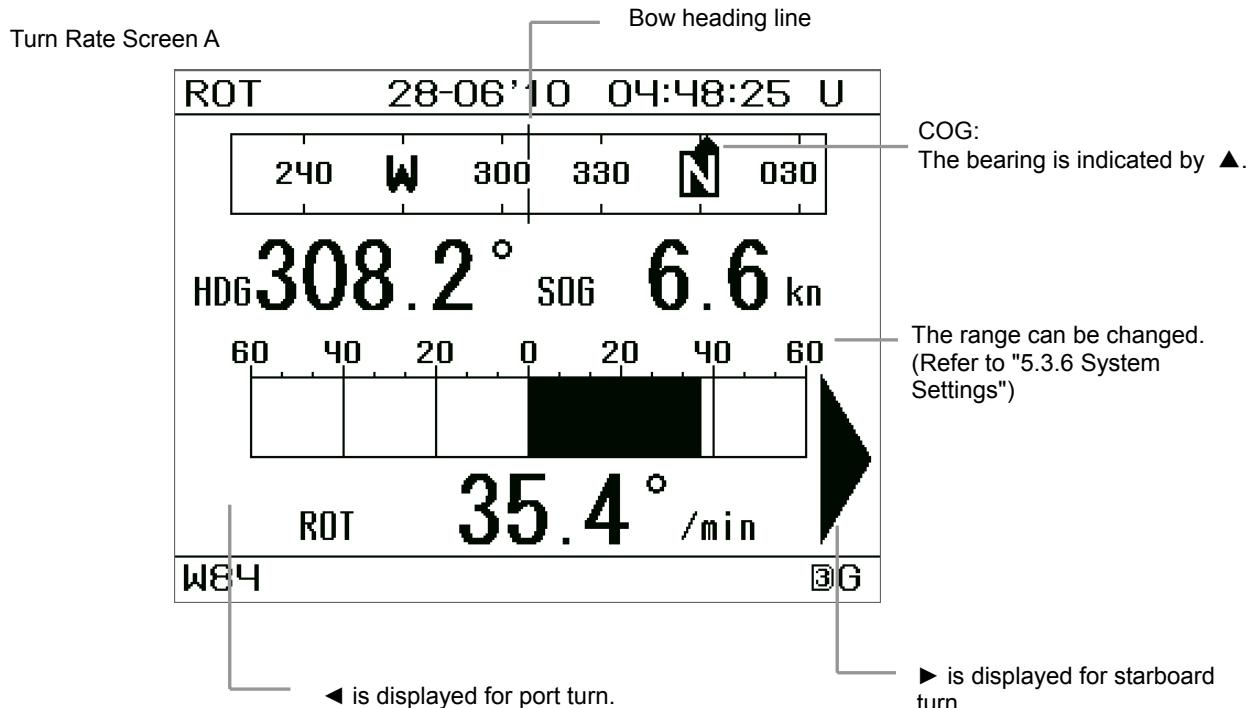


Turn Rate Screen B

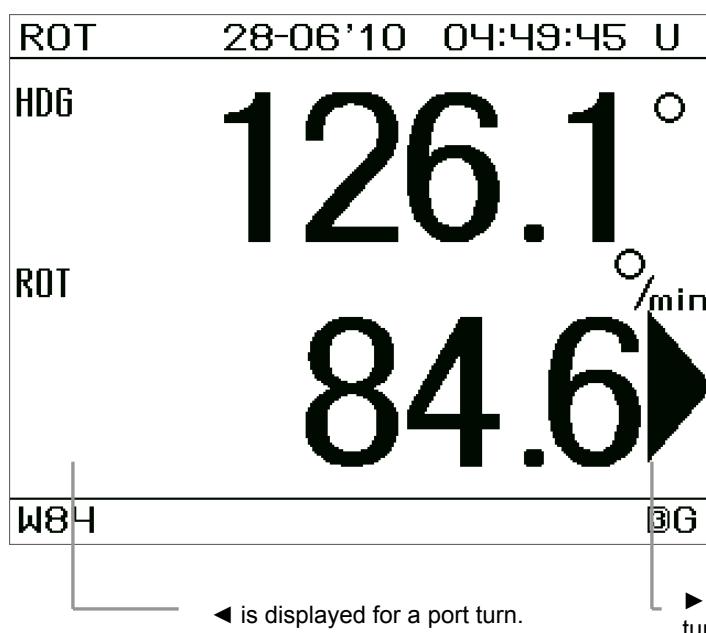

4.1.5 Water Speed / Ground Speed Screen

Ship's longitudinal speed(bow-stern), transverse speed(port-starboard), and bearing are displayed.

When the tide current calculator is not connected, the STW, CURRENT, and DEPTH values are not displayed.

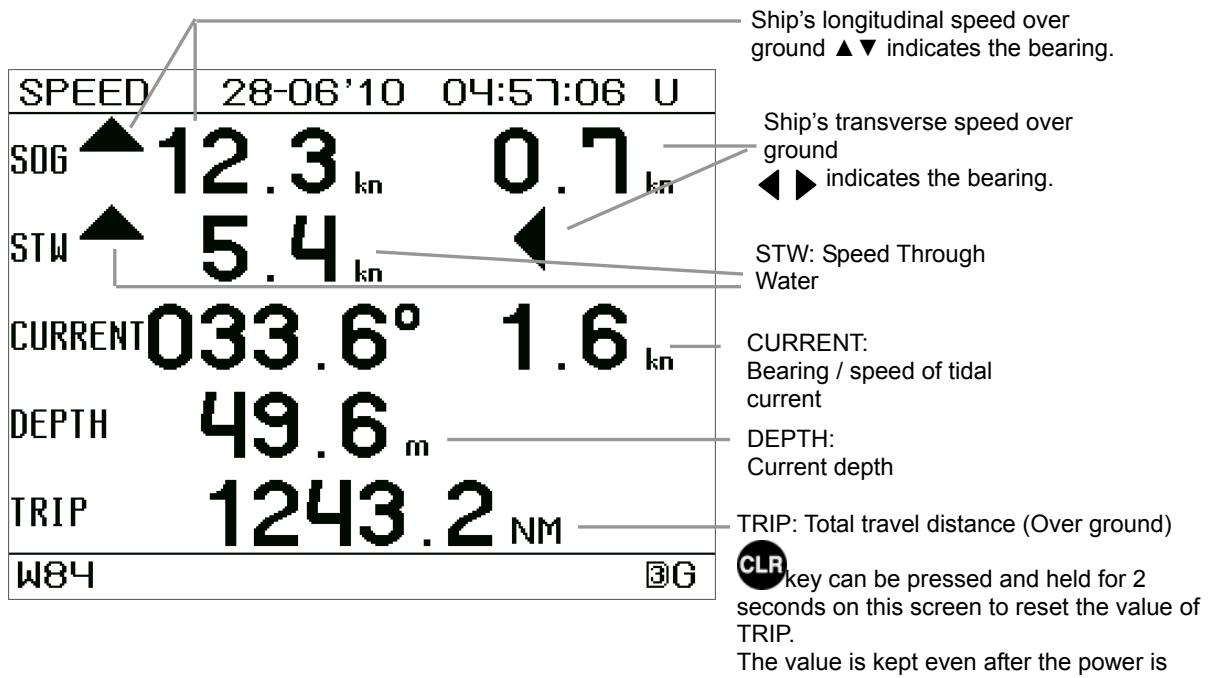


4.1.6 Trend Graph Screen

1) Roll/pitch, 2) heaving, and 3) SOG (Speed Over Ground) are displayed in a trend graph. The right end of the graph shows the newest data.

Each graph of 1) to 3) can be cycled using the or the key. The time range in the horizontal axis can be cycled using the or the key.

CLR key can be pressed and held for 2 seconds on the screen of graph 1) to 3) to reset the display data (past history data).

Attention) This reset is applicable all past history data for 1) Roll/pitch, 2) heaving, and 3) SOG.

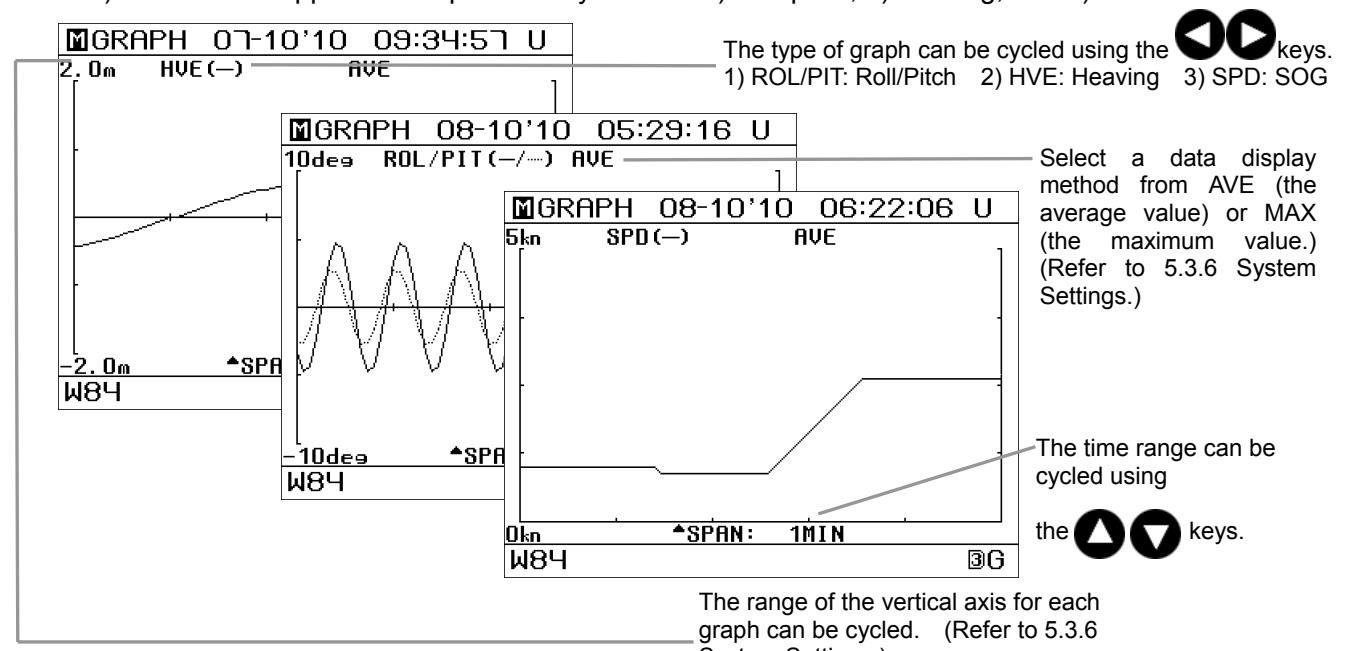

4.1.7 Calculate Distance Screen

The distance and the bearing between any starting point and ending point are calculated.

| | | | |
|-------------------------------|------------------|----------|---|
| CALC | 22-02'10 | 01:57:41 | U |
| DISTANCE CALCULATION | | | |
| STARTING POINT LAT/LON | | | |
| LAT | 35° 00. 0000' N | | |
| LON | 135° 00. 0000' E | | |
| TERMINAL POINT LAT/LON | | | |
| LAT | 37° 00. 0000' N | | |
| LON | 148° 00. 0000' E | | |
| SAIL GC/RL RL | | | |
| DIST | 645. 00NM | | |
| BRG | 79. 3° | | |
| W84 | BG | | |

Select a starting point from the ship's position or any other positions.
When selecting the ship's position, set to THIS SHIP to automatically configure to the ship's current position.

Displayed starting point

Select a terminal point form the ship's position or any other positions.

Displayed terminal point

Select sail from
GC:Great circle or
RL:rumb line

The distance between the starting point and the ending point and the bearing of the ending point from the starting point are displayed.

4.1.8 Configuration Screen

Press the **MENU** key to go to the Configuration menu screen. Refer to "5.3 Main Menu" for details.

| | | |
|----------------|----------|---|
| MAIN MENU | 11:46:33 | U |
| DISPLAY | | |
| HEADING | | |
| GPS | | |
| SBAS | | |
| BEACON | | |
| SYSTEM | | |
| DATA I/O | | |
| VERSION INFO | | |
| OTHERS | | |
| LANGUAGE | | |
| W84 | BG | |

Section 5 Operation

5.1 Menu List

5.1.1 Menu List

| MAIN MENU | | |
|-----------|--|--|
| DISPLAY | CONTRAST DIMMER CLICK SOUND REVERSING MODE START SCREEN DECIMAL FONT SIZE COMP-C/D POSN DIGIT | 1~ <u>7</u> ~13 1~ <u>9</u> ~10 1~ <u>6</u> ~10 1~ <u>4</u> ~10 <u>ON/OFF</u> <u>NORMAL,REVERSE1,REVERES2</u> <u>COMP-A,-B,-C,-D,-E,-F,HDG,SOG,COG,NAVI-A,-B,ROT-A,-B,</u> <u>SPEED, GRAPH, CALC</u> <u>LARGE, SMALL</u> <u>3,4</u> |
| HEADING | RESTORATION BACKUP INTERRUPT NMEA HEADING CHECK SUM HEADING OFFSET OUTPUT RESOLUTION | <u>AUTO,MANUAL</u> 1,2, <u>3</u> <u>NULL,STOP</u> <u>ON,OFF</u> `-10.0°~ <u>0.0</u> °~+10.0° <u>0.1,0.01</u> ° |
| GPS | MODE HDOP SMOOTHING RAIM ACCURACY LEVEL INITIALIZATION | <u>AUTO,2D,3D</u> 4, <u>10,20</u> 0~ <u>10~99</u> s 0~ <u>4~99</u> s 0~ <u>4~99</u> s OFF,10,30,50, <u>100</u> m DD-MM'YY HH:MM:SS |
| SBAS | MODE SBAS SEARCH TYPE 0 INFORMATION RANGING | <u>AUTO, GPS ALONE, SBAS, BEACON</u> <u>AUTO,MANUAL</u> <u>ON,OFF</u> <u>ON,OFF</u> |
| BEACON | STATION SELECT BIT RATE FREQUENCY BEACON INFORMATION | <u>MANUAL,AUTO</u> 50,100, <u>200</u> bps <u>283.5~325.0</u> kHz <u>ON,OFF</u> |
| SYSTEM | TIME DIFF DATE DISP TIME DISP DATUM SPEED UNIT ROT RANGE ROT SMOOTHING ROLL/PITCH RANGE ROLL OFFSET PITCH OFFSET NEXT PAGE | '-13:00~ <u>00:00</u> ~+13:00 DD-MM'YY,'YY-MM-DD,MM-DD'YY DD MMM, ' YY MMM DD, ' YY 12, <u>24</u> <u>WGS84,WGS72,JAPAN,.....SPK</u> kn,km/h,mi/h ±30,60, <u>90</u> ,120,150,180, 210,240,270,300,600,900, 1200,1500,1800,2100,2400,2700°/min 0~ <u>10~99</u> s ±5, <u>10,15,20,25,30</u> ° `-30~ <u>0</u> ~+30° `-30~ <u>0</u> ~+30° |

| | | | |
|---------------------|-------------------|-------------|---|
| SYSTEM 2 | PREVIOUS PAGE | | |
| | HEAVING BAR RANGE | | 1, <u>2</u> , 3, 4, 5, 10, 20, 30, 40, 50, 100 |
| | HEAVING BAR DISP | | OFF, DISP1, DISP <u>2</u> , DISP3, DISP4 |
| | TREND GRAPH | | AVERAGE, MAXIMUM |
| | HVE POS OFFSET | + | -999. 9~ <u>+0. 0</u> ~+999. 9m |
| | | + | -999. 9~ <u>+0. 0</u> ~+999. 9m |
| | | + | -999. 9~ <u>+0. 0</u> ~+999. 9m |
| | | + | <u>ON</u> , OFF |
| | GPS 5Hz DRAW | | 5, 10, 15, 20, 25, 30, 50, 100 |
| | SOG BAR RANGE | | |
| DATA I/O | SENSOR THROUGH | | NMEA, NSK, AD-10, IEC |
| | DATA OUT1 | | NMEA, NSK, AD-10, IEC |
| | DATA OUT3 | | NMEA, NSK, IEC |
| | DATA OUT4/IN4 | | NMEA/OFF, NSK/OFF, BEACON/OFF, IEC/OFF, 4341/OFF, NMEA/CURRENT, BEACON/CURRENT, IEC/CURRENT, 4341/CURRENT, NMEA/CCRP, BEACON/CCRP, IEC/CCRP, 4341/CCRP BEACON/CURRENT |
| | DATA OUT5 | | NMEA, NSK, IEC |
| | LOG PULSE | | OFF, 200p/nm, 400p/nm |
| VERSION INFO | | | DISPLAY, SENSOR, GPS1, GPS2, GPS3 |
| OTHERS | CURRENT | + | ALL, 1~ <u>3</u> ~999 |
| | | + | ALL, 0~ <u>1</u> ~9 |
| LANGUAGE | | | ENGLISH, JAPANESE |
| MAIN MENU(M) | | | |
| ANT CHECK | | | |
| INPUT CHECK | PORT SELECTION | START, STOP | OFF, INPUT0, INPUT4 |
| DIAGNOSIS | DISPLAY | | OFF, START |
| | SENSOR | | OFF, START |
| | LCD | | OFF, START |
| DEMO | DEMO TYPE | | OFF, 01~99 |
| PRODUCT TYPE | DISPLAY | + | MAIN, SUB |
| | | + | |
| | SERIAL | + | |
| | SENSOR | + | |
| | | + | |
| | SERIAL | + | |
| | | + | |
| | BARCODE | + | |
| | | + | |
| | DEFAULT No. | + | |
| | | + | |
| RESET | DISPLAY | | 0 |
| | SENSOR | | NO, YES |
| | ALL | | NO, YES |
| SOFT UPDATE | UPDATE AREA | | SENSOR, DISPLAY |
| | BIT RATE FROM PC | + | AUTO |
| | | + | 38400, 57600, <u>115200</u> bps |
| CCRP | SHIP | | DISABLE, ENABLE |
| | BEAM | | 1. 0~70. 0 |
| | LENGTH | | 1. 0~700. 0 |
| | SENSOR | | DISABLE, ENABLE |
| | SENSOR | | No. 1~No. 9 |
| | X | | -35, 0~ <u>0</u> ~35. 0 |
| | Y | | 0. 0~700. 0 |
| | CCRP | | DISABLE, ENABLE |
| | X | | -35, 0~ <u>0</u> ~35. 0 |
| | Y | | 0. 0~700. 0 |

- * The underlined settings are factory defaults. If the equipment is master-reset, all the parameters are configured to defaults.
- * CCRP settings will not be initialized by master reset.

●Default of DATA I/O

| Name on Display | Set item | Default |
|-----------------|-----------------------|--------------------------------------|
| SENSOR THROUGH | NMEA VER | NMEA Ver2.1 |
| | BIT RATE | 38400bps |
| | INTERVAL(HDT,THS,ROT) | 25msec |
| | SENTENCE | HDT ROT |
| DATA OUT1 | NMEA VER | NMEA Ver2.1 |
| | BIT RATE | 4800bps |
| | SENTENCE | — (None) |
| DATA OUT2 | NOT USED | |
| DATA OUT3 | NMEA VER | NMEA Ver2.1 |
| | BIT RATE | 4800bps |
| | SENTENCE | GGA VTG RMC GLL (Interval is 1 sec.) |
| DATA OUT4 | NMEA VER | NMEA Ver2.1 |
| | BIT RATE | 4800bps |
| | SENTENCE | — (None) |
| DATA OUT5 | NMEA VER | NMEA Ver2.1 |
| | BIT RATE | 4800bps |
| | SENTENCE | — (None) |

5.2 Basic Operation

5.2.1 Turning the Unit On

Press the  key to turn the power on, the system starts initialization. Once initialization has been completed, self-diagnosis will run when the equipment condition has been checked, the screen switches to the standard screen.


Attention

If the unit cannot be turned on, check the main power supply and the connection of display unit cable.

Unit Initialization



Self-Diagnosis Screen

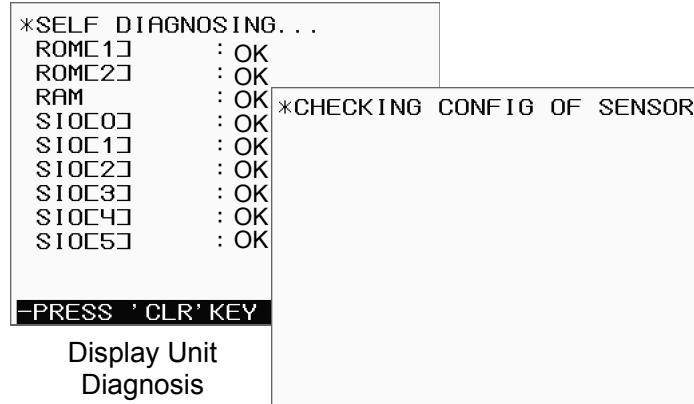

Display Unit
Diagnosis

Sensor Diagnosis

Memo


Pressing the  key during the initialization of the system moves you to the self-diagnosis screen. (Initialization is still performed in this case.)

Press the  key to break the self-diagnosis and display the standard screen.


5.2.1.1 Startup (Standard)

If the self-diagnosis results are all "OK", the unit automatically switches to the standard screen.

Self-Diagnosis Screen

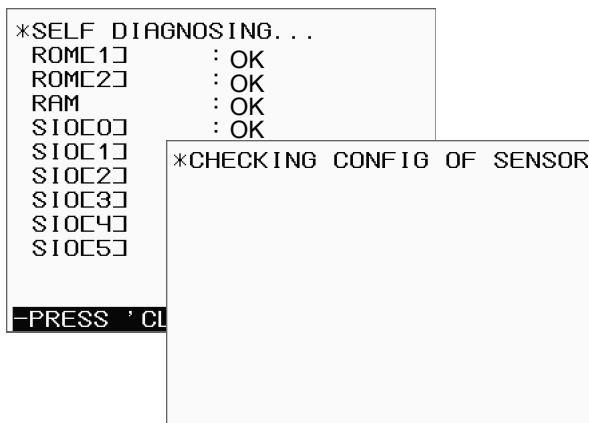

Standard Screen

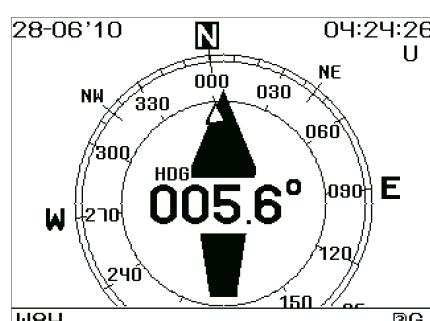

5.2.1.2 Startup (Error-1)

If any of the self-diagnosis results are "NG", the results are displayed.
The unit does not switch to the standard screen unless the **CLR** key is pressed.

Attention

If any errors (NG) are detected, perform a DIAGNOSIS (self-diagnosis) from the 5.4 Maintenance Menu, and check the details of the failed item. (Refer to "5.4.3 Self-Diagnosis (DIAGNOSIS)").

```
*SELF DIAGNOSING...
ROMC1] : OK
ROMC2] : OK
RAM     : OK
S10C0] : OK
S10C1] : OK
S10C2] : OK
S10C3] : OK
S10C4] : OK
S10C5] : NG
```

[PRESS 'CLR' KEY TO EXIT]

5.2.1.3 Startup (Error-2)

Messages shown below may be displayed during sensor diagnostics.
The message appears when display unit and sensor configuration settings do not match, when equipment has been replaced.

When this occurs, select one of the items, and press the **ENT** key to perform it.

- [1. USE SENSOR CONFIG]: Replaces display configuration with the sensor configuration.
- [2. USE DISPLAY CONFIG]: Replaces the sensor configuration with the display configuration.

Attention

Consult with JRC or its affiliate if this is displayed frequently.

```
*CHECKING CONFIG OF SENSOR
DISPLAY CONFIG DIFFERS
FROM SENSOR.


SELECT ONE OF;
1. USE SENSOR CONFIG.
2. USE DISPLAY CONFIG.
```

5.2.1.4 Startup (Error-3)

If the following screen is displayed after the unit is turned on, press the **PWR
CONT** key and **DIM** key simultaneously to turn off the power.

Attention

Contact JRC or its affiliate.

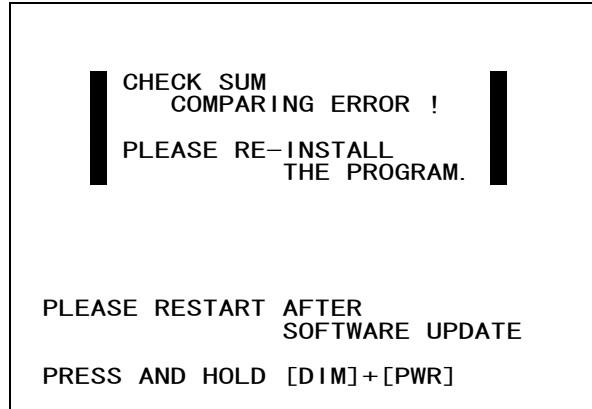

5.2.2 Turning the Unit Off

If the **DIM** key and **PWR
CONT** key are pressed and held down simultaneously, the power will be turned off and the screen display will be off.



5.2.3 Adjusting the Backlight

The brightness of the display can be set to one of four levels.

The brightness is set to medium when the unit is turned on.

Each time the  key is pressed, the brightness of the backlight cycles as below:
Bright (MAXIMUM) → Medium (TYPICAL) → Dark (MINIMUM) → Off → Dark (MINIMUM) →
Medium (TYPICAL) → Bright (MAXIMUM)



Memo


Level settings can be performed for all brightness levels except "Off". (Refer to "5.3.1 Display Settings")

The key panel brightness changes in accordance with the display brightness.

5.2.4 Adjusting the Contrast

The contrast of the display can be set to one of 13 levels.

Each time the  key is pressed, the display contrast decreases, and after the lightest level is reached, the contrast gradually increases back.

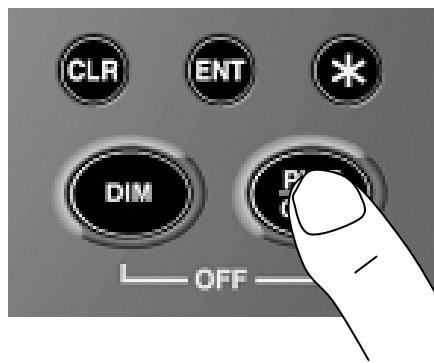

5.2.5 Stopping the Alarm Buzzer

Pressing the  key silence the buzzer.

The buzzer sounds when one of the following occurs.

- Position measurement is interrupted
- Bearing measurement is interrupted
- An error occurs

5.2.6 Changing the Display

Each time the  key is pressed, the screen display changes. (Refer to "4.1 Display Screen")


5.2.7 Displaying Satellite Information

Each time the **USER** key is pressed, the screen display changes.


SATINFO2: The positions of the GPS satellite(s) can be confirmed.

SATINFO1: The signal levels from individual satellite can be checked.

Satellite Position

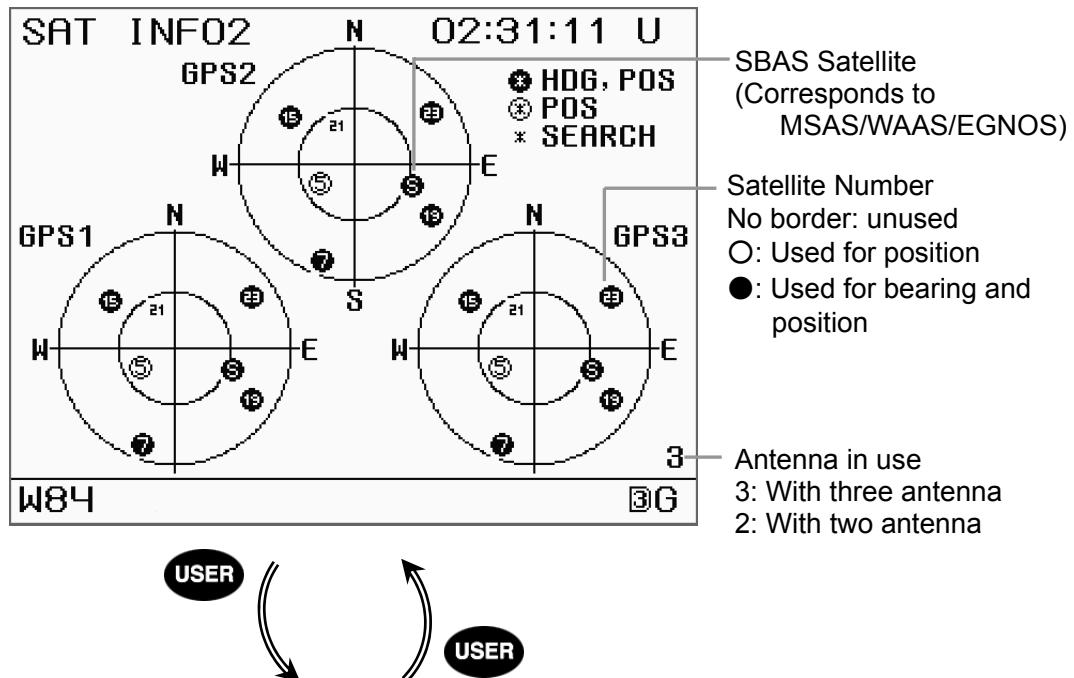

Signal Level

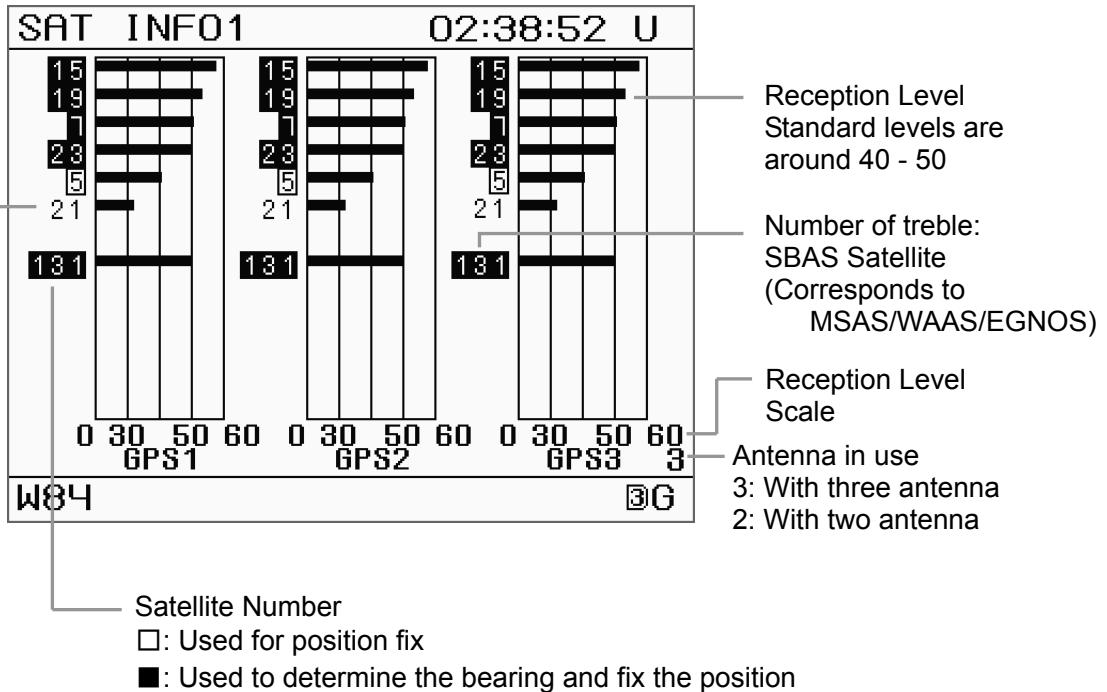

Memo

- If JLR-4331 or a DGPS beacon receiver is connected, Beacon Information will be added to the above. Refer to "5.3.5 Beacon Settings(BEACON)".


BEACON INFO Screen → **SAT INFO2 Screen** → **SAT INFO1 Screen**



5.2.8 Alarm History Display

Each time the  key is pressed, the screen display changes.

When alarm information is updated, the * symbol appears on the status bar.

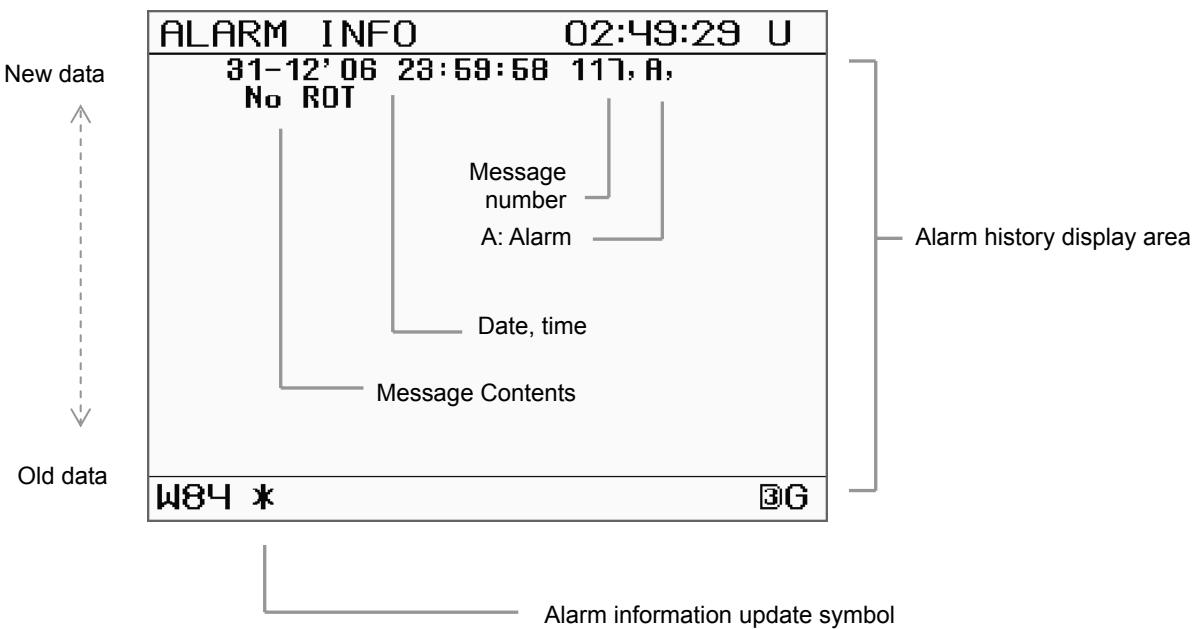


Memo

- If alarm has not occurred, "NO ALARMS" is displayed.

5.2.9 Anchor Watch Settings

● Starting the anchor watch

Press and hold the **USER** key for 2 seconds to set (start) anchor watch.

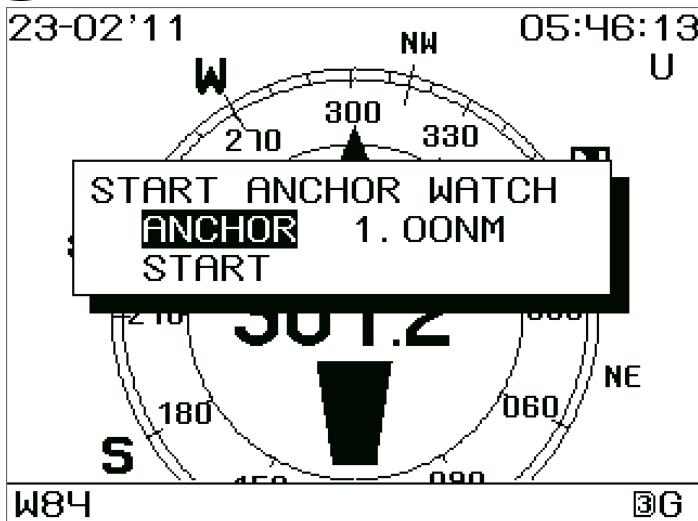

1. Select ANCHOR using the **ENT** key, and input a desired range (radius) to watch using the **▲** **▼** keys.
2. The range can be from 0.01 to 9.99. The unit of range is the unit configured in SPEED UNIT in the System menu. Refer to 5.3.6 System settings for details.
3. Next, enter the input range (radius) using the **ENT** key.
4. Select START and press the **ENT** key to start anchor watch.

During anchor watch, the following icons are displayed in a status bar (the bar in the bottom of the screen.)

: Inside the set range (radius)

: Outside the set range (radius)


● Stopping the anchor watch

1. Stop the anchor watch by pressing and holding the **USER** key for 2 seconds again.

2. The following pop-up is displayed, then, select STOP using the **ENT** key.

At a confirmation display- "STOP ANCHOR WATCH. ARE YOU SURE?", select YES to stop anchor watch.

Selecting YES stops anchor watch.

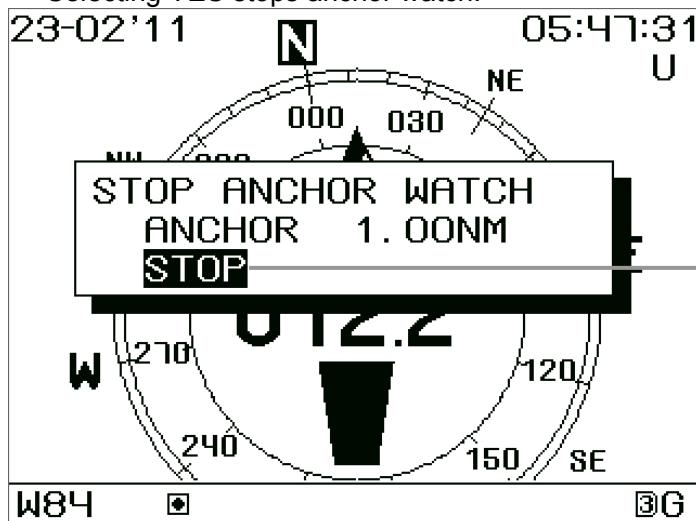


Selecting YES stops anchor watch.

Memo

Anchor watch

If the ship moves out of the following dotted circle, an alarm will turn on.

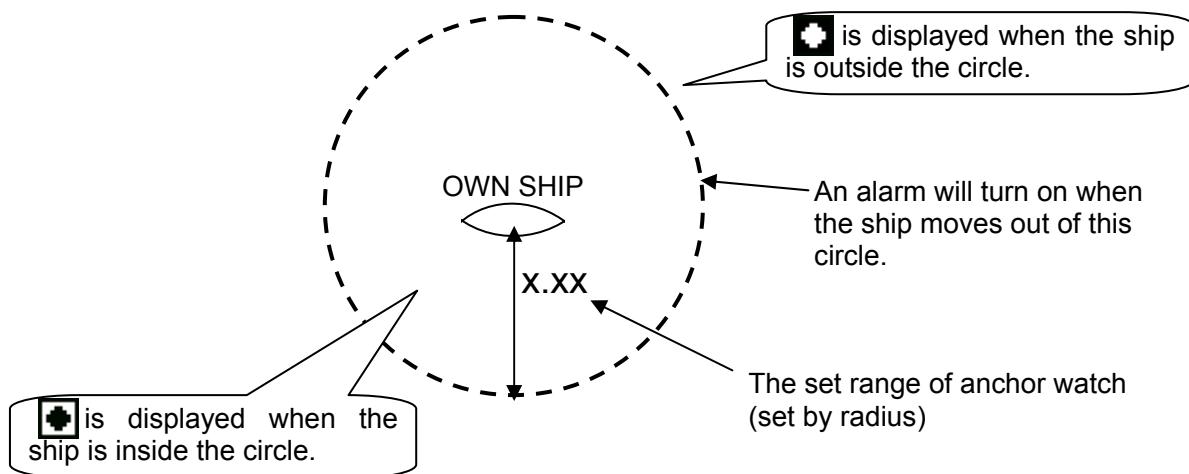

When the ship moves out of the set range, the following pop-up will show and an alarm will turn on (Contact points are not coordinated.)


---ALARM---
120, A, 02-07' 10 10:00:23
Anchor Out

5.3 Main Menu

Open the Main Menu to check or change settings.

The Main Menu can be invoked by pressing the  key on any screen.

As delivered the language is English. To change to Japanese, Refer to "5.3.10 Language Settings (LANGUAGE)".

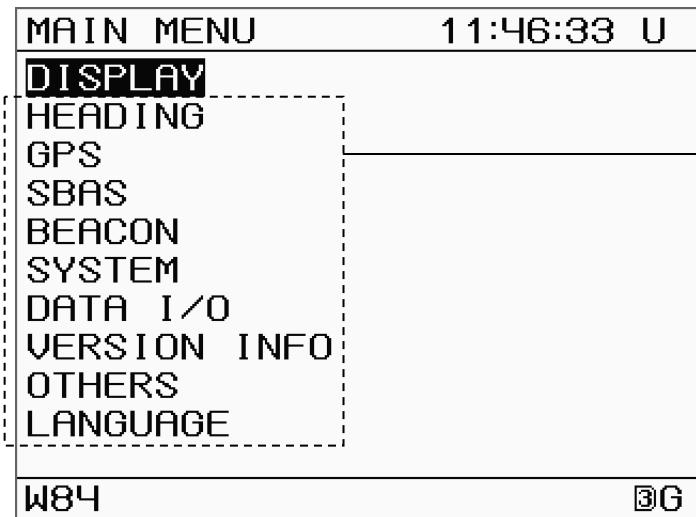

Main Menu

Procedure

1. Press the   keys to move the cursor and select an item.
2. Press the  key to display the menu for the selected item.

The following menus are available.

- DISPLAY: Displays settings menu for screen settings such as contrast and brightness. (Refer to 5.3.1)
- HEADING: Displays settings menu for heading alignment related settings. (Refer to 5.3.2)
- GPS: Displays settings menu for GPS related settings. (Refer to 5.3.3)
- SBAS: Displays settings menu for SBAS related settings. (Refer to 5.3.4)
- BEACON: Displays settings menu for beacon related settings. (Refer to 5.3.5)
- SYSTEM: Displays settings menu for system related settings. (Refer to 5.3.6)
- DATA I/O: Displays settings menu for input and output port (data) related settings. (Refer to 5.3.7)
- VERSION INFO: Displays program version of display unit and sensor. (Refer to 5.3.8)
- OTHERS: Displays settings menu for other miscellaneous settings. (Refer to 5.3.9)
- LANGUAGE: Displays Language Settings Menu. (Refer to 5.3.10)

5.3.1 Display Settings

Selecting **DISPLAY** from the "5.3 Main Menu" displays the Setup Menu. From the Setup Menu you can set the contrast, brightness levels, and change buzzer settings.

| DISPLAY | | 05:56:40 U |
|---------------------|---|------------|
| CONTRAST | : | 7 |
| DIMMER | : | |
| - MAXIMUM | : | 9 |
| - TYPICAL | : | 6 |
| - MINIMUM | : | 4 |
| CLICK SOUND | : | ON |
| REVERSING MODE | : | NORMAL |
| START SCREEN | : | COMP-A |
| DECIMAL FONT SIZE | : | LARGE |
| COMP-C/D POSN DIGIT | : | 4 |
| W84 | | ③G |

Setup Menu

Procedure

1. Press the keys to move the cursor and select an item.
2. Press the key to display the menu for the selected item.

Memo

- Press to return to the Main Menu.

The following submenus are available.

- CONTRAST: Adjusts LCD contrast. (Refer to 5.3.1.1)
- DIMMER: Adjusts LCD brightness. (Refer to 5.3.1.2)
- CLICK SOUND: Turns click sound on or off. (Refer to 5.3.1.3)
- REVERSING MODE: Reverses black and white of display screen. (Refer to 5.3.1.4)
- START SCREEN First screen after power up is selected.
The Screen allocated in the DISP key can be selected.
(Refer to 5.3.1.5)
- DECIMAL DISP SIZE: Select the display size of decimal numbers on the screen.
(Refer to 5.3.1.6)
- COMP-C/D POSITION DIGIT: Select 3 or 4 digits for displaying the current position on the Compass screens C/D. (Refer to 5.3.1.7)

5.3.1.1 Adjusting the Contrast

Select **CONTRAST** to adjust the contrast. Press the   keys to adjust the contrast, and press the **ENT** key to set the adjustment.

CONTRAST : 7

The lowest contrast is 1, and the highest is 13.

The default is 7.

5.3.1.2 Brightness Settings (DIMMER)

The brightness can be set to bright, medium, dark, and off by pressing the  key. From this menu, you can set the values for each of these brightness levels.

Select **MAXIMUM** (**TYPICAL**, **MINIMUM**), and press the **ENT** key to move the cursor to the right.

Pressing the   keys increments or decrements the value by one, and the screen brightness changes accordingly. Press the **ENT** key to set the selection. (TYPICAL and MINIMUM values can be set in the same way)

DIMMER

| | | |
|------------------|---|---|
| - MAXIMUM | : | 9 |
| - TYPICAL | : | 6 |
| - MINIMUM | : | 4 |

Memo

- Set the largest value for MAXIMUM, and the smallest value for MINIMUM.
- The maximum/minimum level adjustable by key-brightness are the ones set here DIMMER settings.

5.3.1.3 Click Sound Settings (CLICK SOUND)

Select **CLICK SOUND** to turn on or off the key click sound.

Pressing the   keys cycles the buzzer on and off. Press the **ENT** key to confirm the selection.

CLICK SOUND : ON

ON: Buzzer on
OFF: Buzzer off

Memo

The alarm buzzer cannot be deactivated.

5.3.1.4 Display Reversing Setting (REVERSING MODE)


Select **REVERSING MODE** to reverse the black and white of the display screen.

Pressing the keys will rotate the settings. Press the key to confirm the selection.

NORMAL: The letters are black. (Background is white)

REVERSE 1: The letters are white. (Background is black)

REVERSE 2: The letters are white, and the letters on the status bar are black.

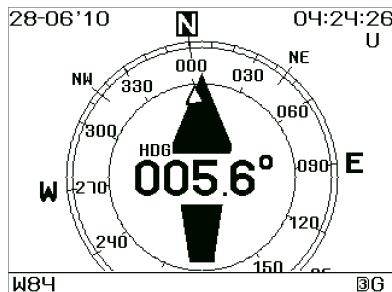

NORMAL



REVERSE1



REVERSE2

Reversed Screens

5.3.1.5 First Screen Setting (START SCREEN)

The first screen after power up can be selected.

The screen allocated in the DISP key (Refer to 4.1 Display Screen) can be selected.

| |
|--------|
| COMP-A |
| COMP-B |
| COMP-C |
| COMP-D |
| HDG |
| NAVI-A |
| NAVI-B |

START SCREEN : COMP-A

5.3.1.6 Decimal Display Size Setting (DECIMAL DISP SIZE)

The display size of decimals on the screen assigned to the DISP key (refer to 4.1 Display Screen) can be selected.

| | | |
|-------------------|---|-------|
| DECIMAL FONT SIZE | : | LARGE |
| | | LARGE |
| | | SMALL |

LARGE: The display size of decimal numbers is large. Ex. **3.2**

SMALL: The display size of decimal numbers is small. Ex. **3.2**

Applicable screens are Compass Screens A to F, Bow Heading Screen, Navigation Screen, Turn Rate Screen, and Water Speed/Ground Speed Screen.

5.3.1.7 Current Position Display Digit Setting on Compass Screens C/D (COMP-C/D POSITION DIGIT)

The number of digits for displaying the current position on the Compass screens C/D can be selected.

| | | |
|---------------------|---|---|
| COMP-C/D POSN DIGIT | : | 3 |
| | | 4 |

3: The current position is displayed with 3 decimals. Ex.

35° 41.890' N
139° 34.256' E

4: The current position is displayed with 4 decimals. Ex.

35° 41.8901' N
139° 34.2569' E

5.3.2 Setting the Heading (HEADING)

Selecting **HEADING** from the "5.3 Main Menu" displays the Heading Settings Screen. From this screen, the bow heading settings can be checked.

| | |
|--------------------------|------------|
| M HEADING | 05:59:27 U |
| RESTORATION | : AUTO |
| BACKUP | : 3 min |
| INTERRUPT NMEA | : STOP |
| HEADING OFFSET | : +0. 0° |
| OUTPUT RESOLUTION | : 0. 01° |
| | |
| W84 | 3G |

HEADING Settings Screen

Procedure

1. Press the   keys to move the cursor and select an item.
2. Press the  key to display the menu for the selected item.

The following submenus are available.

- RESTORATION:
After initially checking the measured heading, to input it to a connected external device, select MANUAL. When the heading measurement has been completed, an alarm sounds, and heading data is not output to the external device until the alarm is stopped by pressing CLR.
If AUTO is selected, when heading measurement has been completed, heading data is output automatically to the external device.
- BACKUP:
If the GPS signal is interrupted for some reason and the equipment cannot determine the ship's heading with the fixed position, the bearing will be reckoned with the aid of internal roll and pitch sensors. The user can set the time of reckoning from 1 and 3 minutes.
- INTERRUPT NMEA:
Sets HDT sentence (or THS sentence) processing when heading measurement cannot be performed.
In case the ship's heading cannot be the specified BACKUP time, the following part of \$GPHDT (or \$GPTHGS) shall be either blank or the last determined ship's heading. Or the output of sentence can be halted.
(Applies to output HDT sentence (or THS sentence).)

STOP: Stops the output of HDT sentence.
NULL: Blanks will follow \$GPHDT or \$GPTHGS.
 \$GPHDT, , ← NULL
 (\$GPTHGS, , ← NULL

- **HEADING OFFSET:** The heading can be offset from -10.0° to +10.0°.
The output heading to external devices is also offset.
If an offset value is entered (any value other than 0), "H" will appear in the status bar at the bottom of the screen.
The sensor shall always be installed parallel to the keel, but in the event that this is impossible, the error can be aligned here.
- **OUTPUT RESOLUTION:** Sets the resolution of the HDT (THS) sentence output.
0.1 or 0.01 can be selected.
(Normally, select the default value of 0.1)

Memo

- Press  to return to the Main Menu.
- In Maintenance Mode settings can be changed press and hold both  and  for 3 seconds or more to go to the mode.

5.3.3 GPS Configuration (GPS)

Selecting GPS from the "5.3 Main Menu" displays the **GPS** Settings Screen. From this screen, the parameters for the sensor can be confirmed.

| | |
|----------------------------|------------|
| MGPS | 06:00:59 U |
| MODE | : AUTO |
| HDOP | : 10 |
| SMOOTHING-POSITION | : 10s |
| -SPEED(SOG) | : 4s |
| -COURSE(COG) | : 4s |
| RAIM ACCURACY LEVEL | : 100m |
| INITIALIZATION | |
| W84 | ⑧G |

GPS Settings Menu

Procedure

1. Press the   keys to move the cursor and select an item.
2. Press the **ENT** key to display the menu for the selected item.

The following submenus are available.

- MODE AUTO: 2D and 3D position fix automatically switched.
 Normally, the setting should be left AUTO.
 2D: The position is fixed in two-dimensional measurement.
 3D: The position is fixed in three-dimensional measurement.
- HDOP: POSITION: Can be set between 0 and 99.
 SPEED: Can be set between 0 and 99.
 COURSE: Can be set between 0 and 99.
- RAIM ACCURACY LEVEL: Off, 10, 30, 50, or 100 can be selected.
- INITIALIZATION: Displays the Initial Settings Screen. This is used for initial settings for the GPS receiver. This item is not normally used.


Memo

- Press **CLR** to return to the Main Menu.
- In Maintenance Mode settings can be change press and hold both **MENU** and  for 3 seconds or more to go to the mode.

5.3.3.1 Initial Settings (INITIALIZATION)

The parameters of GPS receiver can be set in INITIALIZATION.

With   keys select an item, and press the .

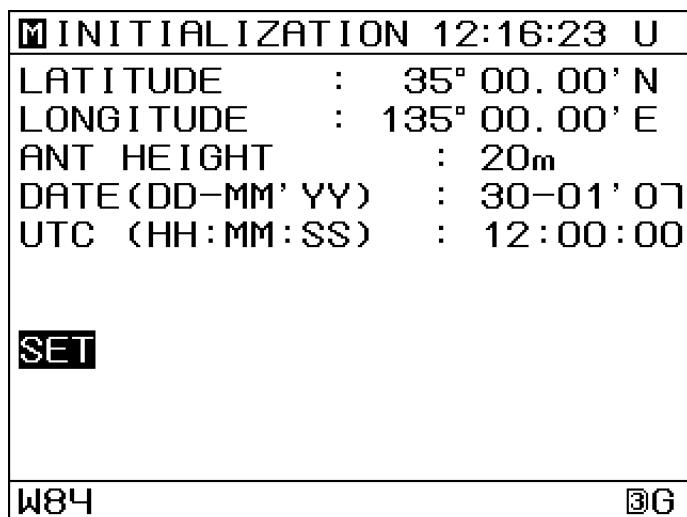

GPS Initial Settings Menu

Procedure

1. Press the   keys to move the cursor and select an item.
2. Press the  key to display the menu for the selected item.
3. Values can be selected with the   keys, and the cursor position can be changed with the   keys.
4. Press the  key at the **SET**.

The following submenus are available.


- LATITUDE: Enter the approximate ship's latitude.
- LONGITUDE: Enter the approximate ship's longitude.
- ANT HEIGHT: Enter the sensor height above the waterline. 2D positioning needs the height for calculation. The height is not used in 3D positioning.
- DATE: Enter today's date in UTC.
- UTC: Enter the present time in UTC.
- SET: Send the value to the sensor.

Memo

- Press  to return to the Main Menu.
- In Maintenance Mode settings can be changed press and hold both  and  for 3 seconds or more to go to the mode.

5.3.4 SBAS Settings (SBAS)

Selecting SBAS from the "5.3 Main Menu" displays the **SBAS** Settings Screen. From this screen, the parameters for the sensor can be confirmed.

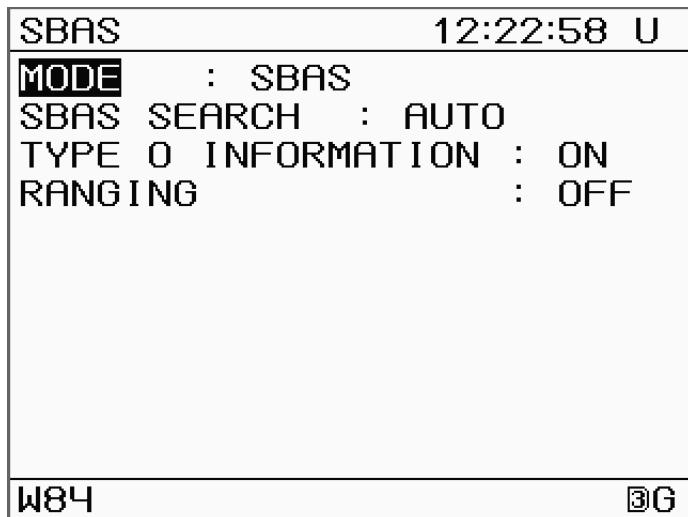

SBAS Settings Menu

Procedure

1. Press the keys to move the cursor and select an item.
2. Press the **ENT** key to display the menu for the selected item.

The following submenus are available.


- MODE:
 - Select the position correction mode.
 - AUTO: Beacon, SBAS, or GPS Only will be selected automatically for measurement according to the status of signal reception.
(In order of : Beacon → SBAS → GPS only)
 - GPS ALONE: Position is fixed by GPS only.
SBAS or beacon measurement will not be performed.
 - SBAS: SBAS takes the priority of measurement.
Switched automatically to "GPS Only" when SBAS information is not obtained.
 - BEACON: The beacon takes the priority of measurement.
Switched automatically to "GPS Only" when Beacon information is not obtained.
- SBAS SEARCH: AUTO or MANUAL can be selected.
When MANUAL is selected, the following TYPE 0 INFORMATION must be set.
- TYPE 0 INFORMATION: Test broadcast data can be turned on (for use) or off (when not in use).
(When broadcasting starts, the broadcast data overrides, and this item is disabled)
- RANGING: ON or OFF can be selected.
Used when an SBAS satellite is used with a GPS satellite.
Normally, the setting should be left ON.

Memo

- Press **CLR** to return to the Main Menu.
- In Maintenance Mode settings can be changed press and hold both **MENU** and for 3 seconds or more to go to the mode.

5.3.5 Beacon Settings (BEACON)

Selecting **BEACON** from the "5.3 Main Menu" displays the Beacon Settings Screen. From this screen, the parameters can be confirmed.

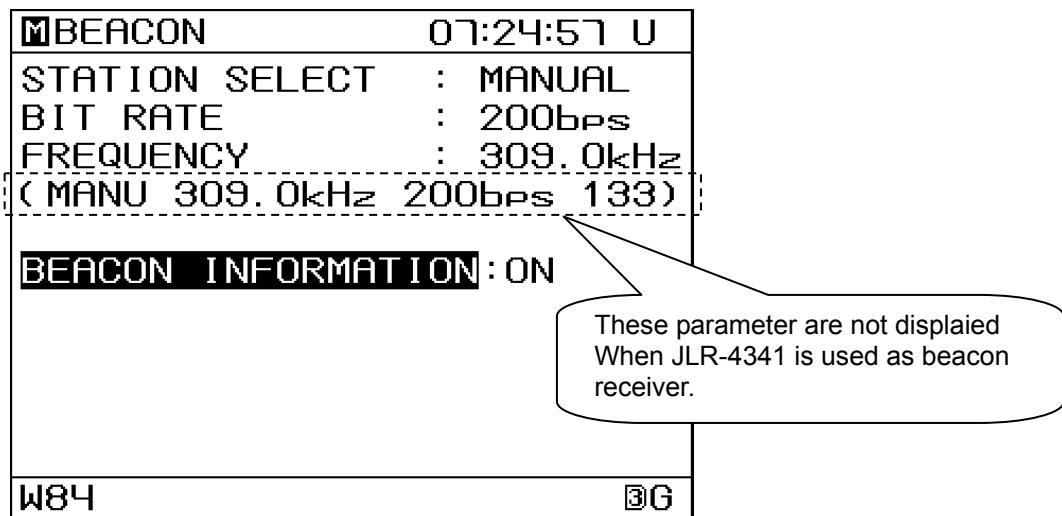

Beacon Settings Menu

Procedure

1. Press the **▲** **▼** keys to move the cursor and select an item.
2. Press the **ENT** key to display the menu for the selected item.

The following submenus are available.

- STATION SELECT: Select either manual or automatic selection of beacon station.
- BIT RATE: Select the bit rate of received data.
(Available only when STATION SELECT is set to manual mode)
- FREQUENCY: Select the frequency of received data.
(Available only when STATION SELECT is set to manual mode)
- BEACON INFORMATION: When set to ON, received data is displayed as is.

Memo

- Press **CLR** to return to the Main Menu.
- In Maintenance Mode settings can be changed press and hold both **MENU** and ***** for 3 seconds or more to go to the mode.
- This setting, even if changed, is disabled if a beacon receiver is not connected.
- If BEACON INFORMATION is set to ON, pressing the **USER** key cycles through the following screens.

BEACON INFO Screen → **SAT INFO2 Screen** → **SAT INFO1 Screen**



5.3.6 System Settings

Selecting **SYSTEM** from the "5.3 Main Menu" displays the System Settings Screen.

| | |
|------------------------------|-------------|
| M SYSTEM 23-02'11 06:07:15 U | |
| TIME DIFF | : +00:00 |
| DATE DISP | : DD-MM' YY |
| TIME DISP | : 24hr |
| DATUM | : WGS-84 |
| SPEED UNIT | : kn |
| ROT RANGE | : ±30°/min |
| ROT SMOOTHING | : 0s |
| ROLL/PITCH RANGE | : ± 5° |
| ROLL OFFSET | : + 0° |
| PITCH OFFSET | : + 0° |
| ▼NEXT PAGE | |
| W84 | ⑧G |

System Settings Screen

Procedure

1. Press the keys to move the cursor and select an item.
2. Press the key to display the menu for the selected item.


The following submenus are available.

- TIME DIFF: Enter the time difference from UTC in order to display the local time. Japanese Standard Time is UTC +9 hours, so enter "+9:00". If this is set, local time (indicated with an "L") is displayed.
- DATE DISP: Select among DD-MM'YY, 'YY-MM-DD, MM-DD'YY, DD MMM,'YY or MMM DD,'YY date display types.
- TIME DISP: Select 24 hour or 12 hour time display.
- DATUM: Select from the Geodetic System Table (Appendix 1).
- SPEED UNIT: Select from kn, km/h, or mi/h.
- ROT RANGE: Select one of the following based on the turn rate of the ship. (30,60,90,120,150,180,210,240,270,300,600,900,1200,1500,1800, 2100, 2400, 2700)
- ROT SMOOTHING: Select from 0 to 99 seconds.
- ROLL/PITCH RANGE: Select the maximum value for the roll/pitch graph shown on Compass Screen D. Normally, this should be left at the default value of 10°.
- ROLL OFFSET / PITCH OFFSET: Used when the roll / pitch graph shown on Compass Screen D is to be centered around the symbol. (Roll and pitch data output to external devices is also offset)


Memo

- Press to return to the Main Menu.
- In Maintenance Mode settings can be changed press and hold both and for 3 second or more seconds), settings can be changed.

Selecting NEXT in "5.3.6 System" allows you to continue system settings.

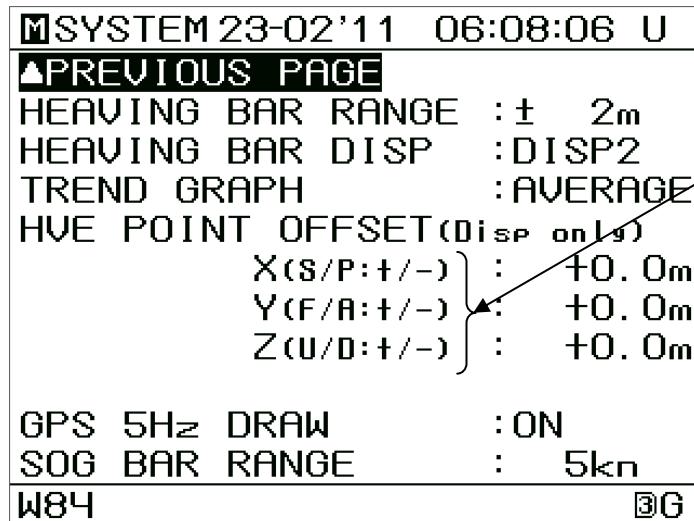

< Polarity Illustration for Inputting Offset >

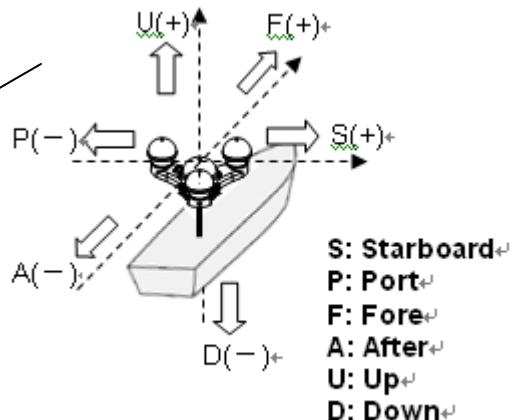


System Settings Screen

Procedure

1. Press to move the cursor and select an item in the menu.
2. Press to display menu for the selected item.

The following submenus are available.

- **RPEVIOUS:** Goes to the previous page (Refer to the previous page.)
- **HVE BAR RANGE:** Set the maximum value for the heaving bar graph, displayed on the Compass screens D, E, and F, and the Trend Graph screen (Select from 1, 2, 3, 4, 5, 10, 20, 30, 40, 50, or 100m.)
- **HVE BAR DISPLAY:** Select the type of heaving bar displayed on the Compass screens D and E.
 - OFF Heaving bar is not displayed.
 - DISPLAY 1 - 4 Refer to the following figure.
(The Compass screen F turns the display off when OFF is selected, otherwise, displays the DISP1.)

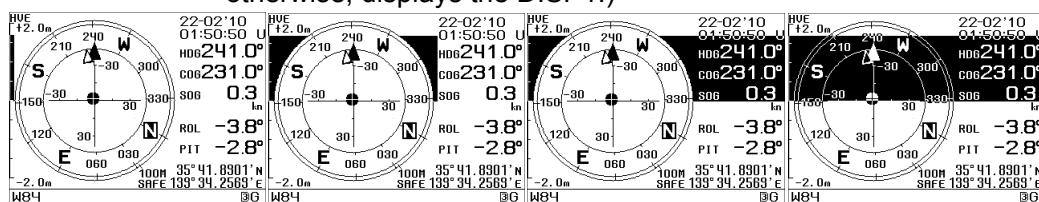


- **TREND GRAPH :**
 - AVERAGE:** Displays the average value of each sampling zone.
 - MAXIMUM:** Displays the maximum value of the absolute value of each sampling zone.
- **HVE POSITION OFFSET :** Applicable to a heaving bar display and a trend graph display only, excluding any external output. A desired offsetting position is specified by the following polarities on the basis of the installation position of the sensor unit of the device.
 - X: + for offsetting to the starboard side, - for offsetting to the port side.
 - Y: + for offsetting to the bow side, - for offsetting to the stern side.
 - Z: + for offsetting upward, - for offsetting downward.

Refer to the above "Polarity Illustration for Inputting Offset" for details.

- **5Hz DISPLAY:** Turning ON will change a display-updating cycle for the Latitude/Longitude, SOG, and COG displays to every 5Hz (200msec). Turning OFF will change a display-updating cycle back to the normal setting of every 1 sec. However, the updating cycle of the Latitude/Longitude, SOG, and COG output data for external devices is set in Data I/O Menu regardless of this setting. (Refer to 5.3.7 Data I/O Settings (DATA I/O) for details.)
- **SOG BAR RANGE :** Set the maximum value for the SOG bar range from the following. Applicable to the Compass screens E and F, and the Trend Graph screen.

| Unit of measure configured in SPEED UNIT in the SYSTEM menu | Available range |
|---|-------------------------|
| kn | 5,10,15,20,25,30,50,100 |
| km/h | 9,19,28,37,46,56,93,185 |
| mi/h | 6,12,17,23,29,35,58,115 |

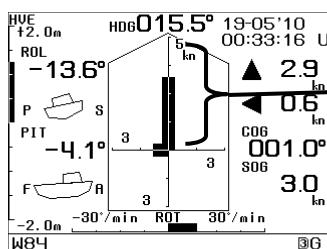

Memo

- Press **CLR** to return to the system settings.
- Settings can be changed in Maintenance Mode (Press and hold both **MENU** and ***** for about 3 seconds to go to the mode.)

Memo

● Plot interval of the trend graph

The display range of X-axis (time axis) in the trend graph can be changed by the **▲**, **▼** keys. (Select from 1 min, 5 min, 30 min, 1 hr, 3 hrs, 5 hrs, or 12 hrs.)

The plot interval of each display range is shown in the following table. The longer the display range, the longer the plot interval, and a change in the period of time shorter than this interval is not displayed (plotted.)

<Plot Interval>

| Display range of X-axis | 1min. | 5min. | 30min. | 1hour. | 3hour. | 5hour. | 12hour. |
|-------------------------|---|-------------|--------------|--------------|---------------|---------------|---------------|
| Plot interval | every 1sec. | every 4sec. | every 24sec. | every 48sec. | every 144sec. | every 240sec. | every 576sec. |
| Average | The average in each plot interval | | | | | | |
| Maximum | The maximum of the absolute value in each plot interval | | | | | | |


Memo

●Offset function for a heaving measuring position displayed on the display unit

All defaults in “HVE POINT OFFSET” are 0; in this case, the heaving measuring position is the installation position of the sensor unit. The measuring position can be offset to another position by the following procedure (as an example.)


1. Set offset values in “HVE POINT OFFSET” in “SYSTEM MENU”.
2. An example of the offset values (Refer to the following figure.)
 - X-direction: 3m rightward (enter +3m)
 - Y-direction: 10m forward (enter +10m)
 - Z-direction: 3m downward (enter -3m)
3. The heaving display on the display unit will be the display at the offset position
(● in the following figure.)

(The offset setting is not applicable to the heaving data delivered to external devices.)

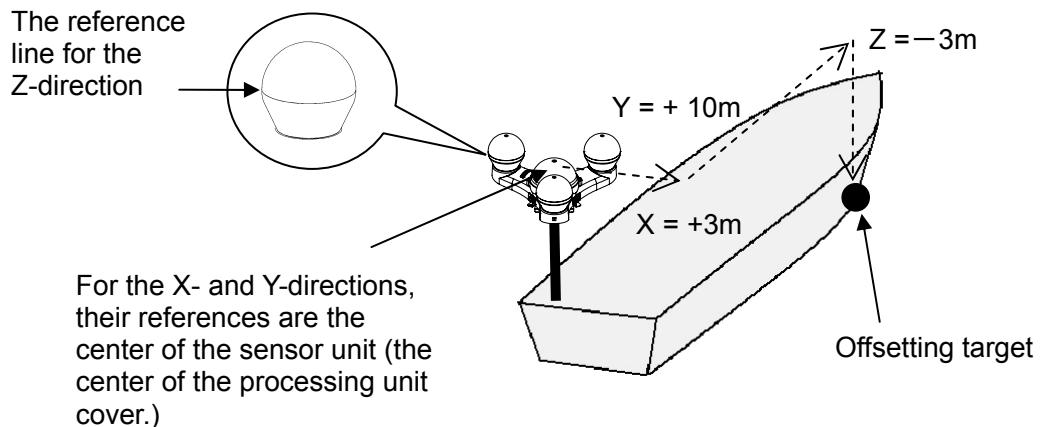

5.3.7 Data I/O Settings (DATA I/O)

Selecting **DATA I/O** from the "5.3 Main Menu" displays the DATA I/O Settings Screen. The DATA I/O Settings Screen can be used to confirm connection settings for external devices.

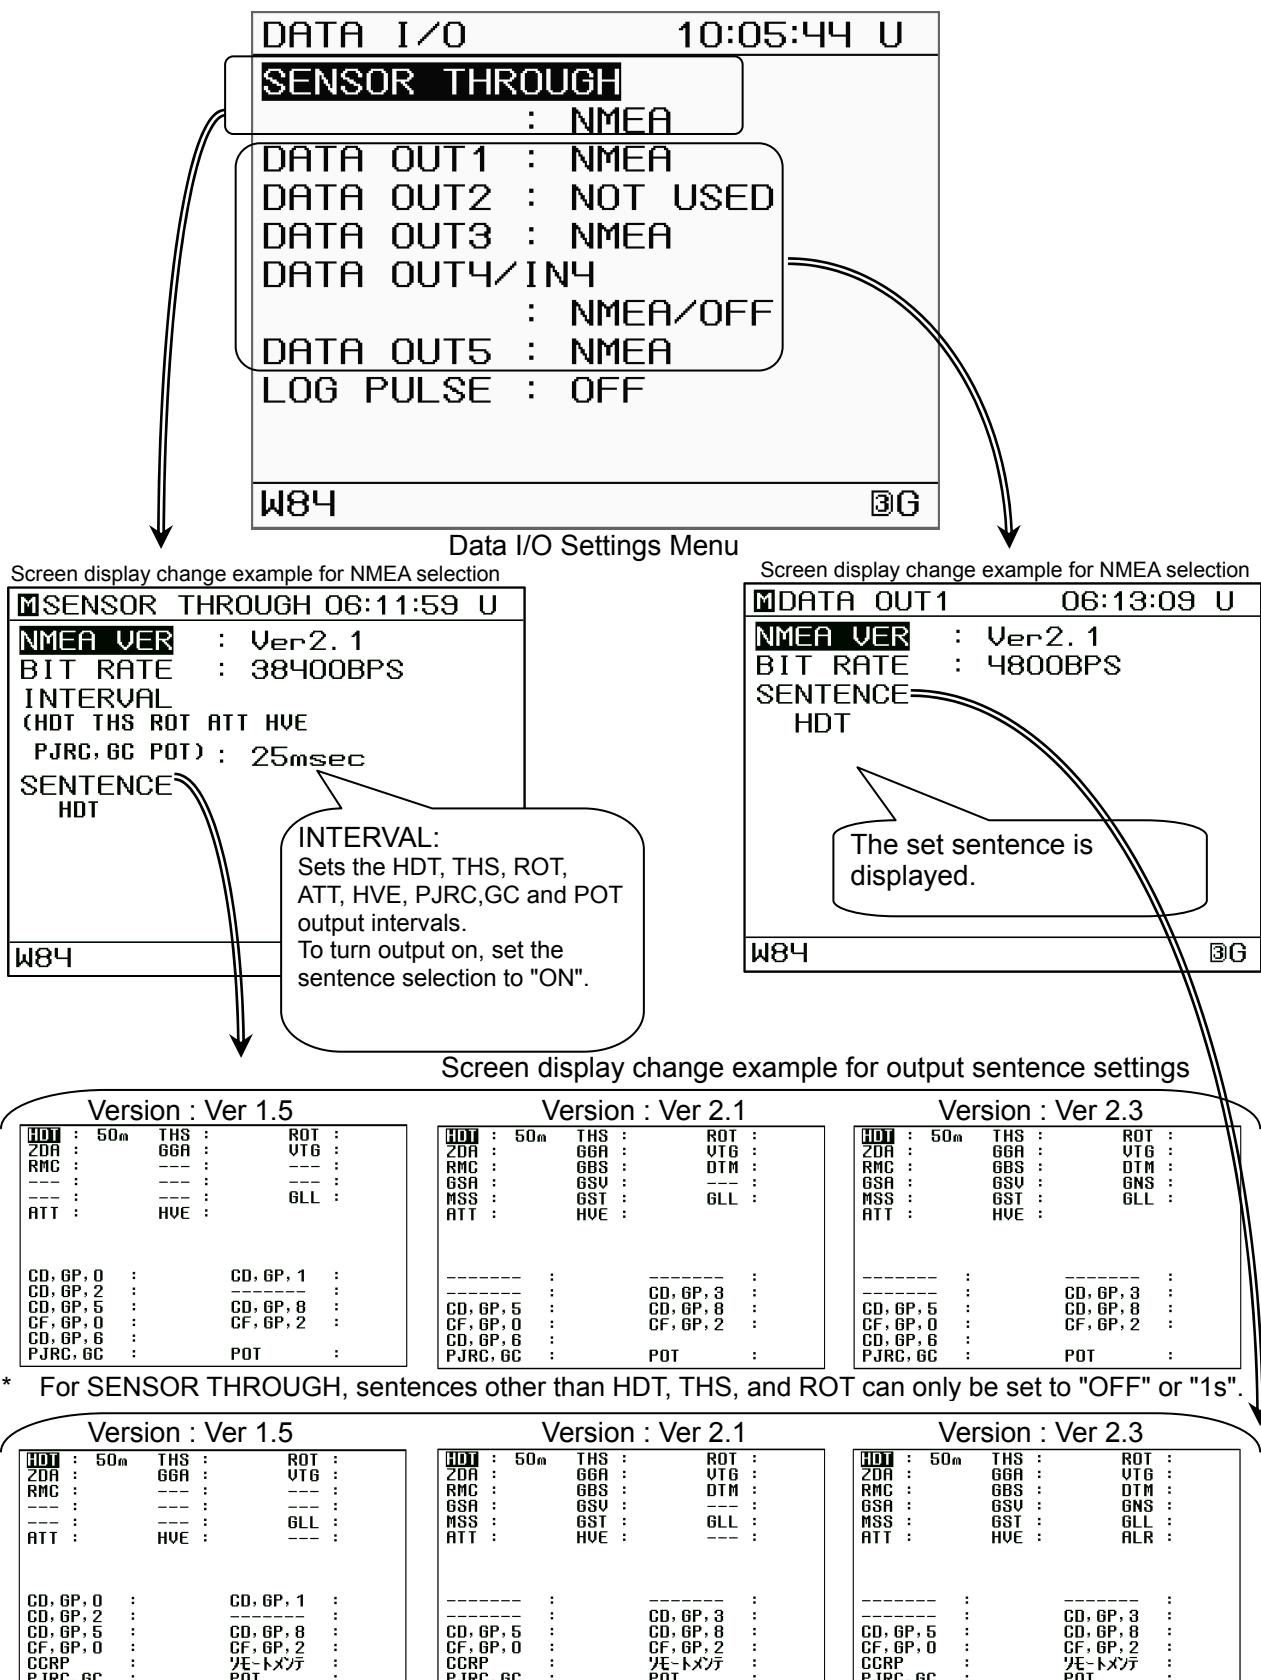

Procedure

1. Press the   keys to move the cursor and select an item.
2. Press the  key, and select the data I/O type. (Depending on the type, the screen change flow may vary)
3. Select the NMEA VER, BIT RATE, and SENTENCE.

The following submenus are available.

- SENSOR THROUGH: Outputs through data from the sensor. Connects to equipment requiring high speed output (radar, etc.). (Select from NMEA, NSK, AD-10 or IEC)
- DATA OUT1: Select from NMEA, NSK, AD-10 or IEC.
- DATA OUT3: Select NMEA, NSK or IEC.
- DATA OUT4/IN4: Select from NMEA, NSK, BEACON, IEC or 4341.
CCRP data can be entered for CCRP. (CCRP sentence)
Current data can be entered for CURRENT. (CUR and VBW sentences)
Both input and output settings can be set by this port (DATA OUT4/IN4).
Select from the following:

| Selection | Output (DATA IN/OUT2 9,10 pins of connector) | Input (DATA IN/OUT2 1,2 pins of connector) | Purpose |
|----------------|--|--|---|
| NMEA/OFF | NMEA | Off | For outputting NMEA |
| NSK/OFF | NSK | Off | For outputting NSK |
| BEACON/OFF | Dedicated setting for beacon (4800bps) | Off | For connecting beacon receiver |
| IEC/OFF | IEC | Off | For outputting IEC |
| 4341/OFF | Dedicated setting for JLR-4341(4800bps) | Off | For connecting JLR-4341 |
| NMEA/CURRENT | NMEA (4800bps) | Dedicated setting for tidal current meter (4800bps) | For inputting current meter and outputting NMEA simultaneously |
| BEACON/CURRENT | Dedicated setting for beacon (4800bps) | Dedicated setting for tidal current meter (4800bps) | For connecting beacon receiver and inputting current meter simultaneously |
| IEC/CURRENT | NMEA (4800bps) | Dedicated setting for tidal current meter (4800bps) | For inputting current meter and outputting IEC simultaneously |
| 4341/CURRENT | Dedicated setting for JLR-4341(4800bps) | Dedicated setting for tidal current meter (4800bps) | For connecting JLR-4341 and inputting current meter simultaneously. |
| NMEA/CCRP | NMEA | Dedicated setting for CCRP | For inputting CCRP and outputting NMEA simultaneously |
| BEACON/CCRP | Dedicated setting for beacon (4800bps) | Dedicated setting for CCRP (4800bps) | For connecting beacon receiver and inputting CCRP simultaneously. |
| IEC/CCRP | NMEA | Dedicated setting for CCRP | For inputting CCRP and outputting IEC simultaneously |
| 4341/CCRP | Dedicated setting for JLR-4341(4800bps) | Dedicated setting for CCRP (4800bps) | For connecting JLR-4341 and inputting CCRP simultaneously. |

- DATA OUT5: Select NMEA, NSK or IEC.
- LOG PULSE: Select from OFF, 200p/NM, or 400p/NM.

Memo

- In Maintenance Mode settings can be changed press and hold both **MENU** and ***** for 3 seconds or more to go to the mode.
- HDT and THS sentences cannot both be set at the same time for sensor throughput.
- Cannot be set for some bit rates (high rates) and output intervals (short intervals). If this is the case, decrease the bit rate, increase the output interval, and decrease the output sentences.
- Refer to "2.3 Cable Connection" for details regarding connecting external devices.

Attention

- Starting-up the display unit (turning the power on) while the sensor unit is unconnected initializes HVE sentence (heaving sentence) settings. (The output cycle setting returns to OFF.)

● Output of AD-10 format

AD-10 receiver (FR-14**, etc.) can be connected.

AD-10 format can be output from the following two ports (refer to p2-18,19 for detail).

INTERVAL (cycle) can be selected from 25msec and 200msec.

- DATA IN / OUT 1 connector: 3 thru 6 pin (Select "AD-10" in SENSOR THROUGH.)
- DATA IN / OUT 2 connector: 3 thru 6 pin (Select "AD-10" in DATA OUT1.)

Setting method (same as in SENSOR THROUGH)

1. Set "AD-10" for the data format.



2. Select 25msec or 200sec in INTERVAL.

For connecting to RADAR, select 25msec (Default is 25msec.)



Connecting method

| DATA IN/OUT1 Connector or DATA IN/OUT2 Connector | | Radar | Note |
|--|----------------------------|-----------------------|--|
| 3 (Orange) | SENSOR THROUGH | SD-A → DATA-H | Select AD-10 in the connection port setting (SENSOR THROUGH or DATA OUT1) and select 25msec or 200msec for the output interval (Refer to the above.) |
| 4 (Yellow) | or | SD-B → DATA-C | |
| 5 (Green) | DATA OUT1 (TXD1,SCK1)□1 | SC-A → SHIFT-H(CLK-H) | |
| 6 (Blue) | | SC-B → SHIFT-C(CLK-C) | |

*1 AD-10 can output through the following 2 ports: Sensor Through port and Data OUT1 port (TXD1).

*2 Use CFQ-5374 (3m) or CFQ5374-15 (15m) for the cable (Refer to 2-26 and 2-27.)

- Adjust(Adj) function for ATT and HVE sentence

ATT and HVE sentence have adjust function.

An Adj value is determined after choosing an output cycle. The more an adj value is large, the more an output is delayed.

(Usually default settings don't need to change.)

Setting method for ATT

1. Choose Output cycle

In the case of sensor through

ATT :

| |
|-----|
| OFF |
| ON |

In the case of not sensor through

ATT :

| |
|-------|
| OFF |
| 25ms |
| 100ms |
| 200ms |
| 1sec |
| 2sec |

2. And, Choose adjust Value between +0 and +10. (Default is +5)

ATT :

(Adj)

| |
|----|
| +0 |
| +1 |
| +2 |
| +3 |
| +4 |
| +5 |

Setting method for HVE

1. Choose Output cycle

In the case of sensor through

HVE :

| |
|-----|
| OFF |
| ON |

In the case of not sensor through

HVE :

| |
|-------|
| OFF |
| 25ms |
| 100ms |
| 200ms |
| 1sec |
| 2sec |

2. And, Choose adjust Value between +0 and +2. (Default is +1)

HVE :

(Adj)

| |
|----|
| +0 |
| +1 |
| +2 |

5.3.8 Checking the Version

Selecting **VERSION INFO** from the "5.3 Main Menu" displays the Version Confirmation Screen.

| VERSION INFO | | 06:15:50 U |
|--------------|------------|------------|
| | JLR-21 | |
| DISPLAY | : NWZ-4701 | |
| | R52. 01 | |
| SENSOR | : NNN-21 | |
| | R34. 01 | |
| GPS1 | : RL2. 1 | |
| GPS2 | : RL2. 1 | |
| GPS3 | : RL2. 1 | |
| W84 | | ⑧G |

Version Confirmation Menu

The following items are displayed.

- JLR-21/31: Displays model.
- DISPLAY: Displays display unit model and version.
- SENSOR: Displays sensor model and version.
- GPS1: Displays GPS receiver 1's version.
- GPS2: Displays GPS receiver 2's version.
- GPS3: Displays GPS receiver 3's version.


Memo

- Press **CLR** to return to the Main Menu.

5.3.9 Others Settings

When the current meter is connected, the layer to be displayed can be selected by the following method:

Selecting **OTHERS** from the "5.3 Main Menu" displays the Others Settings Screen.

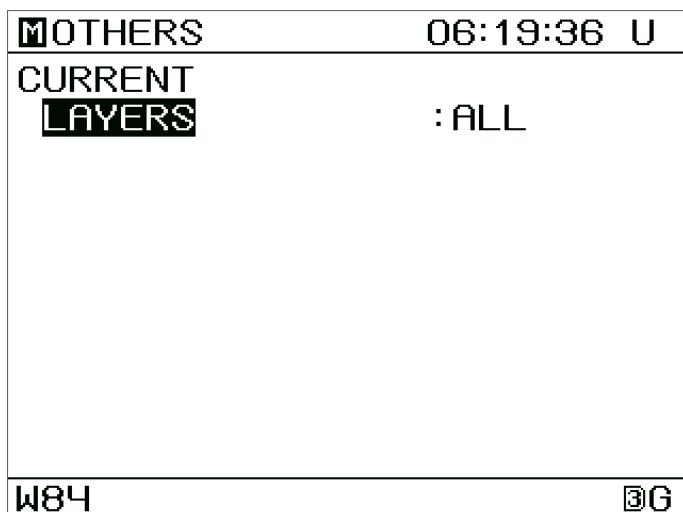

Others Settings Menu

Procedure

1. Press the **ENT** key.
2. Press the **▲** **▼** keys to move the cursor and select an item.
3. Press the **ENT** key to display the menu for the selected item.

The following items are displayed.

CURRENT

- LAYER: Select the layer number for displayed.
- DATA NO.: Select the data set number of received data.

Memo

- Press **CLR** to return to the Main Menu.
- In Maintenance Mode settings can be changed press and hold both **MENU** and ***** for 3 seconds or more to go to the mode.

● For connection of a current meter


When a current meter is connected, STW (speed through water), CURRENT (current set and speed of tidal stream), and DEPTH (depth of tidal stream) can be displayed.

(For the screen, refer to 4.1.5.)

1. Connect the current data to 1 and 2 pins of DATA IN/OUT2 connector. (Format is VBW and CUR sentence, 4800bps. There is no setting item for interval. Outputting in every 1 - 1.5 seconds from the output side is favourable.)
2. Select NMEA/CURRENT or BEACON/CURRENT in the DATA OUT4/IN4 menu in the DATA I/O screen. (IN4 port will be set for CURRENT input.) By this procedure, the data of VBW, CUR sentence, and 4800bps can be received.
3. Select the LAYER and DATA NO.

5.3.10 Language Settings (LANGUAGE)

Selecting **LANGUAGE** from the "5.3 Main Menu" displays the Language Settings screen.

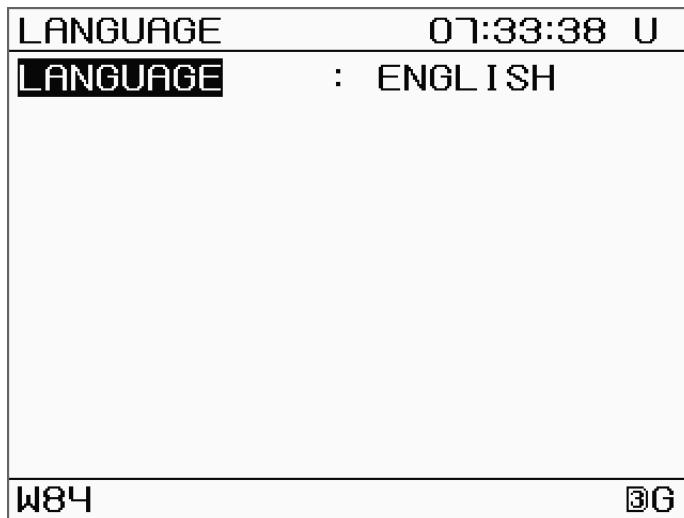

Language Settings Menu

Procedure

1. Press the **ENT** key.
2. Press the **▲** **▼** keys to move the cursor and select the language.
3. Press the **ENT** key to confirm the language selection.


Memo

- Press **CLR** to return to the Main Menu.
- In Maintenance Mode settings can be changed press and hold both **MENU** and ***** for 3 seconds or more to go to the mode.

5.4 Maintenance Menu

Use the Main Menu to confirm or change function settings.

Press and hold both **MENU** and ***** for 3 seconds or more to display the Maintenance Main Menu.

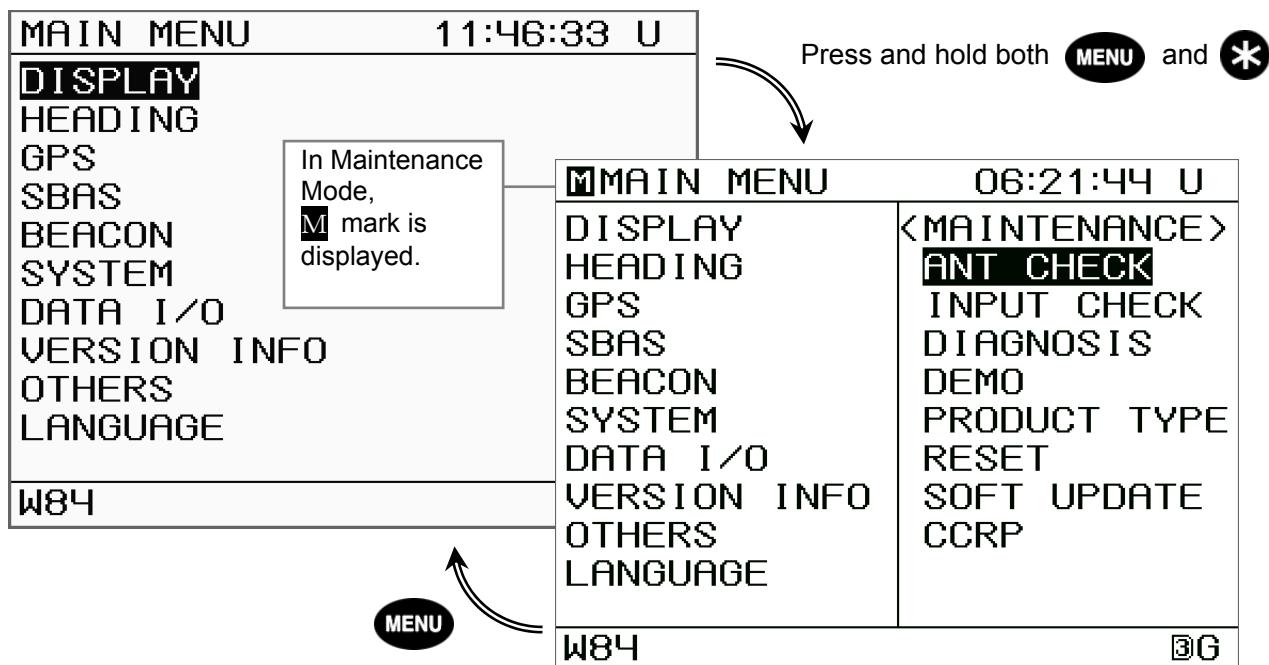

Maintenance Main Menu

Procedure

1. While holding down the **MENU** key, press and hold the ***** key for 3 seconds or more.
2. Use the **▲▼◀▶** keys to select an item, and press the **ENT** key.

Memo

The Maintenance Menu disappears if one of the following is done. (be canceled)

- The **MENU** key is pressed.
- The power is turned off.
- A screen other than the Settings menu is displayed for 3 min or more.

The following submenus are available.

- ANT CHECK: (Refer to 5.4.1) Displays sensor information.
- INPUT CHECK: (Refer to 5.4.2) Displays input information.
- DIAGNOSIS: (Refer to 5.4.3) Performs self-diagnosis on equipment.
- DEMO: (Refer to 5.4.4) Initiates equipment demonstration.
- PRODUCT TYPE: (Refer to 5.4.5) Sets unit as subdisplay,confirm the equipment number.
- RESET: (Refer to 5.4.6) Restores all settings to their factory defaults.
- SOFT UPDATE: (Refer to 5.4.7) Updates software.
- CCRP: (Refer to 5.4.8) Allows CCRP settings.

5.4.1 Antenna Check

Selecting **ANT CHECK** from the "5.4 Maintenance Menu" displays information about the sensor.

This allows confirmation of the sensor status, and can be used to determine if the equipment is faulty.

| MANT CHECK | | 05:37:54 U | | | |
|-----------------------|--------|------------|--------|-----|-----|
| TIMER | 0:20 | <AVE> | <TRUE> | | |
| HEAD | 123.0° | 123.0° | | | |
| ROLL | +1° | +1° | | | |
| PITCH | +1° | +1° | | | |
| <AVE> SAT ---LEVEL--- | | SAT | 3 | | |
| | POS | MIN | TYP | MAX | HED |
| GPS1 | 10 | 39 | 43 | 51 | 10 |
| GPS2 | 10 | 38 | 42 | 55 | 10 |
| GPS3 | 10 | 37 | 41 | 54 | 10 |
| W84 | | BG | | | |

Antenna in use
3: With three antenna
2: With two antenna

Antenna Check Screen

The following items are displayed.


- **TIMER:** Time is counted from when this screen is displayed.
- **HEAD:** Average bow heading (AVE) and current measured heading value (TRUE) are displayed.
Check that the displayed heading is correct.
- **ROLL:** Average roll (AVE) and measured roll value (TRUE) are displayed.
Confirm the indication matches to the ship's rolling.
- **PITCH:** Average pitch (AVE) and measured pitch value (TRUE) are displayed.
Confirm the indication matches to the ship's rolling.
- **GPS1 - 3:** Reception status of each GPS receiver is displayed.
SAT POS: Average number of satellites used for position measurement.
LEVEL: MIN (minimum), TYP (average), and MAX (maximum) signal levels
SAT HED: Average number of satellites used for bearing measurement.
Confirm the values of GPS1 thru GPS3 are almost the same. Also confirm the level (TYP) is around 40 to 50.
- **Antennas in use:**
3 (If it is not "3", the antenna installation position may not be suitable. Relocate the sensor to the place with clear view.)

Memo

- Press **CLR** to return to the Main Menu.

5.4.2 Input Check

Selecting **INPUT CHECK** from the "5.4 Maintenance Menu" displays input data information.

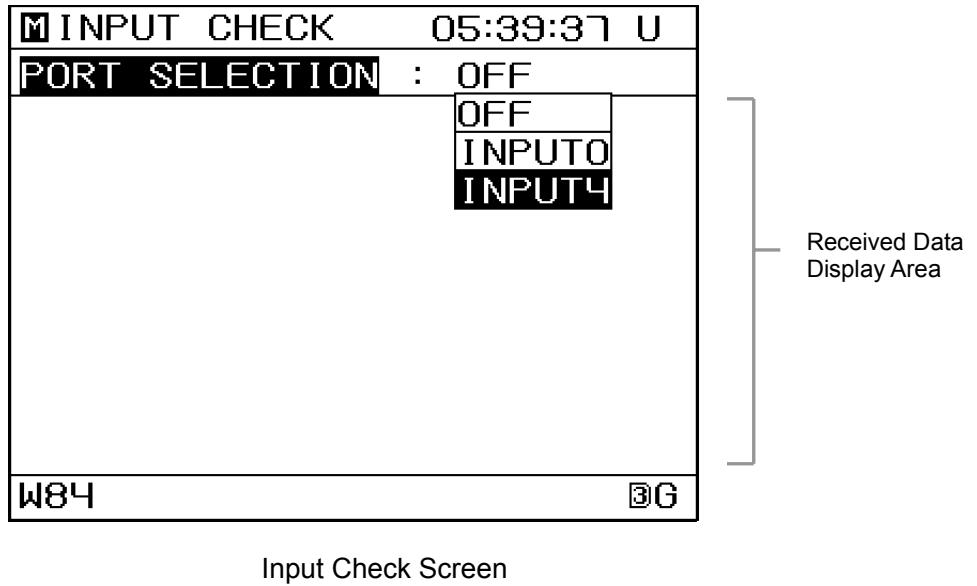

Input Check Screen

Procedure

1. Press **ENT** on the PORT SELECTION item.
2. Select the port you wish to confirm with the **▲** **▼** keys, and press **ENT** to confirm.
3. Press the **ENT** key to start data display. (Data is displayed in the received data display area)

START → ENT KEY
STOP → CLR KEY

Pressing the **CLR** key when data is displayed stops the display.

Pressing the **ENT** key again restarts the data display.

The following items are displayed.


- INPUT0: Displays data from the sensor.
However, the data is not readable, because it uses a specialized data format.
- INPUT4: Displays data from DATA IN4.
Perform this only after making sure that the input and output bit rates are equal.
(Refer to "5.3.7 Data I/O Settings (DATA I/O)" for details on setting the bit rate)

Memo

- Press **CLR** to return to the Main Menu.

5.4.3 Self-Diagnosis (DIAGNOSIS)

Selecting **DIAGNOSIS** displays the Self-Diagnosis Screen.
This screen can be used to perform self-diagnosis by the equipment.

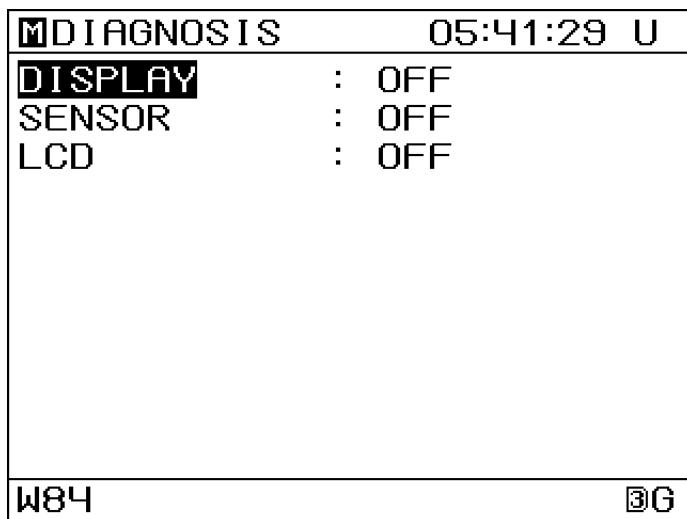

Self-Diagnosis Menu Screen

Procedure

1. Use the keys to select an item for self-diagnosis.
2. Press the key, select START, and press the key again to start self-diagnosis.

The following submenus are available.

- DISPLAY: Performs self-diagnosis of display unit. (Refer to a)
- SENSOR: Performs self-diagnosis of sensor. (Refer to b)
- LCD: Performs self-diagnosis of LCD display. (Refer to c)

Memo

- Press to return to the Main Menu.

a. Display Unit Self-Diagnosis (DISPLAY UNIT)

Once each item in the self-diagnosis is completed, the results for that item is displayed.

| DISPLAY DIAG 02:07:43 U | |
|-------------------------|------|
| ROM[1] | : OK |
| ROM[2] | : OK |
| RAM | : OK |
| SIO[0] | : OK |
| SIO[1] | : OK |
| SIO[2] | : OK |
| SIO[3] | : OK |
| SIO[4] | : OK |
| SIO[5] | : OK |

Display Unit Self-Diagnosis Screen

Attention

If any problems are detected, please contact JRC or an affiliate.

Self-Diagnosis Items

| Self-Diagnosis Item | Self-Diagnosis Contents |
|---------------------|---|
| ROM | Checks program memory and data memory operation. If errors are detected, a [1] indicates a program memory problem, and a [2] indicates a data memory error. |
| RAM | Checks temporary storage memory. |
| SIO | Checks serial interface operation. The number in brackets indicates the port channel number. If errors are detected, the displayed port channel has experienced an error. |
| Buzzer test | Checks if the buzzer sounds. |

b. Sensor Self-Diagnosis (SENSOR)

| | | |
|-----------------|----------|----|
| SENSOR DIAG | 05:43:33 | U |
| CONTROLER | | |
| ROM CHECK | : | OK |
| RAM CHECK | : | OK |
| FRAM CHECK | : | OK |
| GPS1 | | |
| ANTENNA CHECK | : | OK |
| ROM CHECK | : | OK |
| RAM CHECK | : | OK |
| FRAM CHECK | : | OK |
| EXTENSION CHECK | : | OK |
| GPS2 | | |
| W84 | | BG |

Sensor Self-Diagnosis Screen

Attention

If any problems are detected, please contact JRC or an affiliate.


c. Screen Self-Diagnosis (LCD)

This self-diagnosis repeatedly alternates the screen from black → white → black → ... Please check if there are any dead pixels.

Press the **CLR** key to stop the test.

5.4.4 Demo

Selecting **DEMO** from the "5.4 Maintenance Menu" displays the settings screen.

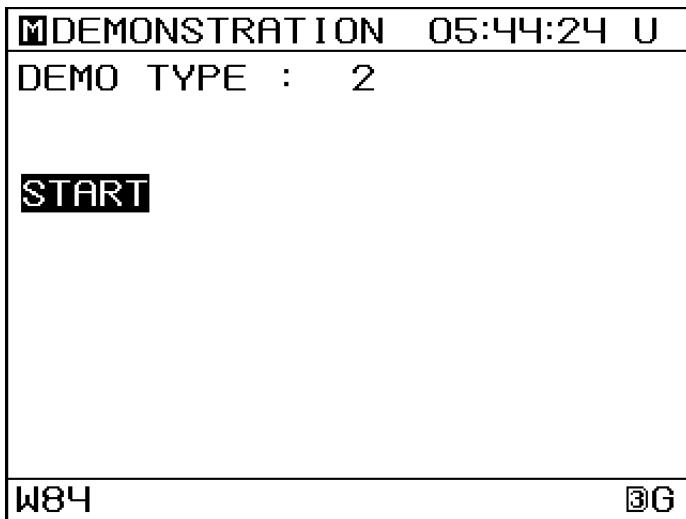


Demo Type
1: Right turn
2: Left turn
3: Manual
4: Meandering

5 and over are disabled

Demo Settings Menu

Procedure

1. Press the **ENT** key, and use the **▲** **▼** keys to enter a value.
2. Pressing the **ENT** key displays **START**. Press the **ENT** key again.
3. A message is displayed. Select **YES**, and press the **ENT** key.

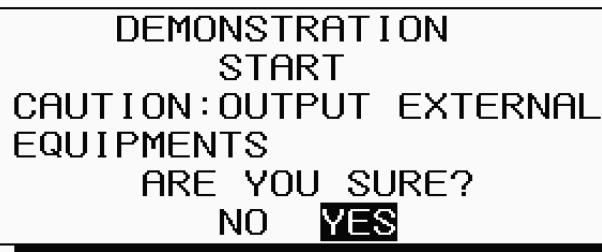


Note that if an external device is connected, demo data is sent to the external device.

Memo

- Press **CLR** to return to the Main Menu.
- A demonstration is performed by the sensor, and the data received from the sensor is displayed, so the demo cannot be run unless the sensor is connected.
- During the demo, **S** blinks at the bottom of whichever screen is displayed.
- To stop the demo:
 - a) Turning the unit off restores the unit to normal operation when the power is turned back on.
 - b) Select STOP on the demo settings screen.

5.4.5 Product Type Settings

Selecting **PRODUCT TYPE** from the "5.4 Maintenance Menu" displays the settings screen.

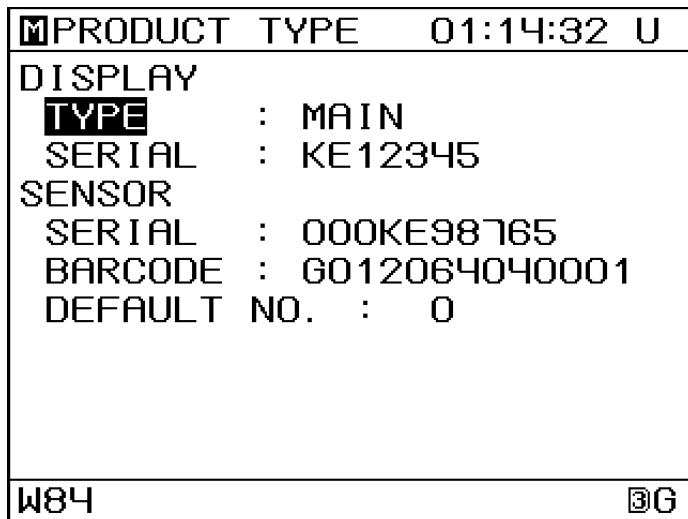

Product Type Settings Menu

The following submenus are available.

DISPLAY

- TYPE: If any additional display units are connected, set any units besides the primary unit to "SUB".
When a display unit is set to "SUB", an  symbol appears in the upper right of the screen.
- SERIAL : The equipment number can be entered. (This value is already entered when the unit is manufactured)

SENSOR

- SERIAL: Displays the equipment number. (Can not enter)
- BARCODE: Displays the internal circuit board number. (Can not enter)
- DEFAULT NO.: Normally, Displays at "0".

Memo

- Press  to return to the Main Menu.
- The SERIAL is not erased even if a master reset is performed.

Attention


- If the display unit is set to "SUB", sensor settings cannot be performed by that display unit.
- Do not change the SERIAL.
(If the serial number is accidentally erased, enter the serial number that appears on the plate on the back of the display unit)

5.4.6 Master Reset (RESET)

Selecting **RESET** from the "5.4 Maintenance Menu" displays the reset selection screen.

Make notes of setting values before performing the master reset. (Write to the last pages)

- DISPLAY: All internal settings on the display unit are erased.
SENSOR: All internal settings on the sensor are erased.
ALL: All internal settings on the display unit and sensor are erased.

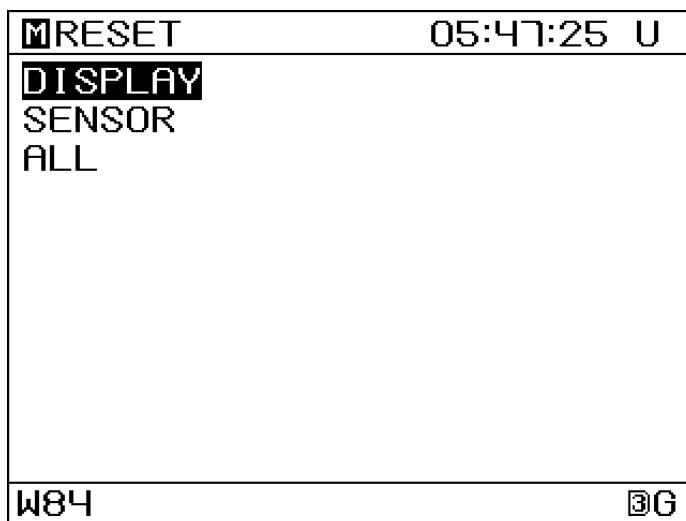

Procedure

1. Use the **▲** **▼** keys to select the item to be reset, and press the **ENT** key.
2. A confirmation message is displayed. Select **YES**, and press the **ENT** key to perform the reset.



Memo


- Press **CLR** to return to the Main Menu.

Attention

- Performing a reset erases all display unit and/or sensor settings.
(All values returns to factory defaults)

5.4.7 Software Update (SOFT UPDATE)

Selecting **SOFT UPDATE** from the "5.4 Maintenance Menu" displays the software update selection screen.

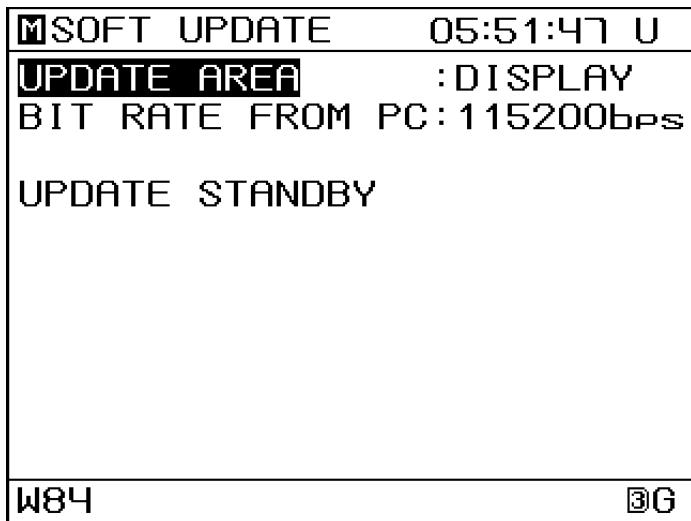

Procedure

Software Update Menu

1. Press the **ENT** key, use the **▲** **▼** keys to select the area to be written to, and press the **ENT** key to confirm.
2. Select the transmission speed (bit rate). (Selection is automatic for sensor)
3. Press the **▲** **▼** keys to move the cursor to **UPDATE STANDBY**, and press the **ENT** key.

Displayed when preparation is complete:

STANDBY OK
CONTROL A PC, TRANSMIT SOFTWARE!!
CAN USE ONLY "DIM" + "PWR" KEY

* Once the preparation completed message is displayed, you cannot return to the standard screen. If you do not intend to update the software, reboot the system.

4. Connect a computer, and transfer the program.

The following submenus are available.

- UPDATE AREA: Select the area for the update (DISPLAY/SENSOR).
- BIT RATE FROM PC: Select the update transfer speed.

Memo


- Press **CLR** to return to the Main Menu.
- Please contact JRC or an affiliate regarding software updates.

5.4.8 CCRP Settings

Selecting CCRP in "5.4 Maintenance Main Menu" displays a CCRP setting screen. CCRP stands for Consistent Common Reference Point, and is a reference point for defining the positional relationship of equipment installed outdoors using a common coordinate system. (Only CCRP settings are allowed in this device, and a measurement conversion process to CCRP is not available.)

[CCRP Settings]

- "Ship Information", "Sensor Unit Installation Position", and "CCRP Information" are set.
- "Sensor Unit Installation Position" and "CCRP Information" are set in the coordinate system having the center of stern as the origin (The unit of measure is m.)
- CCRP settings are not allowed when the display is set to the Sub Display setting (secondary display setting); set CCRP in the main display unit (primary display unit).

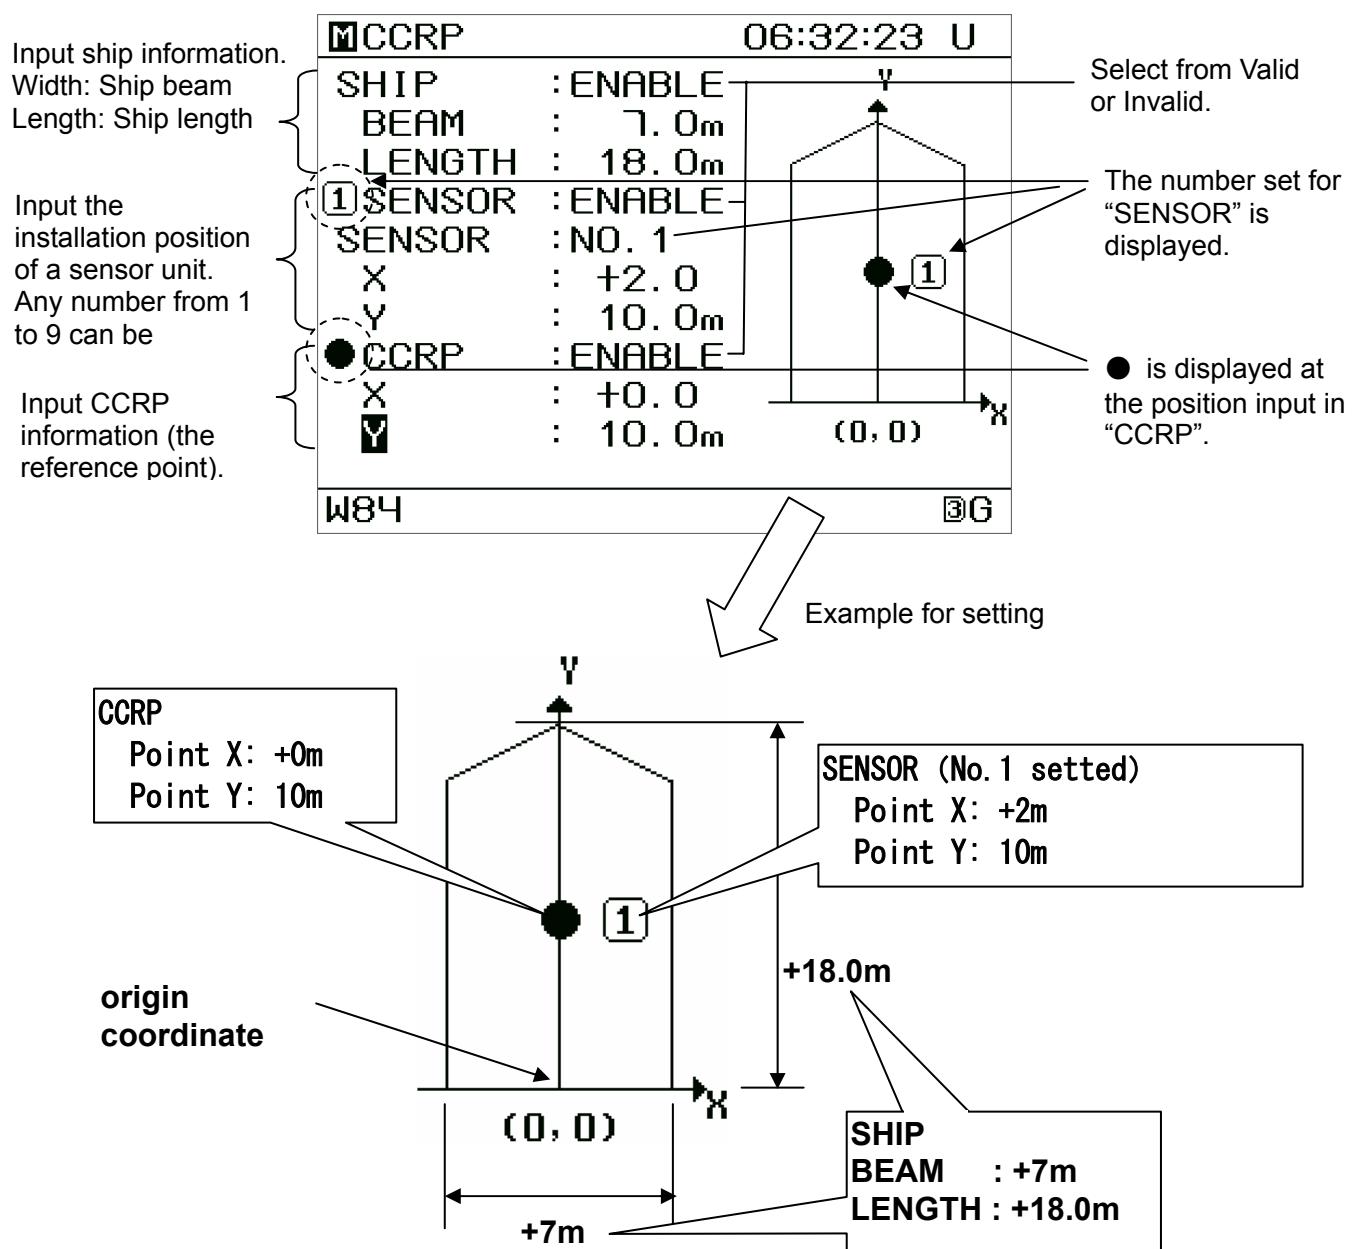

[CCRP Output]

The configured CCRP information can be output to external devices. When doing so, select "CCRP" in the Output sentence by referring to "5.3.7 Data I/O Settings (DATA I/O)".

In order to utilize CCRP data, a function compatible with CCRP transmission/reception must be connected.

[CCRP Input]

CCRP information (including ship information) can be received from external devices.


When doing so, set DATA OUT4/IN4 to one of NMEA/CCRP, beacon/CCRP, IEC/CCRP, and 4341/CCRP (Refer to "5.3.7 Data I/O Settings (DATA I/O)", and connect the signal to DATA IN4 of the Data IN/OUT2 connector (Refer to P2-27.)

When the data configured in this device is different from the data received from an external device, the following warning is displayed.

In this case, reset in this device.

* will be displayed in the status bar until the completion of the reset.

Press the CLR key to return to the Main menu.

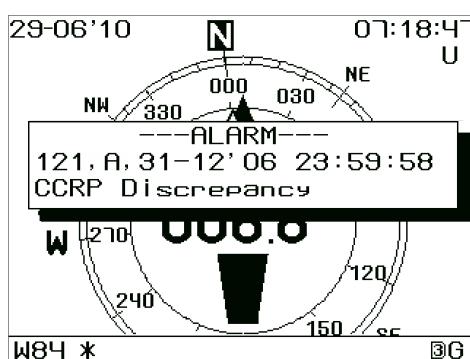

The following submenus are available.

- SHIP: Select from Valid or Invalid for Ship information.(set invalid if don't use information)
- BEAM : Ship's BEAM(0~70.0m)
- LENGTH: Ship's LENGTH(0~700.0m)
- SENSOR: Select from Valid or Invalid for SENSOR(set invalid if don't use information)
- SNESOR: Select SENSOR number (No.1~9)
- X Set point X for the installation position of a sensor unit. (unit is m)
- Y Set point Y for the installation position of a sensor unit. (unit is m)
- CCRP Select from Valid or Invalid for CCRP (set invalid if don't use information)
- X Set point X for CCRP (unit is m)
- Y Set point Y for CCRP (unit is m)

Memo

- Press **CLR** to return to the Main Menu.
- If the installation position of the sensor unit is off the ship, the sensor unit installation position (SENSOR) will be "Invalid".
In this case, change the position setting onto the ship and reset the SENSOR to "Valid".
The same applies to CCRP.

Section 6 Maintenance and Inspection

Proper maintenance may greatly affect the lifespan of the equipment. In order to maintain the equipment in peak state, perform the following regularly.



WARNING



Do not perform internal inspections or modifications of the equipment. Inspection or modification by unauthorized personnel may result in fire, electric shock, or equipment failure. Please consult with JRC or an affiliate to perform internal inspections or repair.



CAUTION



Use only the specified fuse.
Failure to do so may result in fire or equipment failure.



Use only the specified batteries.
Failure to do so may result in equipment failure or malfunction.

6.1 General Maintenance and Inspection

Operate the equipment under standard power voltage levels (DC 10.8 - 31.2 V).

The following shows general maintenance and inspection methods using standard tools.

| No. | Item | Maintenance and Inspection |
|-----|----------------|--|
| 1 | Cleaning | Clean the panel screen, knobs, and switches with a soft cloth. There are no gears in the unit, so oil lubrication is unnecessary. |
| 2 | Parts Securing | Check for loose screws, nuts, and connectors, and connect securely any that have loosened. |

Perform inspection of the displayed items when the equipment is functioning normally. Compare operating results to the normal operation values in order to detect problems quickly.

6.2 Alarms


Refer to 5.2.8 and check if any alarm is given or not. If it is, check the details referring to the list shown below.

Regarding the troubleshooting, Refer to "6.3 Troubleshooting".

Alarm List

| Message Number | Message Contents | Alarm Causes |
|----------------|------------------------|---|
| 001 | GPS1 Error | GPS Core 1 Error (Sensor) |
| 002 | GPS2 Error | GPS Core 2 Error (Sensor) |
| 003 | GPS3 Error | GPS Core 3 Error (Sensor) |
| 005 | X Gyro Error | X Axis Gyroscope Error (Sensor) |
| 006 | Y Gyro Error | Y Axis Gyroscope Error (Sensor) |
| 007 | Z Gyro Error | Z Axis Gyroscope Error (Sensor) |
| 008 | G Sensor Error | Tiltmeter Error (Sensor) |
| 009 | Temp Sensor Error | Temperature Sensor Error (Sensor) |
| 010 | Mag Sensor Error | Magnetic Sensor Error (Sensor) |
| 011 | FRAM Error | Memory Error (Sensor) |
| 012 | SRAM Error | Memory Error (Sensor) |
| 013 | ROM Error | Memory Error (Sensor) |
| 014-051 | Task Error | Sensor Internal Error |
| 053-056 | --- | Excessive Vibration |
| 101 | DIAG Error(Display) | One or more errors detected during display unit self-diagnosis |
| 102 | Flash ROM Access Error | Flash ROM Deletion, Write Error (ROM[1][2]) |
| 103 | RAM Access Error | RAM Read, Write Error |
| 104 | SIO(0) Error | SIO[0] Error |
| 105 | SIO(1) Error | SIO[1] Error |
| 106 | SIO(2) Error | SIO[2] Error |
| 107 | SIO(3) Error | SIO[3] Error |
| 108 | SIO(4) Error | SIO[4] Error |
| 109 | SIO(5) Error | SIO[5] Error |
| 110 | No Heading | Bearing Calculation Error, Unable to Obtain Data |
| 111 | No Fix | Position Calculation Error, Unable to Obtain Data |
| 112 | DIAG Error(Sensor) | Sensor Self-Diagnosis Error |
| 113 | Sensor Interface Error | Sensor Unconfigurable (Configuration Not Possible) |
| 114 | No Sensor Data | Sensor Periodic Input Not Possible (Position Measurement Data Unobtainable) |
| 115 | No Roll | Roll Calculation Error, Unable to Obtain Data |
| 116 | No Pitch | Pitch Calculation Error, Unable to Obtain Data |
| 117 | No ROT | ROT Calculation Error, Unable to Obtain Data |
| 120 | Anchor Out | Exceeding the anchor watch setting range. |
| 121 | CCRP Discrepancy | CCRP Discrepancy |

ALARM Example

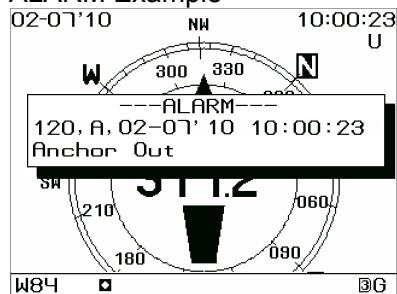

120 : Message Number
A : Threshold exceeded
02 - 07'10 : 2010/07/02
10 : 00 : 23 : 10h 00min 23sec
Anchor Out : Exceeding the anchor watch setting

6.3 Troubleshooting

6.3.1 Troubleshooting



WARNING



Do not perform internal inspections or modifications of the equipment. Inspection or modification by unauthorized personnel may result in fire, electric shock, or equipment failure. Please consult with JRC or an affiliate to perform internal inspections or repair.

The following is reference information concerning identification of problems.

| Problem Behavior | Possible Causes | Troubleshooting Measures |
|--|---|--|
| The power does not turn on when the power switch is pressed. | Power is not being supplied by the ship junction box. | Check the cabling from the junction box. |
| | Power is not being supplied by the power supply equipment (option). | Check the power supply unit cabling. |
| | The fuse connected to the power cable has blown. | If there are no problems in the cabling, replace the fuse. |
| | The power supply equipment (option) fuse has blown. | If there are no problems in the cabling, replace the fuse. |
| | The display unit switch is broken. | Consult with JRC or an affiliate. |
| The LCD display does not display anything. | The LCD display is broken. | Consult with JRC or an affiliate. |
| The display does not light up. | | |
| The alarm sound. Is not generated | The buzzer is broken. | Consult with JRC or an affiliate. |
| The click does not sound. | The key press sound is turned off. | Refer to 5.3.1.3 for setting the key press sound. |
| There is no reception. (from sensor) | The sensor connection cable is cut. | Check the connection cable. |
| | The sensor is broken. | Consult with JRC or an affiliate. |
| There is no reception. (from external devices) | The polarity of the serial cable is incorrect. | Check the polarity of the cable. |
| | The interface does not match. | Check the interface. |
| | An unsupported sentence has been entered. | Check the entered commands and version. |
| There is no transmission. (to external devices) | Output settings have not been configured. | Refer to 5.3.7 for setting the key press sound. |
| | The configured channel is incorrect. | Refer to 5.3.7 for setting the key press sound. |
| | The DISP-DPU or connector board is broken. | Consult with JRC or an affiliate. |
| | | |

6.3.2 Repair Unit

Repair units and their models are shown below.

| | Name | Model | Notes |
|---|-----------------|-----------|---------------------------|
| 1 | DISP-DPU | CMJ-501C1 | For NWZ-4701 Display Unit |
| 2 | LCD Unit | CCN-392A | For NWZ-4701 Display Unit |
| 3 | Keyboard Unit | CMD-953A | For NWZ-4701 Display Unit |
| 4 | Connector Board | CMH-2192C | For NWZ-4701 Display Unit |
| 5 | Processing Unit | CMJ-497-U | For NNN-21/31 Sensor Unit |
| 6 | Antenna Unit | CAY-62 | For NNN-21/31 Sensor Unit |

Fuse

| | Name | Model | Notes |
|---|---------|---------------|---------------------------|
| 1 | 2A Fuse | MF60NR 250V 2 | For NWZ-4701 Display Unit |

6.3.3 Regular Replacement Parts

Parts which should be regularly replaced are shown below.

Contact JRC or an affiliate to order.

| | Name | Model | Life | Notes |
|---|------------------------------------|-------------|------------------------|---|
| 1 | LCD Unit (Inside display unit) | CCN-392A | 40000 hours | Approximately 5 years of continuous use |
| 2 | Lithium Battery (Inside sensor) | BR-2/3AGE2P | Approximately 10 years | Reception is possible even without battery power. (It will take 30 to 60 seconds longer to fix the position) |

Section 7 After-Sales Service

7.1 Warranty

- Specific periods may vary based on our warranty policies, but the standard warranty period is one year from the date of purchase.

7.2 Repair Parts Stocking Period

- We keeps functional repair parts for this equipment (parts necessary for the functioning of this equipment) in stock for 10 years from the discontinuation of production.

7.3 When Requesting Service

When you think the equipment is not operating properly, please read "6.3 Troubleshooting" carefully, and inspect the equipment again. If the problem persists, stop using the equipment, and consult your dealer, or a JRC branch or affiliate.

- Repairs during the warranty period
Should a malfunction or failure occur when the equipment is operated according to the descriptions and instructions contained herein, it is repaired free of charge during the warranty period by JRC or another location specified by your dealer. However, any repair for failures resulting from misuse, negligence, or natural disasters, fire, or other Acts of God is charged.
- Repairs after the warranty period
Repairs to restore the proper equipment operation can be made at a specified rate with the user's consent. In this case, the equipment can either be sent to JRC or an affiliate, or on-ship repairs can be performed at a location specified by JRC or a sales affiliate. Repairs which cannot be performed on-board the ship needs to be performed in a repair plant.
- Information that needs to be provided when requesting service
 - Name, model, production date, and serial number
 - Detailed description of the malfunction (alarm number, etc.)
 - Name, address, and telephone number of your company or organization

7.4 Recommended Checks and Inspections

Equipment performance is subject to degradation due to age and change of component conditions over time. In addition to your own routine check, additional inspection and maintenance is recommended. Please consult with your dealer or one of our local offices. Note that this inspection and maintenance is not free of charge.

If you have any other questions about after-sales service, please direct your inquiries to your dealer or nearest local office.

A list of branches is provided at the end of the "Contact List".

Section 8 Disposal



WARNING



When disposing of the used lithium battery, place insulating tape over the battery terminals, or otherwise insulate the battery. Failure to do so may result in heating, explosion, or fire due to a shorted battery.

8.1 Disposal of the Equipment

- Observe all rules and regulations of the local authorities when disposing of this equipment.

8.2 Disposal of Used Batteries

This equipment contains a lithium battery.

- When disposing of the used lithium battery, place insulating tape over the battery terminals, or otherwise insulate the battery. Dispose of the battery properly as directed by the local authorities. Consult your dealer, our sales office, or the local authorities for further details on disposal methods.

Section 9 Specifications

9.1 Display Unit (NWZ-4701)

9.1.1 Panel

- | | |
|----------------------|-----------------------------------|
| (1) Display Unit: | 5.7 inch FSTN LCD, 320 x 240 dots |
| (2) Operating Keys: | 12 keys |
| (3) Backlight (LED): | LCD and key lighting |
| (4) Dimmer Levels: | Bright, medium, dark, off |

9.1.2 Power Supply

- | | |
|---------------------------|--|
| (1) Power Supply Voltage: | 12/24 VDC (+30%, -10%) |
| (2) Power Consumption: | Maximum 12W (including sensor) Maximum 6W (except sensor) |

9.1.3 Environment

- | | |
|----------------------------|--------------------------|
| (1) Operating Temperature: | -15°C to +55°C |
| (2) Storage Temperature: | -25°C to +70°C |
| (3) Waterproofing: | correspond to IP44 |
| (4) Vibration: | IEC60945 ed.4 conformant |
| (5) EMC: | IEC60945 ed.4 conformant |
| (6) Compass Safe Distance | 1.35m(STD)、0.75m(STEER) |

9.1.4 Dimensions and Mass

- | | |
|-----------------|--|
| (1) Dimensions: | 267.4mm (W) X 162mm (H) X 85mm (D) Except projections |
| (2) Mass: | Approximately 2.3 kg |

9.1.5 External Interfaces

◇Serial Transmission

| Name | Specifications | I/O | Format | Notes |
|----------------|----------------|---------------|-------------------------------|--|
| Sensor Through | RS422 | Output | NMEA / NSK / AD-10 / IEC | |
| DATA OUT1 | RS422 | Output | NMEA / NSK / AD-10 / IEC | |
| | RS232 | Input /Output | | Dedicated port for updating. Not usually use. |
| DATA OUT3 | RS422 | Output | NMEA / NSK / IEC | |
| DATA OUT4 | RS422 | Output | NMEA / NSK / BEACON/ IEC/4341 | |
| | RS422 | Input | CURRENT/CCRP | CUR, VBW sentence |
| DATA OUT5 | RS422 | Output | NMEA / NSK / IEC | |

(1) NMEA

Specification: NMEA0183
 Version: Ver. 1.5 / 2.1 / 2.3
 Transmission Speed: Based on setting (4800 / 9600 / 19200 / 38400 / 57600 bps)
 Data bit: 8 bit / parity: none / stop bit: 1 bit
 Output Interval: Based on setting
 (20ms / 25ms / 50ms / 100ms / 200ms / 500ms / 1s / 2s / 3s / 4s /
 5s / 6s / 7s / 8s / 9s)
 Sentence: HDT / THS / ROT / ZDA / GGA / VTG / RMC / GBS / DTM / GSA /
 GSV / GNS / MSS / GST / GLL/ ALR/ ATT/ HVE

- 1 : The sensor through selects either HDT or THS sentence, but not both.
- 2 : Selectable sentences depends on the version.
- 3 : Some combinations of output sentences, bit rates, and output intervals may not be possible.
- 4 : ATT and HVE sentences can be set from output cycles of 25ms/100ms/200ms/1s/2s only. The both sentences are not a complete guarantee at present.

(2) IEC

Specification: IEC61162

(3) JRC Sentence(Only for service):

PJRCDFGP,0 / PJRCDFGP,1 / PJRCDFGP,2 / PJRCDFGP,3 /
 PJRCDFGP,5 / PJRCDFGP,8 / PJRCDFGP,0 / PJRCDFGP,2 /
 PJRCDFGP,6 / CCRP / REMOTE MAINTENANCE

(4) NSK

Fixed

(5) AD-10

Period: 25ms / 200ms

◇Contact Signal

| Name | Specifications | Notes |
|------------------|---------------------------|---------------------------|
| Contact Output 0 | External Buzzer 1 | For special purpose usage |
| Contact Output 1 | Log Pulse | Off, 200p/NM , 400p/NM |
| Contact Output 2 | External Buzzer 2 | For general use |
| Contact Input | External Buzzer 2 Release | |

9.2 Sensor Unit (NNN-21/31)

9.2.1 Electrical Specifications

- | | |
|----------------------------|--|
| (1) Reception Method: | Multichannel all in view (12CH + SBAS 1CH) |
| (2) Reception Frequency: | 1575.42MHz ± 1MHz (C/A code) |
| (3) Positional Accuracy: | 0.25° RMS (NNN-31) 0.5° RMS (NNN-21) |
| (4) Tracking Rate of Turn: | 45° / sec. |
| (5) Tracking Acceleration: | 1G |
| (6) Roll/Pitch Output: | -60° ~ +60° |

9.2.2 Environment

- | | |
|----------------------------|--------------------------|
| (1) Operating Temperature: | -25°C ~ +55°C |
| (2) Storage Temperature: | -25°C ~ +70°C |
| (3) Waterproofing: | correspond to IP56 |
| (4) Vibration: | IEC60945 ed.4 conformant |
| (5) EMC: | IEC60945 ed.4 conformant |
| (6) Compass Safe Distance | 0.30m(STD/STEER) |

9.2.3 Dimensions and Mass

- | | |
|-----------------|---|
| (1) Dimensions: | NNN-31 φ 1152 x 286 mm NNN-21 φ 691 x 285 mm |
| (2) Mass: | NNN-31 Approximately 10 kg NNN-21 Approximately 5.9 kg |
| (3) Cable: | 10 m |

Appendix

Appendix 1 List of Geodetic Systems

| Screen Display | Setting | | Geodetic System |
|----------------|-----------|----|---|
| W84 | WGS-84 | 0 | WGS-84 |
| W72 | WGS-72 | 1 | WGS-72 |
| TOY | JAPAN | 2 | Tokyo Datum |
| NAS | NAD27 USA | 3 | North American 1927 (USA) |
| NAS | NAD27 CAN | 4 | North American 1927 (Canada, Alaska) |
| EUR | EUROPE 50 | 5 | Europe 1950 (Europe) |
| AUA | AUSTRA 66 | 6 | Australian geodetic 1966 (Australia) |
| OGB | OSGB-36 | 7 | Ordnance Survey of Great Britain (England) |
| 008 | NAD-83 | 8 | NAD-83 |
| ADI | ADI | 11 | Adindan (Ethiopia, Sudan) |
| ARF | ARF | 12 | ARC 1950 (Botswana) |
| AUG | AUG | 13 | Australian Geodetic 1984 (Australia) |
| BER | BER | 14 | Bermuda 1957 (Bermuda islands) |
| BOO | BOO | 15 | Bogota Observatory (Columbia) |
| CAI | CAI | 16 | Compo Inchauspe (Argentine) |
| CHI | CHI | 17 | Chatham 1971 (Chatham Islands) |
| CHU | CHU | 18 | Chua Astro (Paraguay) |
| COA | COA | 19 | Corrego Alegre (Brazil) |
| BAT | BAT | 20 | Djakarta (Vatavia) (Sumatra) |
| EUR | EUR | 21 | European 1979 (Europe) |
| GEO | GEO | 22 | Geodetic Datum 1949 (New Zealand) |
| GUA | GUA | 23 | Guam 1963 (Guam) |
| 024 | 024 | 24 | Hayford 1910 (Finland) |
| HJO | HJO | 25 | Hjorsey 1955 (Iceland) |
| IND | IND | 26 | Indian (India, Napal) |
| IRL | IRL | 27 | Ireland 1965 (Ireland) |
| KEA | KEA | 28 | Kertau 1948 (West Malaysia, Singapore) |
| LCF | LCF | 29 | L.C.5 Astro (Cayman Brac island) |
| LIB | LIB | 30 | Liberia 1964 (Liberia) |
| LUZ | LUZ | 31 | Luzon (Philippines) |
| MER | MER | 32 | Merchich (Morocco) |
| MIN | MIN | 33 | Minna (Cameroon) |
| NAH | NAH | 34 | Nahrwan (Oman) |
| NAP | NAP | 35 | Naparima, BWI (Trinidad and Tobago) |
| OEG | OEG | 36 | Old Egyptian (Egypt) |
| OHA | OHA | 37 | Old Hawaiian (Hawaiian Islands) |
| PLN | PLN | 38 | Pico de las Nieves (Canary Islands) |
| PRP | PRP | 39 | Provisional south American 1956 (South America) |
| HIT | HIT | 40 | Provisional south Chilean 1963 (South Chile) |
| PUR | PUR | 41 | Puerto Rico (Puerto Rico, Virgin Islands) |
| QUO | QUO | 42 | Qornoq (South Greenland) |
| 043 | 043 | 43 | RT90 (Sweden) |
| SAO | SAO | 44 | Santa Braz (San Miguel, Santa Maria islands) |
| SAN | SAN | 45 | South American 1969 (South America) |
| 046 | 046 | 46 | Southwest Base (Faial, Gracinao, Pico, San Jorge, Terceira islands) |
| TIL | TIL | 47 | Timbalai 1948 (Brunei, Malaysia) |
| SPK | SPK | 48 | SK-42(Pulkovo 42) |

Appendix 2 Data Formats

[1] Output Data

[1-1] Data Sentences

1. Sentences are not necessarily output in the order shown below. Make sure that sentences can be received in any order.
2. The length of each sentence is variable. Make sure that sentences of any length can be received.

NMEA0183 Output Sentences

| | | |
|-----|---|--|
| HDT | - | Heading true |
| THS | - | True heading and status |
| ROT | - | Rate of turn |
| ZDA | - | Time and date |
| GGA | - | Global positioning system (GPS) fix data |
| VTG | - | Course over ground and ground speed |
| RMC | - | Recommended minimum specific GNSS data |
| GBS | - | GNSS satellite fault detection |
| DTM | - | Datum reference |
| GSA | - | GNSS DOP and active satellites |
| GSV | - | GNSS satellites in view |
| GNS | - | GNSS fix data |
| MSS | - | MSK beacon receiver signal status |
| GST | - | GNSS pseudorange noise statistics |
| GLL | - | Geographic position – latitude/longitude |
| ATT | - | Attitude information |
| HVE | - | Heaving information |
| ALR | - | Set Alarm State |

JRC Output Sentences (Only for service)

PJRCD, GP, 0 PJRCD, GP, 1 PJRCD, GP, 2 PJRCD, GP, 3
PJRCD, GP, 5 PJRCD, GP, 8 PJRCF, GP, 0 PJRCF, GP, 2
PJRCD, GP, 6

[1-2] Protocols

NMEA Protocols(JRC Protocols, IEC Protocols)

Bit Rate: 4800, 9600, 19200, 38400, 57600bps (Select one)
Data Bits: 8 bits
Parity: None
Start Bit: 1 bit
Stop Bit: 1 bit
Transmission Interval: 20ms, 25ms, 50ms, 100ms, 200ms, 500ms
 1s, 2s, 3s, 4s, 5s, 6s, 7s, 8s, 9s (Select one)

Some combinations of bit rate, transmission interval, and number of sentences are not possible. In such a case, increase the transmission interval or configure the equipment to output the minimum required sentences only.

[1-3] Data Format

■ HDT - Heading true

\$GPHDT,xxx.x,T*hh<CR><LF>
1 2

- 1: Heading, degrees true
- 2: Checksum (Version 2.1, 2.3)

■ THS - True heading and status

\$GPTHGS,xxx.x,x*hh<CR><LF>
1 2 3

- 1: Heading, degrees true
- 2: Mode indicator
 - A = Autonomous
 - E = Estimated (dead reckoning)
 - S = Simulator mode
 - V = Data not valid (including standby)
- 3: Checksum

■ ROT - Rate of turn

\$GPROT,uxxx.x,A*hh<CR><LF>
1 2 3

- 1: Rate of turn, °/min, "-" = bow turns to port
- 2: Status
 - A = data valid
 - V = data invalid
- 3: Checksum

■ ZDA - Time and date

\$GPZDA, hhmmss,xx,xx,xxxx,xx,xx*hh<CR><LF>
1 2 3 4 5 6 7

- 1: UTC
- 2: Day, 01 to 31 (UTC)
- 3: Month, 01 to 12 (UTC)
- 4: Year (UTC)
- 5: Local zone hours, 00h to ±13h
- 6: Local zone minutes, 00 to +59
- 7: Checksum

■ GGA - Global positioning system (GPS) fix data

Version 1.5

\$GPGGA, hhmmss, ddmm.mmm, a, dddmm.mmm, a, x, x, xx, uxxxx, M, uxxx, M, xx, xxxx<CR><LF>
1 2 3 4 5 6 7 8 9 10 11 12 13 14

Version 2.1

\$GPGGA, hhmmss, ddmm.mmmm, a, dddmm.mmmm, a, x, xx, xx, uxxxx, M, uxxx, M, xx, xxxx*hh<CR><LF>
1 2 3 4 5 6 7 8 9 10 11 12 13 14 15

Version 2.3

\$GPGGA, hhmmss.ss, ddmm.mmmm, a, dddmm.mmmm, a, x, xx, xx, uxxxx, M, uxxx, M, xx, xxxx*hh<CR><LF>
1 2 3 4 5 6 7 8 9 10 11 12 13 14 15

| | | |
|---------|---|--------------------|
| 1: | UTC of position | (Version 1.5, 2.1) |
| 1: | UTC of position (1/100 sec) | (Version 2.3) |
| 2, 3: | Latitude (deg, min), N / S | |
| 4, 5: | Longitude (deg, min), E / W | |
| 6: | GPS quality indicator 0 = fix not available or invalid 1 = GPS SPS mode 2 = differential GPS, SPS mode 8 = Simulator mode | (Version 2.3 only) |
| 7: | Number of satellites in use, 00-12, may be different from the number in view | |
| 8: | Horizontal dilution of precision, 00-20 | |
| 9, 10: | Antenna altitude above/below mean sea level (geoid) (m) | |
| 11, 12: | Geoidal separation (m) | |
| 13: | Version 1.5 →Age of differential GPS data (NULL if not performing DGPS positioning) Version 2.1 →Age of differential GPS data (00 if not performing DGPS positioning) Version 2.3 →Age of differential GPS data (NULL if not performing DGPS positioning) | |
| 14: | Version 1.5 →Differential reference station ID, 0000-1023 Version 2.1 →Differential reference station ID (0000 if not performing DGPS positioning) Version 2.3 →Differential reference station ID (NULL if not performing DGPS positioning) | |
| 15: | Checksum | |

Note

For version 1.5, when the position is not fixed, outputs last measured position data.
For version 2.3, when the position is not fixed, outputs last measured position data, and time.
For version 2.3, when power is turned on, or master reset is performed, the initial time, and position settings are NULL.

■ VTG - Course over ground and ground speed

Version 1.5

\$GPVTG, xxx.x,T,,,xxx.x,N,,<CR><LF>
1 2 3 4

Version 2.1

\$GPVTG, xxx.x,T,,,xxx.x,N,xxx.x,K*hh<CR><LF>
1 2 3 4 5 6 7

Version 2.3

\$GPVTG, xxx.x,T,,,xxx.x,N,xxx.x,K,x*hh<CR><LF>
1 2 3 4 5 6 7 8

1, 2: Course over ground, degrees true

3, 4: Speed over ground, knots

5, 6: Speed over ground, km/h

7: Checksum (Version 2.1)

7: Mode indicator (Version 2.3)

A = Autonomous mode

D = Differential mode

N = Data not valid

S = Simulator mode

8: Checksum (Version 2.3)

■ RMC - Recommended minimum specific GNSS data

Version 1.5

\$GPRMC, hhmmss,A,ddmm.mm,a,dddmm.mm,a,xxx.x,xxx.,xxxxxx,,*hh<CR><LF>
1 2 3 4 5 6 7 8 9 10

Version 2.1

\$GPRMC, hhmmss,A,ddmm.mmmm,a,dddmm.mmmm,a,xxx.x,xxx.,xxxxxx,,*hh<CR><LF>
1 2 3 4 5 6 7 8 9 10

Version 2.3

\$GPRMC, hhmmss.ss,A,ddmm.mmmm,a,dddmm.mmmm,a,xxx.x,xxx.x,xxxxxx,,x*hh<CR><LF>
1 2 3 4 5 6 7 8 9 10 11

1: UTC of position fix (Version 1.5, 2.1)

1: UTC of position fix (1/100 sec) (Version 2.3)

2: Status

A = data valid

V = navigation receiver warning

3, 4: Latitude (deg, min), N / S

5, 6: Longitude (deg, min), E / W

7: Speed over ground, knots

8: Course over ground, degrees true

9: Date: dd/mm/yy

10: Checksum (Version 1.5, 2.1)

10: Mode indicator (Version 2.3)

A = Autonomous mode

D = Differential mode

N = Data not valid

S = Simulator mode

11: Checksum (Version 2.3)

Note For version 1.5, when not performing positioning, outputs last measured position data.

For version 2.3, when not performing positioning, outputs last measured position data, date, and time.

For version 2.3, when power is turned on, or master reset is performed, the initial time, date, and position settings are NULL.

■ GBS - GNSS satellite fault detection

Version 2.1, 2.3 only

\$GPGBS,hhmmss.ss,uxxx.x,uxxx.x,uxxx.x,xx,x.xxxxx,uxxxx.x,xxxx.x*hh<CR><LF>
1 2 3 4 5 6 7 8 9

1: UTC time of the GGA or GNS fix associated with this sentence

2: Expected error in latitude (m)

3: Expected error in longitude (m)

4: Expected error in altitude (m)

5: ID number (see Note 1) of most likely failed satellite

GPS: 1-32

SBAS satellites 120 to 138 are represented by 33 to 51.

33 to 64 are reserved for SBAS satellite use.

6: Probability of missed detection for most likely failed satellite
(0.00000 to 1.00000)

7: Estimate of bias on most likely failed satellite (m)

8: Standard deviation of bias estimate (m)

9: Checksum

■ DTM - Datum reference

Version 2.1, 2.3 only

\$GPDTM, ccc,,x.x,a,x.x,a,ux.x,ccc*hh<CR><LF>
1 2 3 4 5 6 7 8

- 1: Local datum
 - W84 = WGS84
 - W72 = WGS72
 - IHO = datum code (Version 2.1: JRC proprietary value)
 - IHO = datum code (Version 2.3: IHO datum code)
 - 2, 3: Lat offset, min, N/S (see Note)
 - 4, 5: Lon offset, min, E/W (see Note)
 - 6: Altitude offset, m (see Note)
 - 7: Reference datum, W84 = WGS84
 - 8: Checksum

Note Latitude and longitude offsets are positive numbers, the altitude offset may be negative. Offsets change with position: position in the local datum is offset from the position in the reference datum in the directions indicated:

Plocal datum = Pref datum + offset

■ GSA - GNSS DOP and active satellites

Version 2.1 only

Version 2.3 only

- | | | |
|---------|--|---------------|
| 1: | Mode | |
| | M = manual, forced to operate in 2D or 3D mode | |
| | A = automatic, allowed to automatically switch 2D/3D | |
| 2: | Positioning dimensions | |
| | 1 = fix not available | |
| | 2 = 2D | |
| | 3 = 3D | |
| 3 - 14: | ID numbers of satellites used in solution | |
| | (For less than 12 satellites, the field are "00".) | (Version 2.1) |
| 15: | PDOP (4 digit fixed length) | (Version 2.1) |
| 16: | HDOP (4 digit fixed length) | (Version 2.1) |
| 17: | VDOP (4 digit fixed length) | (Version 2.1) |
| 18: | Checksum | (Version 2.1) |
| 3 - 14: | ID numbers of satellites used in solution | |
| | (For less than 12 satellites, the fields are NULL.) | (Version 2.3) |
| | SBAS satellites 120 to 138 are represented by 33 to 51. | |
| | 33 to 64 are reserved for SBAS satellite use. | |
| | If there are 12 or more GPS satellites when positioning, even if there are SBAS satellites, the output gives priority to GPS. | |
| 15: | PDOP (4 digit fixed length) | (Version 2.3) |
| 16: | HDOP (4 digit fixed length) | (Version 2.3) |
| 17: | VDOP (4 digit fixed length) | (Version 2.3) |
| 18: | Checksum | (Version 2.3) |

■ GSV - GNSS satellites in view

Version 2.1, 2.3 only

\$GPGSV, x,x,xx,xx,xxx,xx,xx,xx,xxx,xx,xx,xxx,xx,xx,xxx,xx,xx,xxx,xx,xx,xxx,xx*hh<CR><LF>
1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20

| | | |
|----------|---|-----------------|
| 1: | Total number of GSV messages (1 - 3) | (Version 2.1) |
| 2: | GSV message number (1 - 3) | (Version 2.1) |
| 1: | Total number of GSV messages (1 - 4) | (Version 2.3) |
| 2: | GSV message number (1 - 4) | (Version 2.3) |
| 3: | Total number of satellites in view | |
| 4: | 1st Satellite ID number (01 - 32) SBAS satellites 120 to 138 are represented by 33 to 51. 33 to 64 are reserved for SBAS satellite use. | (Version 2.3) |
| 5: | 1st satellite Elevation, degrees, 90° maximum | (Version 2.3) |
| 6: | 1st satellite Azimuth, degrees true, 000 to 359 | |
| 7: | 1st satellite SNR (C/No) 00-99 dB-Hz, null when not tracking | |
| 8 - 11: | 2nd satellite information | (same as 4 - 7) |
| 12 - 15: | 3rd satellite information | (same as 4 - 7) |
| 16 - 19: | 4th satellite information | (same as 4 - 7) |
| 20: | Checksum | (IEC see Note2) |

Note1 Each GSV sentence includes 4 satellites, so the number of GSV sentences varys based on the number of satellites detected.

Note2 A variable number of “satellite ID-elevation-azimuth-SNR” sets are allowed up to a maximum of four sets per message. Null fields are not output when less than four sets are transmitted.

■ GNS - GNSS fix data

Version 2.3 only

\$GPGNS, hhmmss.ss,ddmm.mm,mmm,a,dddmm.mmm,mmm,a,x,xx,xx,xxxxx,xxxx,xx,xxxx*hh<CR><LF>

1 2 3 4 5 6 7 8 9 10 11 12 13

1: UTC of position (1/100 sec)
2, 3: Latitude (deg, min), N / S
4, 5: Longitude (deg, min), E / W
6: Mode indicator
 N = No fix. Satellite system not used in position fix, or fix not valid.
 A = Autonomous. Satellite system used in non-differential mode in position fix.
 D = Differential. Satellite system used in differential mode in position fix.
 S = Simulator mode.
7: Total number of satellites in use
8: HDOP (0 - 20)
9: Antenna altitude, m, mean-sea-level (geoid)
10: Geoidal separation, m
11: Age of differential data (NULL if not performing DGPS positioning)
12: Differential reference station ID (NULL if not performing DGPS positioning)
13: Checksum

Note When not performing position fixing, outputs last measured position data, and time. When power is turned on, or master reset is performed, the initial time, and position settings are NULL.

■ MSS - MSK beacon receiver signal status

Version 2.1

\$GPMSS, I I I ,SSS,FFF.F,BBB*hh<CR><LF>
1 2 3 4 5

Version 2.3

\$GPMSS, I I I ,SSS,FFF.F,BBB,x*hh<CR><LF>
1 2 3 4 5 6

- 1: Signal strength (SS), dB/1 μ V/m
- 2: Signal-to-noise ratio (SNR), dB
- 3: Beacon frequency, kHz
- 4: Beacon bit rate, bits/s
- 5: Checksum (Version 2.1)
- 5: Channel Number "1" or null (Version 2.3)
- 6: Checksum (Version 2.3)

■ GST - GNSS pseudorange noise statistics

Version 2.1, 2.3 only

\$GPGST,hhmmss.ss,xxxx.x,xxxx.x,xxxx.x,xxx,xxxx.x,xxxx.x,xxxx.x*hh<CR><LF>
1 2 3 4 5 6 7 8 9

- 1: UTC time of the GGA or GNS fix associated with this sentence
- 2: RMS value of the standard deviation of the range inputs to the navigation process. (m)
Range inputs include pseudoranges and DGPS corrections
- 3: Standard deviation of semi-major axis of error ellipse, (m)
- 4: Standard deviation of semi-minor axis of error ellipse, (m)
- 5: Orientation of semi-major axis of error ellipse, (degrees from true north)
- 6: Standard deviation of latitude error, (m)
- 7: Standard deviation of longitude error, (m)
- 8: Standard deviation of altitude error, (m)
- 9: Checksum

■ GLL - Geographic position – latitude/longitude

Version 1.5

\$GPGLL,ddmm.mm,a,dddmm.mm,a<CR><LF>
1 2 3 4

Version 2.1

\$GPGLL,ddmm.mmmm,a,dddmm.mmmm,a,hhmmss.ss,A*hh<CR><LF>
1 2 3 4 5 6 7

Version 2.3

\$GPGLL,ddmm.mmmm,a,dddmm.mmmm,a,hhmmss.ss,A,x*hh<CR><LF>
1 2 3 4 5 6 7 8

1, 2: Latitude (deg, min), N / S

3, 4: Longitude (deg, min), E / W

5: UTC of position (1/100 sec fixed at 00)

(Version 2.1)

5: UTC of position (1/100 sec)

(Version 2.3)

6: Status

A=data valid

V=data invalid

7: Checksum

(Version 2.1)

7: Mode indicator

A = Autonomous

D = Differential

N = Data not valid

S = Simulator

8: Checksum

(Version 2.3)

- Note For version 1.5, when not performing positioning, outputs last measured position data.
For version 2.3, when not performing positioning, outputs last measured position data, and time.
For version 2.3, when power is turned on, or master reset is performed, the initial time, and position settings are NULL.

■ PFEC, GPatt - ATTITUDE INFORMATION

Version 1.5

\$PFEC, GPatt,xxx.x,uxx.x,uxx.x<CR><LF>

1 2 3 4 5

Version 2.1~

\$PFEC, GPatt,xxx.x,uxx.x,uxx.x*hh<CR><LF>

1 2 3 4 5

- 1: Data format (att)
- 2: YAW 000.0~359.9 deg.
- 3: PITCH -90.0~90.0 deg. u:sign(+,-)
- 4: ROLL -90.0~90.0 deg. u:sign(+,-)
- 5: Checksum

■ PFEC, GPhve - HEAVING INFORMATION

Version 1.5

\$PFEC, GPhve,xxx.x,X<CR><LF>

1 2 3

Version 2.1~

\$PFEC, GPhve,xxx.x,X*hh<CR><LF>

1 2 3

- 1: Data format (att)
- 2: HVEAVING -99.999m~99.999m sign(+,-)
- 3: A(Data valid)/V(Data invalid)

■ ALR - Set Alarm State

Version 2.3 only

\$GPALR, hhmmss.ss, xxx, A, A, c--c *hh<CR><LF>

1 2 3 4 5

- 1: Time of alarm condition change, UTC
- 2: Local alarm number (identifier)
- 3: Alarm condition (A= threshold exceeded, V= not exceeded)
- 4: Alarm's acknowledge state, A= acknowledged, V= unacknowledged
- 5: Alarm's description text

[2] Input Data

[2-1] Data Sentences

NMEA0183 Input Sentences

| | | |
|-----|---|-------------------------|
| VBW | - | Dual ground/water speed |
| CUR | - | Water current layer |

DGPS correction data

RTCM SC-104 Version2.0

[2-2] Protocols

NMEA Protocol

| | |
|---------------------|--------------------------|
| Bit Rate: | 4800bps |
| Data Bits: | 8 bits |
| Parity: | None |
| Start Bit: | 1 bit |
| Stop Bit: | 1 bit |
| Receiving interval: | Auto (Automatic receive) |

[2-3] Data Formats

■ VBW - Dual ground/water speed

\$VDVBW , uxx.xx , uxx.xx , A , uxx.xx , uxx.xx , A , uxx.xx , A , uxx.xx , A * hh <CR><LF>
1 2 3 4 5 6 7 8 9 10 11

- 1: Longitudinal water speed (see Note), knots
- 2: Transverse water speed (see Note), knots
- 3: Status: water speed
 - A = data valid
 - V = data invalid
- 4: Longitudinal ground speed (see Note), knots
- 5: Transverse ground speed (see Note), knots
- 6: Status: ground speed
 - A = data valid
 - V = data invalid
- 7: Stern transverse water speed (see Note), knots
- 8: Status: stern water speed
 - A = data valid
 - V = data invalid
- 9: Stern transverse ground speed (see Note), knots
- 10: Status: stern ground speed
 - A = data valid
 - V = data invalid
- 11: Checksum

Note Transverse speed: "-" = port,
 "-" = astern.
Longitudinal speed:

■ CUR - Water current layer – Multi-layer water current data

\$VDCUR , A , x , x , x.x , x.x , T , x.x , x.x , x.x , T , B * hh <CR><LF>
1 2 3 4 5 6 7 8 9 10 11 12

- 1: Validity of the data
 - A = Valid
 - V = not valid
- 2: Data set number, 0 to 9
- 3: Layer number
- 4: Current depth in metres
- 5: Current direction in degrees
- 6: Direction reference in use, True/Relative T/R
- 7: Current speed in knots
- 8: Reference layer depth in metres
- 9: Heading in degrees
- 10: Heading reference in use, True/Magnetic T/M
- 11: Speed reference
 - B = Bottom track
 - W= Water track
 - P= Positioning system
- 12: Checksum

Appendix 3 Terminology

| Term | Meaning |
|---------------------|---|
| 2D (2 dimension) | Positioning with antenna elevation height in addition to satellite data. |
| 3D (3 dimension) | The three dimensional position fix, 4 or more satellites required. |
| AD-10 | Transmission method for handling bow heading data. |
| ARPA | Automatic Radar Plotting Aids, equipment for automatic collision avoidance. |
| ANCHOR WATCH | Function for monitoring a shift in position while the ship is at anchor. |
| Bow Heading | Angle between the ship's bow and meridian. |
| CCRP | Abbreviation of Consistent Common Reference Point. A common reference point for controlling a ship is defined so that all the measurements including the range, the bearing, the relative course, and the velocity to the target can be measured on the basis of CCRP. (Only CCRP settings are allowed in this device. Conversion of measured values to the CCRP reference point is not available.) |
| Checksum | An error detection method to check that the data has been correctly transmitted. |
| COG | Course Over Ground. |
| CURRENT | Sea and ocean currents, expressed in speed and direction. |
| DISP-DPU | The main circuitry of display unit. |
| DGPS | Abbreviation of Differential Global Positioning System. GPS satellite error data sent from a reference station whose position is accurately known is received via beacon from a beacon station, improving positioning accuracy. |
| DR | Abbreviation of Dead Reckoning. Reckoning of course and distance with the aid of Gyro and ship's speed. |
| FRAM | Nonvolatile memory using a ferroelectric substance. |
| Geodetic | Conditions for expressing position via latitude and longitude. |
| GPS Repecon | Device for synchro / step conversion of true bearing signal output by GPS compass. |
| GPS Satellite (GPS) | Abbreviation of Global Positioning System. Refers to satellites launched for navigational support of military vessels managed by the United States Department of Defense. |
| HDG | Abbreviation of Heading, indicating heading of ship's bow. |
| HDOP | Abbreviation of Horizontal Dilution of Precision. Indicates accuracy of positioning. The smaller the number, the higher the accuracy. If GPS satellites are unevenly distributed, this number will grow. If GPS satellites are evenly distributed, this number will be smaller. |

| | |
|-------------------------------|---|
| Heaving | The up and down of the ship |
| IEC60945 | IEC is the abbreviation of International Electrotechnical Commission. It is an international standard governing electrical and electronic technologies. |
| IPX | IPX is a standard of waterproofing, there are nine grades (0 - 8). (IPX4: splash-proof, IPX6: waterproof) |
| LCD Unit (LCD) | Liquid Crystal Display Unit. |
| Log Pulse | Contact output signal, output in 1 pulse per nm. Expressed in units of "p/nm". |
| mi/h | Unit of ship speed. |
| Multipath Wave | Waves received from multiple directions due to reflection or refraction of an initial wave by obstacles. |
| NMEA0183 (NMEA) | Abbreviation of National Marine Electrical Association 0183. International standard for naval equipment transmission established by the National Marine Electrical Association. |
| NSK | JRC radar supported format. |
| Pitch | Medial rotation |
| Positioning | Use of GPS or DGPS receiving functions to determine the current position of a ship. |
| RAIM Accuracy Standard (RAIM) | Abbreviation of Receiver Autonomous Integrity Monitoring. This system automatically detects failed satellites and deselects their positioning data from calculations. Including data from failed satellites will result in a decrease in positioning accuracy; the RAIM accuracy standard indicates the accuracy degradation base for removal of failed satellites from positioning calculations. |
| Ranging | Positioning with the use of SBAS satellite in addition to GPS satellite. |
| Rate of Turn | Same as ROT |
| Reception Level | GPS signal reception level. |
| Roll | Lateral rotation |
| ROT | Rate of Turn, the rate at which the ship turns, expressed by "deg/min". |
| RS232 | Serial data transmission standard. It is unbalanced, and hence can only be used for short distance transmission. |
| RS422 | Balanced serial transmission standard. |
| SBAS | Abbreviation of Satellite-based Augmentation System. It is a blanket term for wide scale GPS support systems using fixed position satellites which send GPS error correction data over a wide range. |

| | |
|--------------------|---|
| SBAS Search | SBAS reception mode (manual / automatic). |
| Smoothing | Function for averaging over a specified number of seconds. |
| SOG | Speed Over Ground, This is the ship's relative speed to the ground. |
| STW | Speed Through Water. |
| Type 0 Information | SBAS satellite test broadcast. |
| UTC | Abbreviation of Universal Time Coordinated. Successor to Greenwich Standard Time. |

Appendix 4 Memo

| MENU | | | SETTING | | | | | | | | | | | | | | | | | | | | | | | | | |
|---------|---------------------|------------|--|--|--|--|--|--|--|--|--|--|-----------------|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|
| DISPLAY | CONTRAST | | 1 2 3 4 5 6 7 8 9 10 11 12 13 | | | | | | | | | | | | | | | | | | | | | | | | | |
| | DIMMER | MAXIMUM | 1 2 3 4 5 6 7 8 9 10 | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | TYPICAL | 1 2 3 4 5 6 7 8 9 10 | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | MINIMUM | 1 2 3 4 5 6 7 8 9 10 | | | | | | | | | | | | | | | | | | | | | | | | | |
| | CLICK SOUND | | ON OFF | | | | | | | | | | | | | | | | | | | | | | | | | |
| | REVERSING MODE | | NORMAL REVERSE1 REVERSE2 | | | | | | | | | | | | | | | | | | | | | | | | | |
| HEADING | RESTORATION | | AUTO MANUAL | | | | | | | | | | | | | | | | | | | | | | | | | |
| | BACKUP | | 1 2 3 4 5 | | | | | | | | | | | | | | | | | | | | | | | | | |
| | INTERRUPT NMEA | | NULL LAST STOP | | | | | | | | | | | | | | | | | | | | | | | | | |
| | HEADING CHECK SUM | | ON OFF | | | | | | | | | | | | | | | | | | | | | | | | | |
| | HEADING OFFSET | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | OUTPUT RESOLUTION | | 0.1 0.01 | | | | | | | | | | | | | | | | | | | | | | | | | |
| | MAGNET | | ON OFF | | | | | | | | | | | | | | | | | | | | | | | | | |
| GPS | MODE | | AUTO 2D 3D | | | | | | | | | | | | | | | | | | | | | | | | | |
| | HDOP | | 4 10 20 | | | | | | | | | | | | | | | | | | | | | | | | | |
| | SMOOTHING | POSITION | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | SPEED | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | COURSE | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | RAIM ACCURACY LEVEL | | OFF 10 30 50 100 | | | | | | | | | | | | | | | | | | | | | | | | | |
| | INITIALIZATION | LATITUDE | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | LONGITUDE | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | ANT HEIGHT | | | | | | | | | | | | | | | | | | | | | | | | | | |
| SBAS | MODE | | AUTO GPS ALONE SBAS BEACON | | | | | | | | | | | | | | | | | | | | | | | | | |
| | SBAS SEARCH | | AUTO MANUAL | | | | | | | | | | | | | | | | | | | | | | | | | |
| | TYPE 0 INFORMATION | | ON OFF | | | | | | | | | | | | | | | | | | | | | | | | | |
| | RANGING | | ON OFF | | | | | | | | | | | | | | | | | | | | | | | | | |
| BEACON | STATION SELECT | | MANUAL AUTO | | | | | | | | | | | | | | | | | | | | | | | | | |
| | BIT RATE | | 50 100 200 | | | | | | | | | | | | | | | | | | | | | | | | | |
| | FREQUENCY | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | BEACON INFORMATION | | ON OFF | | | | | | | | | | | | | | | | | | | | | | | | | |
| SYSTEM | TIME DIFF | | | | | | | | | | | | (-13:00~+13:00) | | | | | | | | | | | | | | | |
| | DATE DISP | | DD-MM'YY 'YY-MM-DD MM-DD'YY | | | | | | | | | | | | | | | | | | | | | | | | | |
| | TIME DISP | | 12 24 | | | | | | | | | | | | | | | | | | | | | | | | | |
| | DATUM | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | SPEED UNIT | | kn km/h mi/h | | | | | | | | | | | | | | | | | | | | | | | | | |
| | ROT RANGE | | 30 60 90 120 150 180 210 240 270 300 600 900 1200 1500 1800 2100 2400 2700 | | | | | | | | | | | | | | | | | | | | | | | | | |
| | ROT SMOOTHING | | | | | | | | | | | | (0~99) | | | | | | | | | | | | | | | |
| | ROLL/PITCH RANGE | | 5 10 15 20 25 30 | | | | | | | | | | | | | | | | | | | | | | | | | |
| | ROLL OFFSET | | | | | | | | | | | | (-30~+30) | | | | | | | | | | | | | | | |
| | PITCH OFFSET | | | | | | | | | | | | (-30~+30) | | | | | | | | | | | | | | | |
| SYSTEM2 | HEAVING BAR RANGE | | 1 2 3 4 5 10 20 30 40 50 100 | | | | | | | | | | | | | | | | | | | | | | | | | |
| | HEAVING BAR DISP | | OFF DISP1 DISP2 DISP3 DISP4 | | | | | | | | | | | | | | | | | | | | | | | | | |
| | TREND GRAPH | | AVERAGE MAXIMUM | | | | | | | | | | | | | | | | | | | | | | | | | |
| | HVE POINT OFFSET X | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | HVE POINT OFFSET Y | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | HVE POINT OFFSET Z | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | GPS 5Hz DRAW | | ON OFF | | | | | | | | | | | | | | | | | | | | | | | | | |
| | SOG BAR RANGE | | 5 10 15 20 25 30 50 100 | | | | | | | | | | | | | | | | | | | | | | | | | |

| MENU | | | SETTING | | | | | |
|----------|-------------------|----------|----------------------|--------------|-----------|-------|-------|--------|
| DATA I/O | SENSOR THROUGH | NMEA | | | | | | |
| | | VER | Ver1.5 Ver2.1 Ver2.3 | | | | | |
| | | BIT RATE | 4800 | 9600 | 19200 | 38400 | 57600 | |
| | | INTERVAL | 20m | 25m | 50m | 100m | 200m | 500m 1 |
| | | SENTENCE | HDT : | THS : | ROT : | | | |
| | | | ZDA : | GGA : | VTG : | | | |
| | | | RMC : | GBS : | DTM : | | | |
| | | | GSA : | GSV : | GNS : | | | |
| | | | MSS : | GST : | GLL : | | | |
| | | | ATT | HVE | ALR | | | |
| | | | CD,GP,0 : | CD,GP,1 : | | | | |
| | | | CD,GP,2 : | CD,GP,3 : | | | | |
| | | | CD,GP,5 : | CD,GP,8 : | | | | |
| | | | CF,GP,0 : | CF,GP,2 : | | | | |
| | | | CD,GP,6 : | | | | | |
| | | NSK | | | | | | |
| | | AD-10 | 25 | 200 | | | | |
| | | IEC | | | | | | |
| | DATA OUT1 | NMEA | | | | | | |
| | | VER | Ver1.5 Ver2.1 Ver2.3 | | | | | |
| | | BIT RATE | 4800 | 9600 | 19200 | 38400 | 57600 | |
| | | SENTENCE | HDT : | THS : | ROT : | | | |
| | | | ZDA : | GGA : | VTG : | | | |
| | | | RMC : | GBS : | DTM : | | | |
| | | | GSA : | GSV : | GNS : | | | |
| | | | MSS : | GST : | GLL : | | | |
| | | | ATT | HVE | ALR | | | |
| | | | - | - | | | | |
| | | | - | CD,GP,3 : | | | | |
| | | | CD,GP,5 : | CD,GP,8 : | | | | |
| | | | CF,GP,0 : | CF,GP,2 : | | | | |
| | | | CCRP : | REMOTE : | | | | |
| | | NSK | | | | | | |
| | | AD-10 | 25 | 200 | | | | |
| | | IEC | | | | | | |
| | DATA OUT3 | NMEA | | | | | | |
| | | VER | Ver1.5 Ver2.1 Ver2.3 | | | | | |
| | | BIT RATE | 4800 | 9600 | 19200 | 38400 | 57600 | |
| | | SENTENCE | HDT : | THS : | ROT : | | | |
| | | | ZDA : | GGA : | VTG : | | | |
| | | | RMC : | GBS : | DTM : | | | |
| | | | GSA : | GSV : | GNS : | | | |
| | | | MSS : | GST : | GLL : | | | |
| | | | ATT : | HVE : | ALR : | | | |
| | | | - | - | | | | |
| | | | - | CD,GP,3 : | | | | |
| | | | CD,GP,5 : | CD,GP,8 : | | | | |
| | | | CF,GP,0 : | CF,GP,2 : | | | | |
| | | | CCRP : | REMOTE : | | | | |
| | | NSK | | | | | | |
| | | IEC | | | | | | |
| | DATA OUT4/IN4 | NMEA | NMEA/OFF | NMEA/CURRENT | NMEA/CCRP | | | |
| | | VER | Ver1.5 Ver2.1 Ver2.3 | | | | | |
| | | BIT RATE | 4800 | 9600 | 19200 | 38400 | 57600 | |
| | | SENTENCE | HDT : | THS : | ROT : | | | |
| | | | ZDA : | GGA : | VTG : | | | |
| | | | RMC : | GBS : | DTM : | | | |

| | | | | | |
|--------------|-----------|-----------|-------------|----------------|---------|
| | | | GSA : | GSV : | GNS : |
| | | | MSS : | GST : | GLL : |
| | | | ATT : | HVE : | ALR : |
| | | | - | - | |
| | | | - | CD,GP,3 : | |
| | | | CD,GP,5 : | CD,GP,8 : | |
| | | | CF,GP,0 : | CF,GP,2 : | |
| | | | CCRP : | REMOTE : | |
| | | | | | |
| | | NSK | NSK/OFF | | |
| | | BEACON | BEACON/OFF | BEACON/CURRENT | |
| | | | BEACON/CCRP | | |
| | | IEC | IEC/OFF | IEC/CURRENT | |
| | | | IEC/CCRP | | |
| | | 4341 | 4341/OFF | 4341/CURRENT | |
| | | | 4341/CCRP | | |
| | DATA OUT5 | NMEA | | | |
| | | VER | Ver1.5 | Ver2.1 | Ver2.3 |
| | | BIT RATE | 4800 | 9600 | 19200 |
| | | | 38400 | 57600 | |
| | | SENTENCE | HDT : | THS : | ROT : |
| | | | ZDA : | GGA : | VTG : |
| | | | RMC : | GBS : | DTM : |
| | | | GSA : | GSV : | GNS : |
| | | | MSS : | GST : | GLL : |
| | | | ATT : | HVE : | ALR : |
| | | | - | - | |
| | | | - | CD,GP,3 : | |
| | | | CD,GP,5 : | CD,GP,8 : | |
| | | | CF,GP,0 : | CF,GP,2 : | |
| | | | CCRP : | REMOTE : | |
| | | | | | |
| | | NSK | | | |
| | | IEC | | | |
| | | LOG PULSE | OFF | 200 | 400 |
| VERSION INFO | DISPLAY | | | | |
| | SENSOR | | | | |
| | GPS1 | | | | |
| | GPS2 | | | | |
| | GPS3 | | | | |
| OTHERS | CURRENT | LAYER | | | (1~999) |
| | | DATA NO. | | | (0~9) |


| MENU | | SETTING | | |
|------|--------|----------------|--|--|
| CCRP | SHIP | ENABLE DISABLE | | |
| | BEAM | | | |
| | LENGTH | | | |
| | SENSOR | ENABLE DISABLE | | |
| | SENSOR | No. | | |
| | X | | | |
| | Y | | | |
| | CCRP | ENABLE DISABLE | | |
| | X | | | |
| | Y | | | |

Appendix 5 Main Screen List

- List of screens assigned to **DISP**


Vertical direction: Can be switched by the **DISP** key

Horizontal direction: Can be switched by the **◀ ▶** key

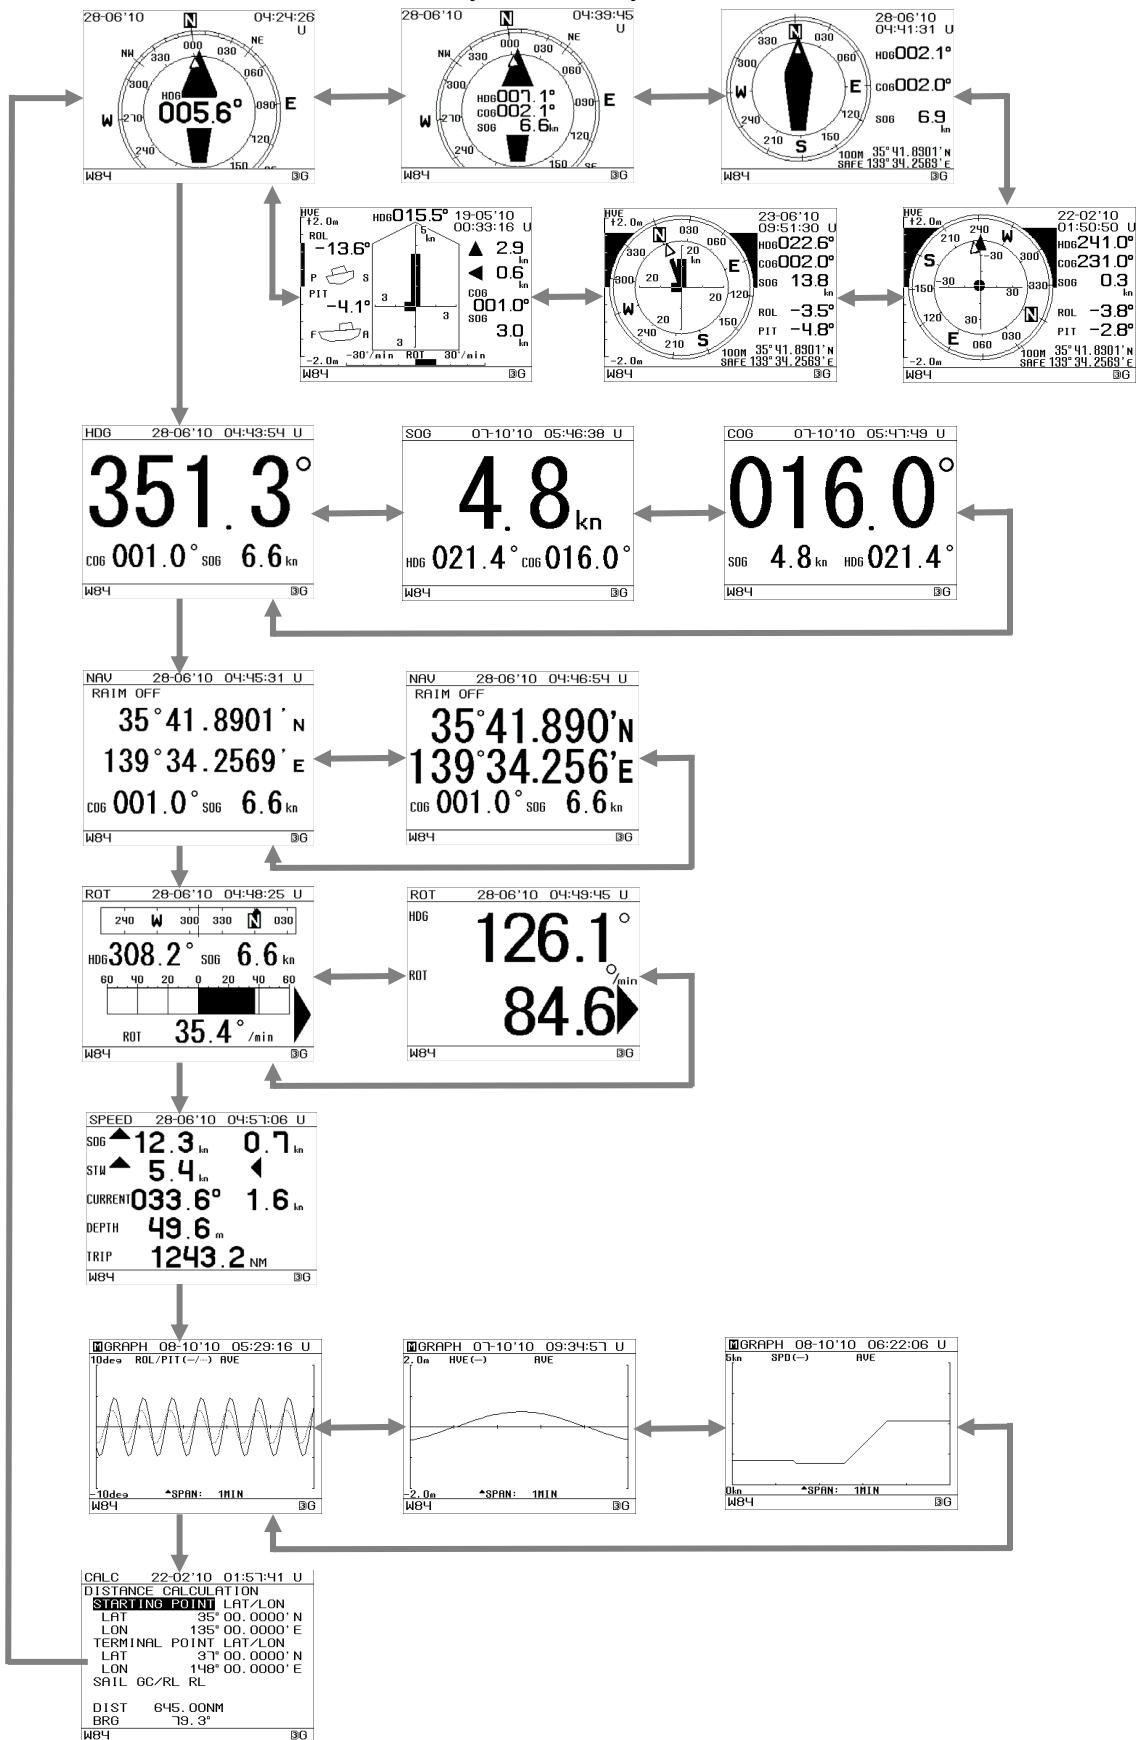

- List of screens assigned to 

Can be switched by the  key

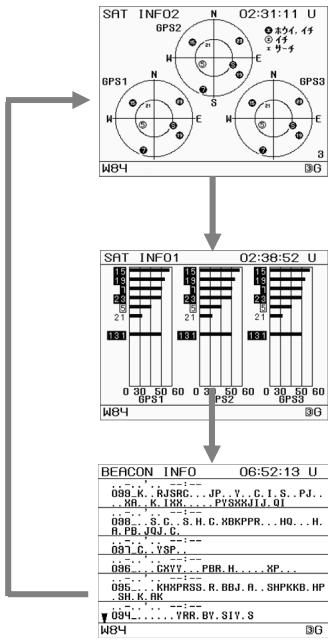

A beacon information screen is displayed only when the beacon Information Display is ON.

To display beacon information, connect an optional beacon receiver.



电子信息产品有害物资申明 日本无线株式会社

Declaration on toxic & hazardous substances or elements of Electronic Information Products Japan Radio Company Limited

有毒有害物质或元素的名称及含量

(Names & Content of toxic and hazardous substances or elements)

形式名(Type): JLR-21/31

名称(Name): GPS COMPASS

| 部件名称 (Part name) | 有毒有害物质或元素 (Toxic and Hazardous Substances and Elements) | | | | | |
|--|--|-----------|-----------|----------------------------|---------------|-----------------|
| | 铅 (Pb) | 汞 (Hg) | 镉 (Cd) | 六价铬 (Cr ⁶⁺) | 多溴联苯 (PBB) | 多溴二苯醚 (PBDE) |
| GPS指南针接收器 (Sensor Unit) | × | ○ | × | × | × | × |
| 显示装置(Display Unit) | × | ○ | × | × | × | × |
| 外部设备(Peripherals) ·选择(Options) ·电线类(Cables) ·手册(Documentts) | × | ○ | × | × | × | × |

○: 表示该有毒有害物质在该部件所有均质材料中的含量均在SJ/T11306-2006 标准规定的限量要求以下。
(Indicates that this toxic, or hazardous substance contained in all of the homogeneous materials for this part is below the requirement in SJ/T11363-2006.)

×: 表示该有毒有害物质至少在该部件的某一均质材料中的含量超出SJ/T11363-2006 标准规定的限量要求。
(Indicates that this toxic or hazardous substance contained in at least one of the homogeneous materials used for this part is above the limit requirement in SJ/T 11363-2006.)

RE: 中华人民共和国电子信息产品污染控制管理办法

Management Methods on Control of Pollution from Electronics Information Products of the People's Republic of China

アスベストは使用しておりません
Not use the asbestos

CODE No.7ZPNA4224

For further information, contact:



Japan Radio Co., Ltd.

Since 1915

URL <http://www.jrc.co.jp>

Marine Service Department

Telephone : +81-3-3492-1305

Facsimile : +81-3-3779-1420

e-mail : tmsc@jrc.co.jp

AMSTERDAM Branch

Telephone : +31-20-658-0750

Facsimile : +31-20-658-0755

e-mail : service@jrceurope.com

SEATTLE Branch

Telephone : +1-206-654-5644

Facsimile : +1-206-654-7030

e-mail : marineservice@jrcamerica.com

01ETM

ISO 9001, ISO 14001 Certified

©MAR. 2012 Edition 2 JRC

Printed in Japan